

[Manuals.plus](#) /

› [Fanttik](#) /

› Fanttik NB10 Flip Portable Pressure Washer Gun User Manual

## Fanttik NB10 Flip

# Fanttik NB10 Flip Portable Pressure Washer Gun

## User Manual

### INTRODUCTION

Thank you for choosing the Fanttik NB10 Flip Portable Pressure Washer Gun. This device is designed for versatile cleaning tasks, offering portability and ease of use across various scenarios. Please read this manual thoroughly before operation to ensure safe and efficient use of the product.

### WHAT'S IN THE BOX

The Fanttik NB10 Flip Portable Pressure Washer Gun comes with the following components:

- Fanttik NB10 Flip Pressure Washer Gun
- 5-in-1 Nozzle
- 19.69 ft Water Hose
- Shut-off Valve
- Filter Head
- Coke Bottle Adapter
- Foam Pot
- Type-C to C Cable
- User Manual
- Storage Bag

# WHAT'S IN THE BOX?

NB10 Flip



5 in 1 Nozzle



19.69 ft Water Hose




Shut-off Valve



Filter Head



Coke bottle adapter

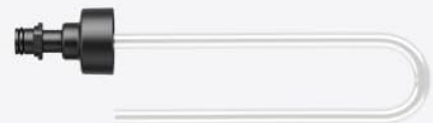

Foam Pot



Type-C to C Cable



User Manual



Storage Bag



Image: All components included in the Fanttik NB10 Flip package.

Your browser does not support the video tag.

Video: An unboxing demonstration of the Fanttik NB10 Flip, showing all included accessories and how they are packaged.

## PRODUCT OVERVIEW

The Fanttik NB10 Flip is a versatile and portable pressure washer designed for various cleaning tasks. Its key features include:

- **Foldable and Cordless Grip Design:** For easy portability and storage.
- **One-Touch Switching Among 3 Cleaning Modes:** ECO (100 PSI), REG (130 PSI), MAX (150 PSI) for diverse cleaning needs.
- **Multi-Scenario Adaptability:** Can draw water from cola bottles, faucets, buckets, and use a soap foam pot.
- **Cordless Design with Type-C Charging:** Powered by a 2500mAh lithium battery, offering 13-30 minutes of runtime.
- **5-in-1 Integrated Nozzle:** Easily adjust between 5 spray modes by rotating the nozzle.



Image: The Fanttik NB10 Flip showcasing its foldable and cordless design, making it easy to carry and store.

# HD LED DISPLAY

• Battery Indicator

■ Battery  $\leq 10\%$

• 3 Pressure Modes

• Power Button

ECO: **100** PSI

REG: **130** PSI

MAX: **150** PSI

Image: The HD LED display on the Fanttik NB10 Flip, indicating battery level and selected pressure mode (ECO, REG, MAX).

# 5 IN 1 NOZZLE

Easily Switch between Water Flow Modes



Image: The 5-in-1 integrated nozzle, demonstrating various spray patterns for different cleaning tasks.

## SETUP

### 1. Nozzle Installation and Removal

To install the 5-in-1 nozzle, align the yellow dot on the nozzle with the corresponding mark on the pressure washer. Press the nozzle inward with a slight force and rotate it 90 degrees clockwise until it locks into place. To remove, press the nozzle inward and rotate 90 degrees counter-clockwise, then pull it out.

# VALVE INSTALLATION & REMOVAL TIPS

## Installation



## Removal

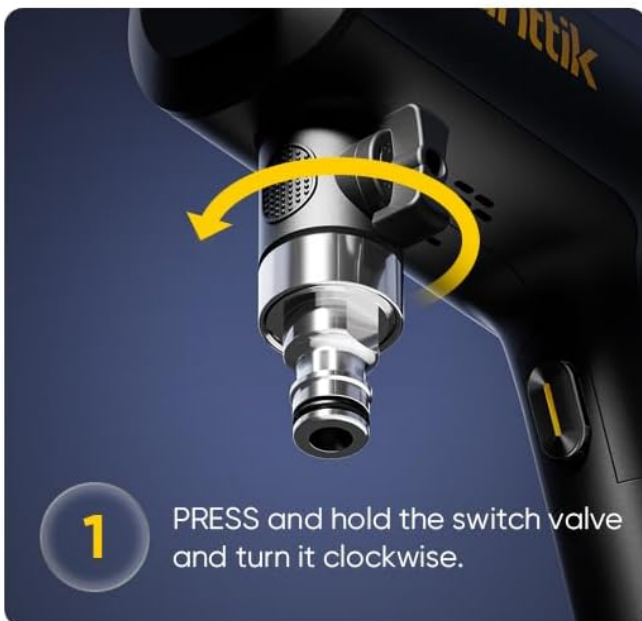


Image: Detailed steps for valve installation and removal, showing alignment and rotation.

Your browser does not support the video tag.

Video: A quick operation guide demonstrating the nozzle installation and removal process.

## 2. Water Source Connection

The Fanttik NB10 Flip offers multiple ways to connect to a water source:

- **From a Bucket:** Attach the filter head to the hose and place it into a bucket of water.
- **From a Faucet:** Use the provided adapter to connect the hose directly to an outdoor faucet.

- **From a Cola Bottle:** Attach the cola bottle adapter to the pressure washer and screw on a standard cola bottle filled with water.

# MULTI-SCENARIO COMPATIBILITY



Image: Visual guide to connecting the pressure washer to different water sources like a bucket, faucet, or cola bottle.

# INSTRUCTIONS FOR CONNECTING WATER PIPES



Image: Step-by-step instructions for connecting the water pipe, highlighting a component that should not be detached.

Your browser does not support the video tag.

Video: Demonstration of how to use the Fanttik NB10 Flip, including connecting to various water sources.

Your browser does not support the video tag.

Video: Instructions on how to correctly remove accessories before installing the water pipe.

### 3. Foam Pot Installation

To use the foam pot, attach it to the pressure washer by aligning and pressing it inward, then rotating 90 degrees until it locks. Fill the foam pot with appropriate cleaning solution before use.

Your browser does not support the video tag.

Video: A quick operation guide demonstrating the foam pot installation process.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

Press and hold the power button on the HD LED display to turn the device on or off. The display will show the battery level and current pressure mode.

### 2. Changing Pressure Modes

Once powered on, short press the power button to cycle through the three pressure modes: ECO (100 PSI), REG (130 PSI), and MAX (150 PSI). Select the appropriate mode for your cleaning task.

### 3. Using Nozzle Modes

Rotate the 5-in-1 integrated nozzle to select the desired spray pattern. Options typically include a concentrated stream, fan spray, and gentle rinse, suitable for various applications from stubborn dirt to delicate plants.

### 4. Cleaning Tips

- For spot car washing, use the foam pot with appropriate car wash soap.
- When cleaning windows, use a wider spray pattern to avoid streaks.
- For delicate items or plants, select the lowest pressure (ECO mode) and a gentle spray.
- Always ensure a stable water supply to prevent damage to the pump.

Your browser does not support the video tag.">

Video: A comprehensive guide on how to operate the Fanttik NB10 Flip, including power modes and nozzle adjustments.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Fanttik NB10 Flip Pressure Washer Gun:

- **Cleaning:** After each use, rinse the nozzle and hose thoroughly with clean water to remove any detergent residue or debris.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) for long-term storage.
- **Battery Care:** Recharge the battery using the provided Type-C cable. Avoid fully discharging the battery frequently to prolong its lifespan.
- **Filter Head:** Periodically check and clean the filter head to prevent blockages and maintain efficient water flow.

# TYPE-C TO C CHARGING



Image: The Type-C charging port and cable, illustrating the charging process and battery specifications.

## TROUBLESHOOTING

If you encounter issues with your Fanttik NB10 Flip, refer to the following common troubleshooting steps:

- **No Water Flow:** Check if the water source is properly connected and turned on. Ensure the filter head is clean and not blocked. Verify the hose is not kinked.
- **Low Pressure:** Confirm the battery is sufficiently charged. Ensure the correct pressure mode is selected (e.g., MAX mode for highest pressure). Check for any blockages in the nozzle or hose.

- **Device Not Turning On:** Ensure the battery is charged. Press and hold the power button for a few seconds.
- **Water Leakage:** Check all connections for tightness. Ensure O-rings and seals are properly seated and not damaged.

For persistent issues, please contact Fanttik customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Fanttik
Model Number	NB10 Flip
Power Source	Battery Powered
Color	Black
Item Weight	3.1 Pounds
Hose Length	236 Inches
Product Dimensions (L x W x H)	7.6"L x 7.5"W x 2.7"H
UPC	850077828522

## WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Fanttik website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims. Visit the official Fanttik Store: [Fanttik Store on Amazon](#)