

[Manuals.plus](#) /

› [AceGamer](#) /

› AceGamer Wireless Pocket Controller User Manual

## AceGamer Wireless Pocket Controller

# AceGamer Wireless Pocket Controller User Manual

Model: Wireless Pocket Controller

Brand: AceGamer

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your AceGamer Wireless Pocket Controller. Designed for multi-platform compatibility, this controller offers a compact and portable gaming experience across various devices.

## WHAT'S IN THE BOX

---

- 1x AceGamer Wireless Pocket Controller
- 1x Charging Cable
- 1x User Manual

## PRODUCT FEATURES

---

### Pocket-Sized Design with Lift-and-Lock Joysticks

The controller features an ultra-compact design (4.7" x 2.6" x 1.2") and is lightweight (3.3 oz), making it highly portable. The innovative lift-and-lock joystick mechanism allows you to retract the joysticks for protection during travel and extend them for immediate use.

# Pocke-Sized Controller


The compact build and recessed joysticks protect your gear on the go. Slip it in, pull it out, and play.



Image: The AceGamer Wireless Pocket Controller demonstrating its compact size and dimensions, easily fitting into a pocket. Dimensions are shown as 4.7 inches by 2.6 inches by 1.2 inches, with a weight of 0.2 lbs.

## Precision Lift-and-Lock Joysticks

Flick the rear latch to retract the joystick

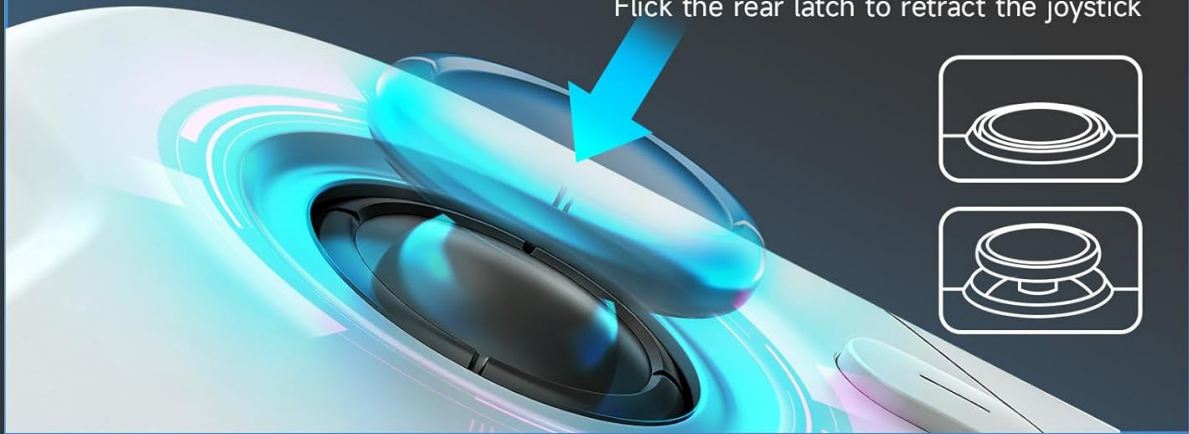

## Clicky Micro-switch Triggers

Comes with 0.3mm Lightning Fast Actuation



Image: A detailed view of the controller's precision lift-and-lock joysticks, illustrating how to flick a rear latch to retract them for storage.

### Wide Compatibility

This wireless controller is compatible with a broad range of devices, including Nintendo Switch, Switch 2, Switch Lite, Switch OLED, PC, iOS, Android, Steam Deck, tablets, and phones. It supports instant switching between X-Input (for PC/Windows) and Nintendo Switch modes. Additionally, it features one-button wake-up functionality for Switch and Switch 2 consoles.





Image: The controller highlighting its compatibility with Nintendo Switch, PC/Laptop (Windows), iOS (13.0 and above), Steam OS, Android TV/Box, and Android (8.0 and above). It also shows the ABXY key interchange feature.

### Precision Controls and Responsiveness

Experience precise control with 360° refined analog sticks that are free of dead zones. The built-in 6-axis gyroscope provides accurate motion sensing. Optimized buttons and triggers, combined with a 1000Hz polling rate, ensure instant response for an enhanced gaming experience.

# A/B X/Y Interchangeable

In X-input Mode



Wired



Bluetooth



Switch/Switch 2/Switch Lite/Switch OLED



PC/Laptop  
(windows)



Steam OS



iOS  
iOS 13.0 and above



Android  
TV/Box



Android  
8.0 and above

**NOTE: Not for PS5 / Xbox series.**

Image: The AceGamer controller illustrating its 6-axis gyroscope feature, enabling precise movements and seamless integration into virtual environments, depicted with a racing game.

## SETUP

### Charging the Controller

Before initial use, fully charge the controller using the provided charging cable. Connect the USB-C end of the cable to the controller and the USB-A end to a power source (e.g., computer USB port, USB wall adapter).

### Initial Pairing (Bluetooth)

1. Ensure the controller is powered off.
2. Press and hold the pairing button (usually located on the top or back of the controller) until the indicator lights begin to flash rapidly.
3. On your device (Switch, PC, phone), navigate to the Bluetooth settings.
4. Select the AceGamer controller from the list of available devices to pair.
5. Once paired, the indicator lights on the controller will become solid.

## OPERATING INSTRUCTIONS

---

### Power On/Off

- **Power On:** Press the Home button (or designated power button) to turn on the controller.
- **Power Off:** Press and hold the Home button for a few seconds, or if idle for an extended period, the controller will automatically power off.

### Connecting to Devices

- **Nintendo Switch/Switch 2:** After initial pairing, press the Home button to wake up the console and automatically reconnect the controller.
- **PC (Windows):** Ensure the controller is in X-Input mode. Connect via Bluetooth or USB cable.
- **iOS/Android:** Ensure the controller is in the appropriate mode for mobile devices. Connect via Bluetooth through your device's settings.

## MODE SWITCHING

---


The controller supports one-key switching between X-Input mode (for PC/Windows) and Nintendo Switch mode. Refer to the indicator lights or on-screen prompts for the current mode.



Image: The AceGamer controller illustrating the one-key switch for changing between X-Input (X) and NS-Switch (S) modes, with a physical switch on the back.

### One-Button Wake-up (N-S Mode)

In Nintendo Switch mode, you can wake up and reconnect your console by pressing the designated Home button on the controller.

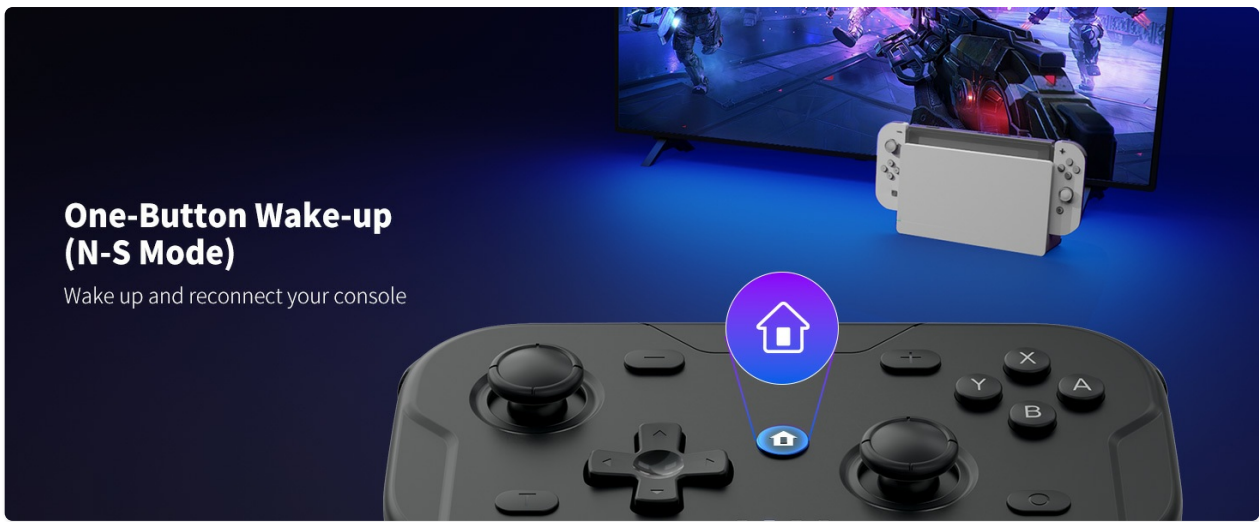

## One-Button Wake-up (N-S Mode)

Wake up and reconnect your console

Image: The AceGamer controller with a glowing Home button, indicating its one-button wake-up functionality for Nintendo Switch consoles.

## TURBO FUNCTION

---

The Turbo function allows for rapid, repeated input of a button. To assign Turbo to a button, hold the **Turbo** key and then press your desired action button (A, B, X, Y, LB, RB, LT, RT).

You can adjust the firing speed on the fly: hold the **Turbo** key and move the right analog stick up or down to cycle through 5Hz, 12Hz (default), or 20Hz speeds. Note that Turbo settings may not be saved after the controller is powered off.



# DIY Your Own Game Controller



Image: The AceGamer controller highlighting the one-tap wake-up button and the 3-speed Turbo Rapid Fire function, with speeds of 5, 12 (default), and 20 shots/s.

## VIBRATION ADJUSTMENT

The controller features dual motor vibration for immersive force feedback. You can adjust the vibration intensity to four levels: 0%, 30%, 70% (default), and 100%. Note that vibration cannot be turned off completely in some modes, and mobile games may not support vibration.



## One-Tap Wake-up Switch 2/Switch



5shots/s-12shots/s(Default)-20shots/s

### 3-Speed Turbo

React faster, strike first, and win

Image: The AceGamer controller illustrating the four levels of vibration adjustment: 0%, 30%, 70% (default), and 100%, with visual representation of dual motor feedback.

## ABXY KEY INTERCHANGE

The ABXY button layout can be interchanged to match either PC game layouts or Nintendo Switch game layouts, providing flexibility for different gaming preferences. This feature is typically available in X-Input Mode. Note that these settings may not be saved after the controller is powered off.



Image: The AceGamer controller demonstrating the ABXY key value interchange feature, allowing users to switch between different button layouts.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Utilize the lift-and-lock joystick feature to protect the analog sticks when not in use or during transport.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Controller does not power on.	Low battery.	Charge the controller for at least 30 minutes.
Unable to pair via Bluetooth.	Controller not in pairing mode; device Bluetooth off; interference.	Ensure controller is in pairing mode (flashing lights). Check device Bluetooth. Move closer to the device. Restart both controller and device.
Buttons or joysticks are unresponsive.	Connection issue; software glitch.	Reconnect the controller. Restart the controller. Update device drivers if on PC.
Vibration not working.	Vibration intensity set to 0%; game does not support vibration; mobile device limitation.	Adjust vibration intensity. Check game settings. Note that mobile games may not support vibration.

## SPECIFICATIONS

---

- **Brand Name:** AceGamer
- **Model:** Wireless Pocket Controller
- **Compatible Devices:** Android, iOS, Nintendo Switch, PC
- **Controller Type:** Gamepad
- **Additional Features:** Motion Sensing (6-axis gyro), Multiuse, Rumble (Dual Vibration), Wireless (Bluetooth)
- **Hardware Platform:** Gaming Console, Smartphone, Steam Deck
- **Polling Rate:** 1000Hz
- **Color:** White

## WARRANTY AND SUPPORT

---

AceGamer provides warranty service for this product. If you encounter any questions or problems with your Wireless Pocket Controller, please contact our customer support for assistance. We are committed to providing reliable support to ensure your gaming confidence.

For support, please visit the official AceGamer store or contact us through the platform where you purchased the product.

*Please retain your proof of purchase for warranty claims.*