

[Manuals.plus](#) /

› [OFNEX](#) /

› OFNEX X19 Wireless Sports Headphones User Manual

OFNEX X19

OFNEX X19 Wireless Sports Headphones User Manual

Model: X19

1. INTRODUCTION

Welcome to the OFNEX X19 Wireless Sports Headphones user manual. These headphones are designed for active lifestyles, offering secure earhooks, long battery life, and high-quality audio. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Please check the package for the following items:

- OFNEX X19 Wireless Sports Headphones (Left and Right Earbuds)
- Charging Case
- USB-C Charging Cable
- Multiple Sizes of Eartips (XS, S, M, L)
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your OFNEX X19 headphones and charging case.

IPX7

Water Resistance



Image: The OFNEX X19 charging case open, showing the left and right earbuds. The case features a dual LED digital display indicating the charging case capacity and individual earbud power levels. A 'One-key Reset' button is also visible inside the case.



Image: Close-up view of the OFNEX X19 earbuds, highlighting the physical buttons for dual audio control. The left earbud shows controls for skipping tracks (1x press) and volume adjustment (hold). The right earbud shows controls for play/pause (1x press), call management (2x press), and voice assistant activation (hold).

4. SETUP

4.1 Charging the Headphones

Before first use, fully charge the headphones and charging case.

- **Charging Case:** Connect the USB-C charging cable to the charging port on the case and a power source. The LED display on the case will show the battery percentage. Alternatively, place the case on a wireless charging pad.
- **Earbuds:** Place the earbuds into the charging case. They will automatically begin charging. The LED display on the case will show the charging status of each earbud.

A full charge provides approximately 9 hours of playback for the earbuds, with the charging case extending total playtime to up to 90 hours.

Upgraded Bluetooth 5.3

Stable transmission with effective anti-interference.



Image: The OFNEX X19 charging case being charged wirelessly on a charging pad, with an icon indicating wireless charging. Another icon indicates USB-C charging, showing both charging methods are supported. The image also highlights the remaining power of the case and the charging status of the earbuds via the LED display.

4.2 Bluetooth Pairing

Follow these steps to pair your OFNEX X19 headphones with your device:

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices and select "OFNEX X19" from the list.
5. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

The OFNEX X19 uses Bluetooth 5.3 for stable and efficient connection.



Image: The OFNEX X19 charging case and an earbud are shown alongside various smart devices (phone, laptop, smartwatch) displaying Bluetooth settings. This illustrates the one-step pairing process and wide compatibility of the headphones with different devices.

4.3 Fitting the Earbuds

For optimal sound quality and comfort, choose the correct eartip size and ensure a secure fit.

1. Select the eartips (XS, S, M, L) that best fit your ear canals. A good seal is crucial for bass response and noise

isolation.

2. Place the earbud into your ear, then gently rotate the earhook over the top of your ear until it sits comfortably and securely.



Image: A person wearing an OFNEX X19 earbud with a secure earhook, demonstrating a comfortable fit for movement. The image also displays the four available sizes of comfort eartips (L, M, S, XS) to ensure a personalized fit.

5. OPERATING INSTRUCTIONS

The OFNEX X19 headphones feature intuitive controls for managing audio and calls.

5.1 Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

5.2 Music Control

Use the physical buttons on the earbuds to control music playback:

- **Play/Pause:** Press the button on either earbud once.
- **Next Track:** Press the button on the right earbud twice.
- **Previous Track:** Press the button on the left earbud twice.
- **Volume Up:** Hold the button on the right earbud.
- **Volume Down:** Hold the button on the left earbud.

5.3 Call Management

- **Answer/End Call:** Press the button on either earbud once.
- **Reject Call:** Press and hold the button on either earbud for 2 seconds.

5.4 Voice Assistant

Activate your device's voice assistant (Siri, Google Assistant) by pressing the button on either earbud three times.

Dual Audio Control

Each earbud has full volume and track controls, so you can adjust your music via one earbud.



Image: A person interacting with an OFNEX X19 earbud, with text indicating "Hey Siri" for voice-activated assistance, alongside icons for Siri, Google Assistant, and another voice assistant. The image also reiterates the dual audio control functions, showing button presses for track control, volume, play/pause, call management, and voice assistant activation.

5.5 Single and Dual Earbud Mode

The OFNEX X19 headphones support both single and dual earbud use. You can use either earbud independently or both together for a stereo experience. Simply remove one earbud from the case to use it in mono mode, or both for stereo.

6. MAINTENANCE

Proper care ensures the longevity and performance of your OFNEX X19 headphones.

6.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Avoid using abrasive materials, solvents, or harsh chemicals.

6.2 Water Resistance

The OFNEX X19 headphones are rated IPX7 water-resistant, meaning they can withstand immersion in up to 1 meter of water for 30 minutes. This makes them suitable for workouts and light rain, but they are not recommended for swimming or prolonged water exposure.

High-resolution audio for calls

Enjoy seamless, clear calls with effective anti-interference technology.



Image: An OFNEX X19 earbud with water droplets on it, illustrating its IPX7 water resistance. The text "IPX7 Water Resistance" is prominently displayed.

6.3 Storage

When not in use, store the headphones in their charging case to protect them from dust and damage.

7. TROUBLESHOOTING

If you encounter issues with your OFNEX X19 headphones, try the following solutions:

- **Cannot Pair:** Ensure Bluetooth is enabled on your device and the earbuds are in pairing mode. Try turning Bluetooth off and on again on your device.
- **No Sound:** Check the volume level on both your device and the earbuds. Ensure the earbuds are properly connected to your device.
- **Charging Issues:** Verify the USB-C cable is securely connected and the power source is working. For wireless charging, ensure the case is correctly placed on the charging pad.
- **Intermittent Connection:** Move closer to your device to reduce interference. Ensure there are no obstacles between the earbuds and your device.

7.1 One-Key Reset

If you experience persistent issues, perform a factory reset:

1. Place both earbuds back into the charging case.
2. Locate the reset button inside the charging case (refer to Product Overview image).
3. Press and hold the reset button for approximately 10 seconds until the LED indicators on the earbuds flash, indicating a successful reset.
4. Remove the earbuds and re-pair them with your device.

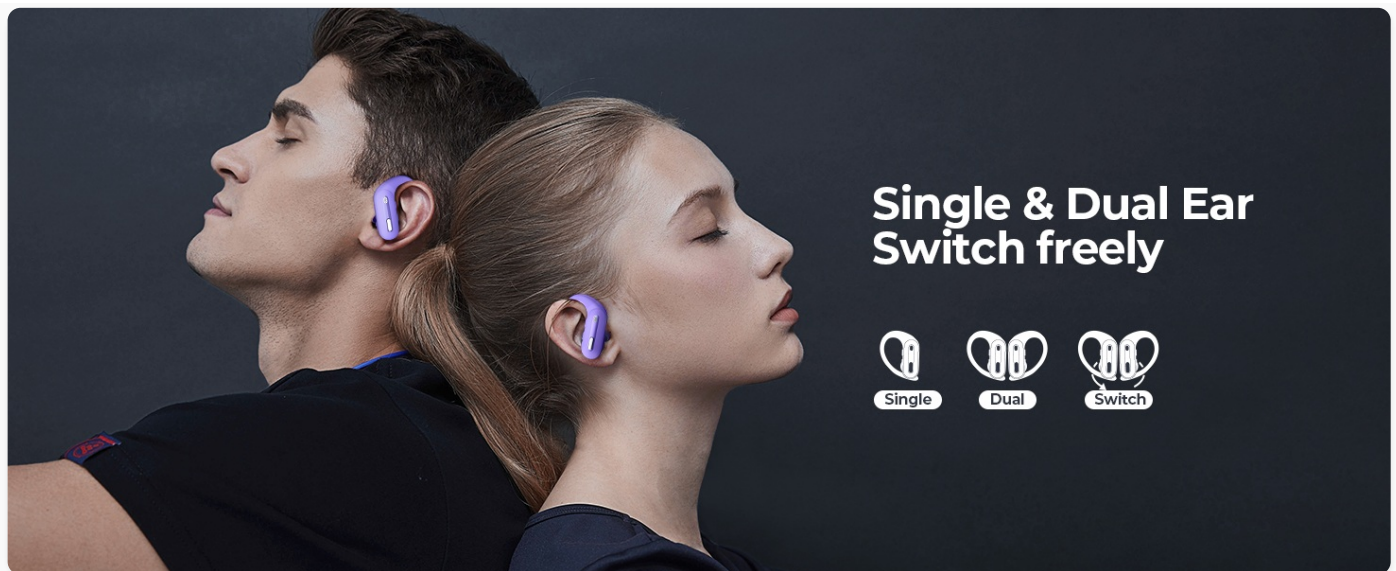


Image: The OFNEX X19 charging case open, with an arrow pointing to the 'Reset Button' located inside the case. This illustrates the position of the one-key reset button for easy and convenient operation.

8. SPECIFICATIONS

Feature	Specification
Model Number	X19
Brand	OFNEX
Bluetooth Version	5.3
Bluetooth Range	10.06 Meters
Battery Life (Earbuds)	Up to 9 Hours
Total Playtime (with Case)	Up to 90 Hours
Charging Time	Approximately 2 Hours
Audio Driver Type	Dynamic Driver
Noise Control Features	Active Noise Cancelling
Water Resistance Rating	IPX7
Earpiece Shape	In-ear with Earhooks
Item Weight	5.3 ounces
Package Dimensions	4.29 x 3.74 x 1.54 inches

9. WARRANTY AND SUPPORT

OFNEX products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official OFNEX website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G7WFRWVV>

More documents and user manuals: <https://manuals.plus/>