

WHATOOK W02 Pro

WHATOOK W02 Pro Cordless Compressed Air Duster User Manual

Model: W02 Pro

INTRODUCTION

Thank you for choosing the WHATOOK W02 Pro Cordless Compressed Air Duster. This device is designed for efficient and powerful dust removal from various surfaces and electronics. Its high-performance motor, adjustable speed settings, and portable design make it suitable for a wide range of cleaning tasks at home, in the office, or outdoors. Please read this manual carefully before use to ensure proper operation and maintenance.

SAFETY INFORMATION

- **Heat Generation:** The high-power motor generates heat during operation. If the device becomes too hot, turn it off and allow it to cool down before continuing use.
- **Charging:** Do not use the device while it is charging. Ensure the device is fully charged before its first use.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Children and Pets:** Keep the device out of reach of children and pets.
- **Water Exposure:** Do not expose the device to water or use it in wet conditions.

PACKAGE CONTENTS

Verify that all items are present in the package:

- WHATOOK W02 Pro Air Duster
- 4 x Nozzles (Round, Flat, Long, Inflation)
- USB-C Charging Cable
- Storage Bag
- User Manual



Image: The WHATOOK W02 Pro air duster and its accessories, including various nozzles, charging cable, and storage bag.

SETUP

1. **Initial Charge:** Before first use, fully charge the device using the provided USB-C cable and an 18W power adapter (not included). A full charge takes approximately 2.5 hours.
2. **Attach Nozzle:** Select the appropriate nozzle for your cleaning task. Align the tabs on the nozzle with the slots on the duster's outlet and twist to secure it in place.

Portable Design

Designed for comfortable one-hand use



Image: The WHATOOK W02 Pro with its interchangeable nozzles and compact dimensions.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the power button for 3 seconds to turn the device on or off.

Adjusting Airflow Speed

The W02 Pro features a precise 1 to 100 level adjustable airflow. Once powered on, press and hold the button for 3 seconds to activate continuous speed adjustment. Release the button at your desired speed. The triangular LED light indicates the current power level, becoming brighter with increasing power.

100-Level Precision Airflow

hold the button for 3 seconds to activate
0-100% airflow adjustment



Image: The device displaying its 100-level precision airflow adjustment and visual power indicator.

Applications

- **PC & Electronics:** Use the long or flat nozzle for precise dust removal from computer components, keyboards, and other sensitive electronics.

- **Car Cleaning:** The various nozzles are effective for cleaning car interiors, vents, and hard-to-reach areas.
- **Outdoor Use:** Ideal for blowing leaves, cleaning outdoor equipment, or inflating small items with the inflation nozzle.
- **Household Cleaning:** Suitable for dusting furniture, air filters, and other household items.

Souffle puissant pour un dépoussiérage rapide et efficace



Image: Examples of the air duster in use for various cleaning tasks.



Image: Cleaning dust from a PC tower.



Image: Dusting a keyboard with the air duster.

CHARGING AND BATTERY

The WHATOOK W02 Pro is equipped with a high-quality 12000mAh battery, providing extended usage times. It supports 18W USB-C fast charging.

- **Battery Capacity:** 12000mAh (6000mAh x 2)
- **Charging Time:** Approximately 2.5 hours for a full charge with an 18W USB-C adapter.
- **Run Time:** Up to 260 minutes on the lowest setting. Actual run time varies based on speed setting.

18W USB-C Fast Charge

2.5H Full Recharge



Adapter Charger



Power Bank



Computer Charger



Car Charger

Image: Charging the device using the USB-C port.

Max 260min Use Time



*Please fully charge before use

Image: Battery life indications for different power settings.

MAINTENANCE

- **Cleaning the Device:** Wipe the exterior of the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Nozzle Care:** Clean nozzles as needed to prevent blockages. Ensure they are dry before reattaching.
- **Storage:** When not in use, store the device and its accessories in the provided storage bag to protect them from dust and

damage.

TROUBLESHOOTING

- **Device Overheating:** If the device becomes excessively hot during use, turn it off immediately and allow it to cool down completely before resuming operation. This is a safety feature due to the powerful motor.
- **Low Airflow:** Check if the battery is sufficiently charged. Ensure the nozzle is correctly attached and not obstructed.
- **Device Not Turning On:** Ensure the battery is charged. Press and hold the power button for 3 seconds to activate.

SPECIFICATIONS

Feature	Specification
Model Name	W02 Pro
Brand	WHATOOK
Motor Speed	Up to 400,000 RPM
Max Wind Speed	100 m/s (360 km/h)
Airflow Adjustment	1-100 Levels
Battery Capacity	12000mAh (6000mAh x 2)
Charging Type	USB-C 18W Fast Charge
Full Charge Time	Approx. 2.5 hours
Run Time	Up to 260 minutes (lowest setting)
Weight	380 Grams
Special Features	High Power, Portable, Rechargeable, Cordless

WARRANTY AND SUPPORT

The WHATOOK W02 Pro comes with a **2-year manufacturer's warranty**. For any questions, technical assistance, or warranty claims, please contact WHATOOK customer support. French language support is available for your convenience.

Que contient la boîte?

Batterie

6000mAh x 2

Autonomie

20 à 260 min

Temps de charge

2,5 heures (Ne pas utiliser pendant la recharge)



Image: Customer service, return policy, and warranty information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question