



Manuals.plus /

› Uvital /

› Uvital Corded Phone F-Phone with Caller ID User Manual

Uvital F-Phone

Uvital Corded Phone F-Phone with Caller ID User Manual

Model: F-Phone with Caller ID

INTRODUCTION

Thank you for choosing the Uvital Corded Phone F-Phone with Caller ID. This manual provides detailed instructions for setting up, operating, and maintaining your new telephone. Please read this manual thoroughly before use to ensure proper functionality and to maximize your experience.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Telephone Base
- Handset
- Handset Cord (Coiled Cord)
- Phone Line Cord
- User Manual




Image: All components included in the Uvital Corded Phone package.

SETUP INSTRUCTIONS

Follow these steps to set up your Uvital Corded Phone:

1. **Connect the Handset:** Plug one end of the coiled handset cord into the left side of the telephone base. Plug the other end into the handset.
2. **Connect the Phone Line:** Plug one end of the phone line cord into the "TEL-LINE" jack on the side of the phone base. Plug the other end into your telephone wall socket.

EASY TO INSTALL

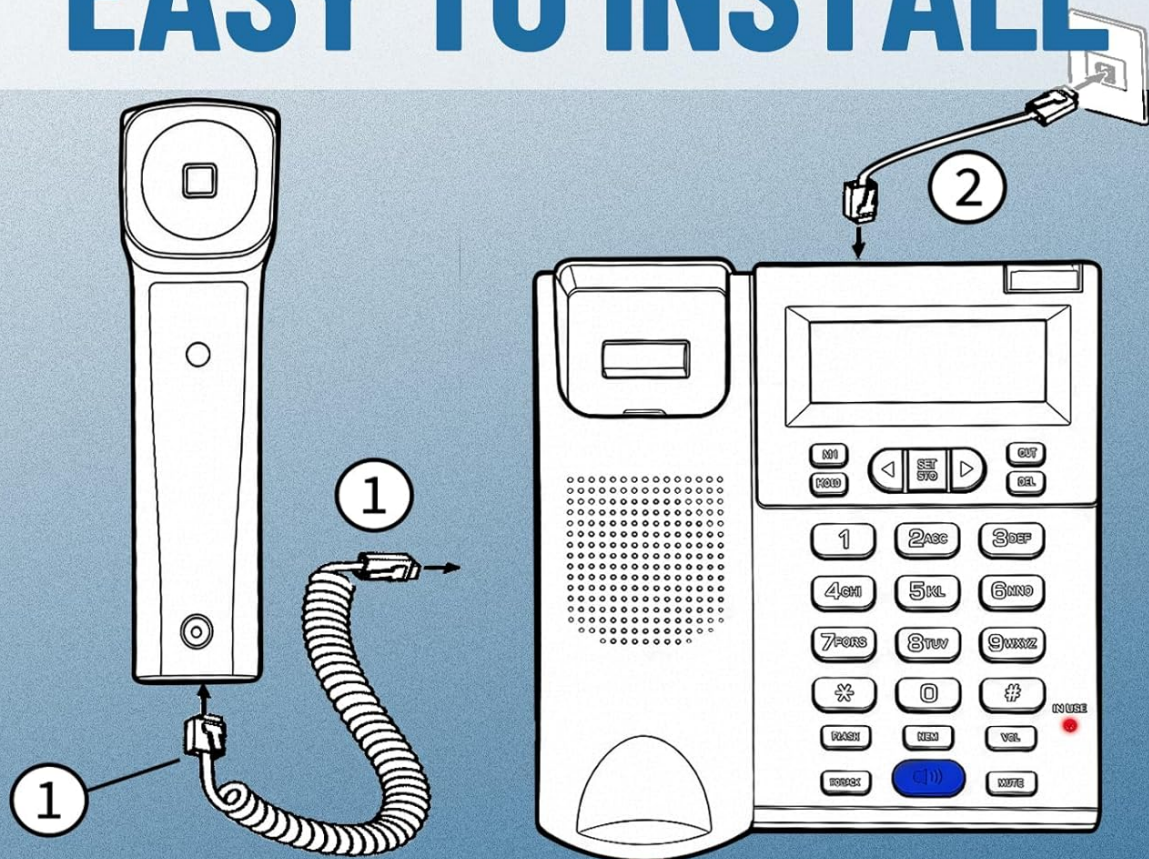

1 Handset Cord (Coil Cord)

Plug one end into the left side of the base unit, then plug the other end into the handset.

2 Telephone Line

Plug one end into the "TEL-LINE" jack on the side of the phone base, then plug the other end into the telephone wall socket.



Image: Step-by-step guide for connecting the handset and telephone line.

Adjustable Volume and Ports

The phone features various ports and controls on its side for easy access:

- **Ringer Switch:** Adjust the ringer volume to High, Low, or Off.
- **Phone Line Jack:** Connects to your telephone wall socket.
- **Handset Cord Jack:** Connects to the handset.

ADJUSTABLE VOLUME

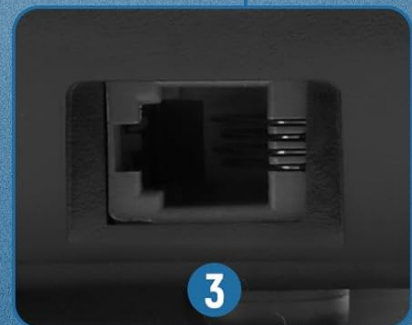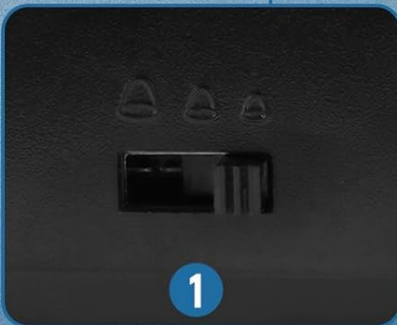

1 (High/Low/Off) Ringer

2 Phone Line Jack

3 Handset Cord Jack

Image: Location of the ringer switch, phone line jack, and handset cord jack.

OPERATING INSTRUCTIONS

Making and Receiving Calls

- **To Make a Call:** Lift the handset, wait for a dial tone, then dial the desired number.
- **To Receive a Call:** When the phone rings, lift the handset to answer.
- **Hands-Free Calling:** Press the **MEM** button (speaker icon) to activate hands-free mode. Adjust speaker volume using the dedicated volume controls.

HANDS-FREE



2-level adjustable speaker volume allows hands-free calling for added convenience.

Image: Demonstrating the hands-free calling feature with adjustable speaker volume.

LCD Display and Caller ID

The integrated LCD display shows caller ID information, date, and time. It stores up to 61 incoming and 16 outgoing call records.

- **Viewing Call Records:** Use the **arrow buttons** (◀/▶) to scroll through incoming and outgoing call history.
- **Setting Date/Time:** Use the **SET/STO** button to enter settings mode and adjust the date and time. Refer to the detailed instructions in the included paper manual for specific steps.
- **Note:** Caller name is not displayed, only the number.

LCD DISPLAY



Easily Read Numbers,
Day or Night



Caller ID for Incoming Calls



TR 10:1608
2026



Supports 61 incoming and 16 outgoing call records, with easy date and time setting.

Image: The LCD display showing caller ID and time, with navigation buttons.

Ringer Volume and Visual Indicator

The phone features a loud ringer and a visual indicator for incoming calls.

- **Adjusting Ringer Volume:** Use the **High-Low-Off switch** located on the side of the phone base (refer to 'Adjustable Volume and Ports' image in Setup section).
- **Visual Indicator:** A red LED light flashes when there is an incoming call, providing a visual alert in addition to the audible ringer.

LOUD RINGER



The landline lights up for incoming calls, ensuring you won't miss important calls from loves.

Image: The phone's display and visual ringer indicator, highlighting the loud ringer feature.

Function Keys

The phone includes dedicated keys for various functions:

- **M1 / HOLD:** One-touch memory dial or hold function.
- **SET / STO:** Access settings and store numbers.
- **OUT / DEL:** View outgoing calls or delete entries.
- **FLASH:** Used for call waiting or transferring calls.
- **MEM:** Access memory functions.
- **VOL:** Adjust speaker volume during hands-free calls.
- **MUTE:** Mute your microphone during a call.
- **RD/BACK:** Redial the last number or navigate back in menus.

FUNCTION KEYS



Image: Overview of the phone's function keys for efficient operation.

MAINTENANCE

To ensure the longevity and optimal performance of your Uvital Corded Phone, follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth to clean the phone's surface. Avoid abrasive cleaners or solvents, which can damage the finish.
- **Environment:** Keep the phone in a dry place, away from direct sunlight, excessive heat, and moisture.
- **Cord Care:** Avoid tangling or stretching the phone and handset cords excessively to prevent damage.

TROUBLESHOOTING

If you encounter issues with your Uvital Corded Phone, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No dial tone	Phone line not connected properly.	Ensure the phone line cord is securely plugged into both the phone base and the wall socket.
No display on LCD	No power or display settings issue.	This phone is corded electric and does not require external power for basic functions. If the display is blank, check phone line connection.
Ringer not working	Ringer switch set to 'Off' or 'Low'.	Adjust the ringer switch on the side of the phone to 'High' or 'Low'.
Cannot hear caller / Caller cannot hear me	Handset cord loose or volume too low.	Ensure the handset cord is securely connected. Adjust the handset volume if available, or speaker volume in hands-free mode.

If the problem persists after trying these solutions, please contact Uvital customer support.

SPECIFICATIONS

Feature	Detail
Model	F-Phone with Caller ID
Brand	Uvital
Product Dimensions	1 x 1 x 1 inches
Item Weight	1.21 pounds
Color	Black
Telephone Type	Corded
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Corded Electric
Dialer Type	Single Keypad
Answering System Type	Digital
Compatible Devices	PSTN telephone networks
Multiline Operation	Single-Line Operation
Caller ID Storage	61 incoming, 16 outgoing calls
Ringer Volume	Up to 110dB (High-Low-Off settings)
Speaker Volume	Up to 90dB (2 levels adjustable)

SUPPORT

For further assistance, technical support, or inquiries regarding returns and replacements, please contact Uvital customer

service. Uvital is committed to providing comprehensive support for its products.

- **Customer Service:** Available for quick replies.
- **Technical Support:** Expert assistance for product operation and troubleshooting.
- **Returns & Replacements:** Information available through your purchase platform or Uvital's official channels.

Please refer to the contact information provided with your purchase or visit the official Uvital website for the most up-to-date support details.