

LMD-998

Generic LMD-998 Portable HD DVD Player User Manual

Model: LMD-998

1. INTRODUCTION

The Generic LMD-998 Portable HD DVD Player is a versatile entertainment device designed for on-the-go use. This manual provides detailed instructions for setting up, operating, and maintaining your device to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

2. PRODUCT FEATURES

- Versatile Functionality:** Combines a DVD player, TV player, FM radio, card reader, and gaming device into one compact unit.
- Rechargeable & Portable:** Features a long-lasting lithium battery for home, office, or car use; includes an on-board power source for in-car entertainment.
- High-Quality Display:** HD LCD widescreen with 270° rotation delivers crisp visuals and adaptable viewing angles.
- Smart Features:** Intelligent power-off memory resumes playback where you left off; built-in stereo speakers provide loud, clear sound.
- Multiple Connectivity Options:** High-speed USB interface supports hard disks and U-disks; built-in card reader plays videos, music, and photos directly.
- Entertainment On-the-Go:** Supports 300 built-in games, FM radio, and cable/wireless TV channels (signal-dependent).

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x LMD-998 Portable HD DVD Player
- 1 x Car Charger
- 1 x AC Charger
- 1 x Game Controller
- 1 x Remote Control
- 1 x AV Cable
- 1 x User Manual (this document)

4. SETUP

4.1 Initial Charging

1. Connect the AC charger to the DC IN port on the player.
2. Plug the AC charger into a standard wall outlet.
3. Allow the device to charge fully before first use. The charging indicator light will typically change color or turn off when charging is complete.

4.2 Powering On/Off

- To power on, slide the POWER switch to the 'ON' position.
- To power off, slide the POWER switch to the 'OFF' position.

4.3 Screen Adjustment

The HD LCD screen can rotate 270 degrees for optimal viewing angles. Gently pivot the screen to your desired position. Avoid excessive force to prevent damage.



This image illustrates the LMD-998 Portable DVD Player with its HD LCD screen rotated 270 degrees, allowing for versatile viewing positions. The screen can be adjusted to suit various environments, whether for personal viewing or sharing with others.

5. OPERATING INSTRUCTIONS

5.1 DVD Playback

1. Open the disc cover.

2. Place a DVD or CD disc onto the spindle with the label side facing up.
3. Close the disc cover securely.
4. The player will automatically detect and begin playback. Use the remote control or front panel buttons for playback controls (Play, Pause, Stop, Skip, Volume).

5.2 TV Tuner

1. Connect an external antenna (not included) to the ANT IN port for better signal reception.
2. Switch the input mode to 'TV' using the MODE button on the player or remote.
3. Perform an auto-scan for available channels in your area. Channel availability depends on local signal strength.

5.3 FM Radio

1. Switch the input mode to 'FM Radio' using the MODE button.
2. Use the tuning buttons to scan for and select FM radio stations.

5.4 Card Reader / USB Playback

1. Insert a compatible SD card into the card slot or a USB flash drive/hard disk into the USB port.
2. Switch the input mode to 'CARD' or 'USB' using the MODE button.
3. Navigate through the files using the directional buttons and select the desired video, music, or photo file for playback.

5.5 Gaming

1. Connect the included game controller to the designated game port.
2. Switch the input mode to 'GAME' using the MODE button.
3. Select from the 300 built-in games using the controller.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the screen, use a specialized screen cleaning cloth and solution. Do not use abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep discs clean and free from scratches.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

- **No Power:** Ensure the device is charged or connected to a power source. Check the power switch position.
- **No Disc Playback:** Ensure the disc is inserted correctly (label side up) and is clean and unscratched. Verify the disc format is supported.
- **No TV Signal:** Ensure an external antenna is connected. Perform an auto-scan for channels. Signal strength varies by location.
- **No Sound:** Check the volume level. Ensure headphones are not connected if you expect sound from

the speakers.

- **Remote Control Not Working:** Check the battery in the remote control. Ensure there are no obstructions between the remote and the player's IR sensor.

8. SPECIFICATIONS

Brand	Generic
Model	LMD-998
Display	HD LCD Widescreen, 270° Rotation
Weight	1319 Grams
Connectivity	USB, Card Reader
Included Components	1 X Car Charger, 1 X Charger, 1 X Game Controller, 1 X Remote
Manufacturer	Huayu

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product comes with a **6-month Manufacturer's Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

For technical support, warranty claims, or any questions regarding your LMD-998 Portable HD DVD Player, please contact your retailer or the manufacturer's customer service. Please have your purchase receipt and product model number ready when contacting support.