

## tectake 406270

# tectake Electric Wall Fireplace 91.5 x 43 x 12 cm Instruction Manual

Model: 406270

## 1. INTRODUCTION

---

Thank you for choosing the tectake Electric Wall Fireplace. This manual provides essential information for the safe and efficient operation of your new appliance. Please read these instructions carefully before installation and use, and retain them for future reference.

## 2. SAFETY INSTRUCTIONS

---

**WARNING:** To reduce the risk of fire, electric shock, or injury, observe the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This fireplace is equipped with an automatic overheat protection system. If the heater overheats, the system will automatically shut off the power.
- The product also features open window detection, which automatically switches off the heating function if a sudden drop in temperature is detected.

### **3. PACKAGE CONTENTS**

---

Carefully unpack all components and check against the list below. Ensure all items are present and undamaged before proceeding with installation.

- Electric Wall Fireplace
- Remote Control
- Mounting Material (screws, anchors)
- Instruction Manual (this document)

## MISURE

### Misure totali

91,5 x 12 x 43 cm

### Taglio per incasso

77 x 12 x 41 cm

### Spessore vetro frontale

5 mm

### Lunghezza cavo

160 cm

## DATI TECNICI

**Potenza** 900 W/1800 W

**Tensione** 220-240 V

**Batteria** CR2025 (non inclusa)

**Peso** ca. 18,5 kg

**Materiali** acciaio verniciato a polvere, vetro, rame, alluminio, gomma, polistirolo, plastica ABS, resina

## CONTENUTO

Caminetto elettrico a muro

Telecomando

Materiale montaggio

Istruzioni montaggio



Tutte le misure sono indicative

Image: Overview of the electric fireplace, remote control, and mounting accessories included in the package.

## 4. SPECIFICATIONS

<b>Feature</b>	<b>Detail</b>
Model Number	406270
Total Dimensions (LxWxH)	91.5 x 12 x 43 cm (approx.)
Mounting Cutout (LxWxH)	77 x 12 x 41 cm (approx.)
Cable Length	160 cm (approx.)
Power Output	900 W / 1800 W
Voltage	220 – 240 V
Remote Control Battery	CR2025 (not included)
Weight	13.4 kg (approx.)
Materials	Powder-coated steel, glass, copper, aluminum, rubber, polystyrene, ABS plastic, resin
Installation Type	Wall Mount
Heat Output	1800 Watt (Max)
Ventilation Type	Vent-free
Specific Use	Indoor

## MISURE

### Misure totali

91,5 x 12 x 43 cm

### Taglio per incasso

77 x 12 x 41 cm

### Spessore vetro frontale

5 mm

### Lunghezza cavo

160 cm

## DATI TECNICI

**Potenza** 900 W/1800 W

**Tensione** 220-240 V

**Batteria** CR2025 (non inclusa)

**Peso** ca. 18,5 kg

**Materiali** acciaio verniciato a polvere, vetro, rame, alluminio, gomma, polistirolo, plastica ABS, resina

## CONTENUTO

Caminetto elettrico a muro

Telecomando

Materiale montaggio

Istruzioni montaggio



Tutte le misure sono indicative

Image: Detailed technical drawing showing the dimensions and components of the electric fireplace.

## 5. SETUP AND INSTALLATION

The tectake Electric Wall Fireplace is designed for easy wall mounting using the provided materials. Follow these steps for a secure installation.

- 1. Choose Location:** Select a suitable wall location, ensuring it is away from combustible materials and has access to a power outlet. Ensure the wall can support the fireplace's weight (approx. 13.4 kg).
- 2. Marking:** Use the provided mounting bracket or the fireplace itself to mark the drilling points on the wall. Ensure the marks are level.
- 3. Drilling:** Drill holes at the marked points. Insert wall anchors if necessary, depending on your wall material.
- 4. Mounting Bracket:** Secure the mounting bracket to the wall using the provided screws.
- 5. Hang Fireplace:** Carefully lift the electric fireplace and hook it onto the mounted bracket. Ensure it is securely seated.
- 6. Final Check:** Verify that the fireplace is stable and level.

# IL DESIGN ELEGANTE INCONTRA — caratteristiche intelligenti —

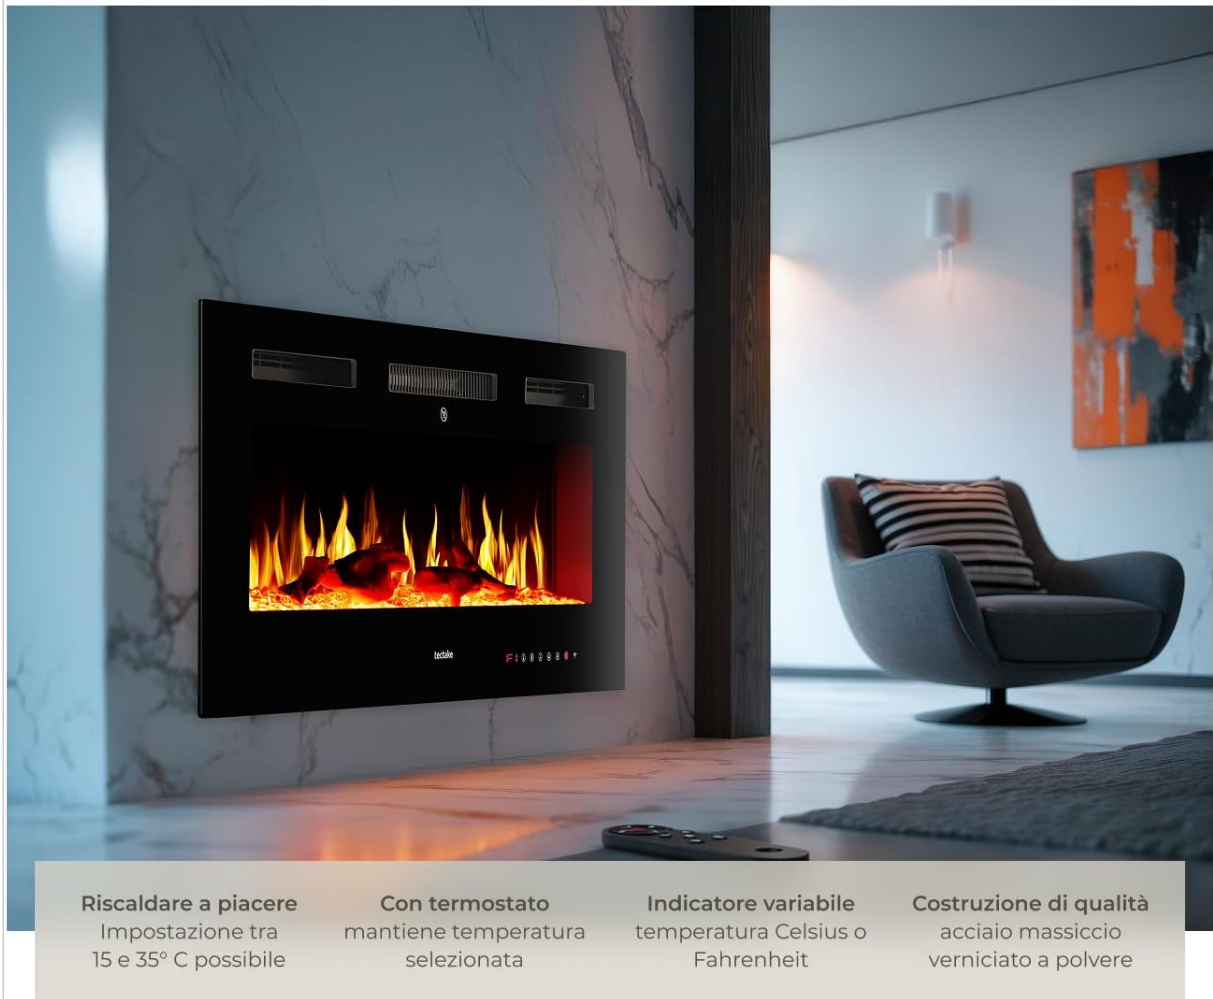 


Image: The electric fireplace installed on a wall, highlighting its slim profile and heat outlets.

## 6. OPERATING INSTRUCTIONS

### 6.1 Powering On/Off

 
Plug the fireplace into a standard 220-240V electrical outlet. The unit can be turned on/off using the control panel on the unit, the remote control, or the Tuya app.

### 6.2 Heating Functions

The fireplace offers two heating levels: 900 W and 1800 W. Use the control panel, remote, or app to select the desired heat output. The integrated thermostat allows for precise temperature regulation between 15°C and 35°C. Heat is distributed evenly through wide ventilation openings.

# BELLO E focoso

Impressionante effetto fiamma 3D e imitazione del legno e dei bagliori; è possibile ricreare un'atmosfera accogliente da caminetto ovunque.

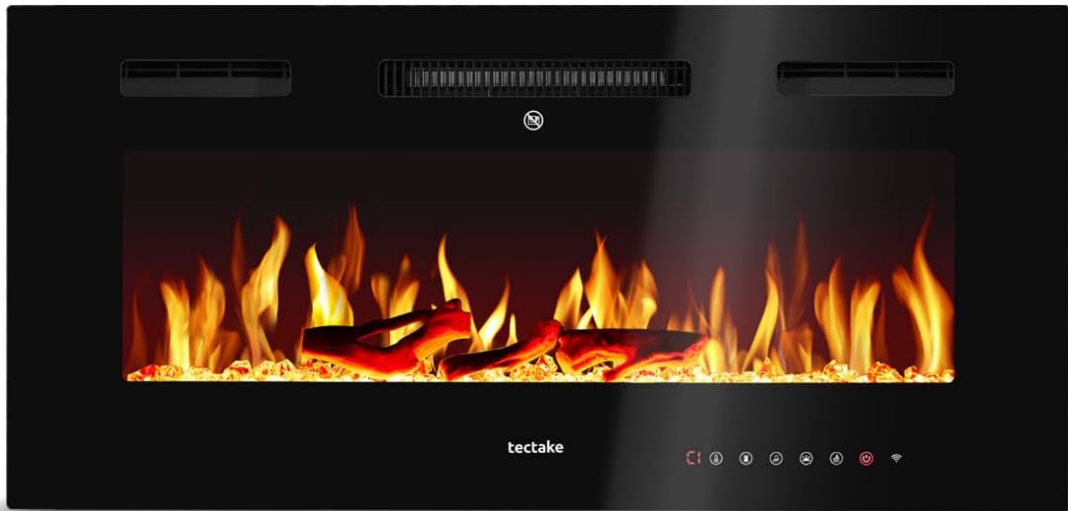

## CARATTERISTICHE bollenti

2 modalità di potenza, ampie aperture ventilazione, temperatura regolabile con precisione, timer anche settimanale; si riscalda secondo le proprie esigenze.


Image: The fireplace showcasing its realistic 3D flame effect and accessible control panel.

### 6.3 Flame and Ember Effects

Customize the ambiance with the realistic 3D flame effect. You can choose from:

- **6 Flame Colors:** Select from various flame colors to match your mood.
- **9 Ember Bed Colors:** Choose different colors for the ember bed.
- **5 Brightness Levels:** Adjust the intensity of the light.
- **4 Flame Speeds:** Control the movement speed of the flames.

 A PROPRIO  
piacimento

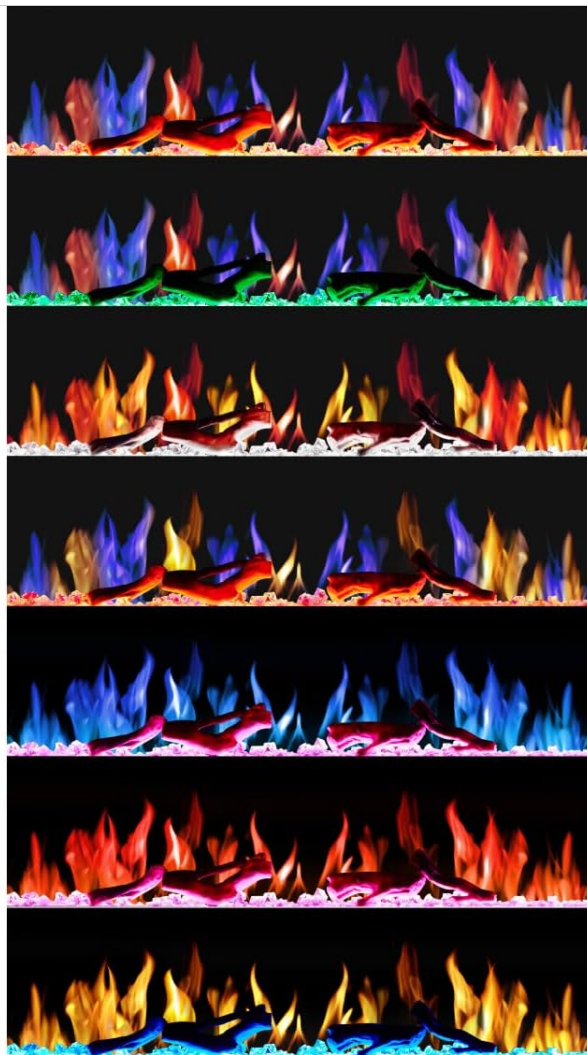

**tectake**  
home

Atmosfera accogliente premendo un pulsante: 6 diversi colori fiamma, 9 colori braci, 5 livelli luminosità - e 4 velocità: in questo modo ti godrai un ambiente magnifico proprio secondo le tue preferenze.

Image: Examples of the various flame and ember color combinations available for customization.

## 6.4 Remote Control and App Control

The fireplace can be controlled via the included remote control or the Tuya app. The Tuya app is compatible with Alexa, Google Home, and Siri (via HomeKit), allowing voice control of temperature, flames, and timer functions.

*Note: The remote control requires a CR2025 battery (not included).*



Image: The remote control and a smartphone screen showing the Tuya app interface for controlling the fireplace.

## 6.5 Timer Function

Set the programmable timer for operation between 1 to 8 hours. This feature helps conserve energy and allows for scheduled heating.

## 7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Always unplug the fireplace before cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Ventilation Openings:** Ensure the air intake and exhaust openings are free from dust and obstructions. Use a vacuum cleaner with a brush attachment to gently clean these areas.
- **Glass Panel:** Clean the glass panel with a glass cleaner and a soft cloth. Avoid scratching the surface.
- **Storage:** If storing the fireplace for an extended period, unplug it and store it in a dry, dust-free location.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power supply; Power switch off; Remote control battery depleted.	Check if the unit is plugged in and the wall outlet is functional. Ensure the main power switch on the unit is ON. Replace the remote control battery (CR2025).
No heat output.	Heating function not activated; Overheat protection triggered; Open window detection activated.	Activate the heating function via control panel, remote, or app. Check for obstructions around air vents. If overheat protection was triggered, unplug the unit, wait 15 minutes, and plug it back in. Close any open windows or doors.
Flame effect not working.	Flame effect function not activated; LED malfunction.	Ensure the flame effect is turned on. If the issue persists, contact customer support.
Remote control not responding.	Battery depleted; Obstruction between remote and unit.	Replace the CR2025 battery. Ensure there is a clear line of sight between the remote and the fireplace's receiver.

## 9. WARRANTY AND SUPPORT

---

This tectake Electric Wall Fireplace comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact tectake customer service. Contact information can typically be found on the manufacturer's website or on your purchase receipt.

**Manufacturer:** tectake

**Country of Origin:** China