

[Manuals.plus](#) /

> [aowoka](#) /

> aowoka S15-1 Portable Bluetooth Speaker User Manual

**aowoka S15-1**

# aowoka S15-1 Portable Bluetooth Speaker User Manual

## 1. INTRODUCTION

---

Thank you for purchasing the aowoka S15-1 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your device. Please read this manual thoroughly before use to ensure proper functionality and to maximize your listening experience. Keep this manual for future reference.

## 2. PACKAGE CONTENTS

---

Please check the package for the following items:

- aowoka S15-1 Portable Bluetooth Speaker
- Power Cable (USB charging cable)
- User Manual

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the speaker's components and controls.



Image 1: Front view of the aowoka S15-1 Portable Bluetooth Speaker. This image displays the speaker's main body, grille, and overall design.

### 3.1. Controls and Ports (Typical Layout)

- **Power Button:** Press and hold to turn the speaker ON/OFF.
- **Volume Up/Next Track Button:** Short press to increase volume; long press for next track.
- **Volume Down/Previous Track Button:** Short press to decrease volume; long press for previous track.
- **Play/Pause Button:** Press to play or pause music; answer/end calls.
- **Mode Button:** Press to switch between Bluetooth, AUX, or other available modes.

- **Charging Port (USB-C/Micro USB):** For connecting the power cable to charge the speaker.
- **AUX-in Port (3.5mm):** For connecting external audio devices via an audio cable (not included).

## 4. SETUP

---

### 4.1. Initial Charging

Before first use, fully charge the speaker. Connect the provided power cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will typically turn red while charging and turn off or change color when fully charged.

### 4.2. Powering On/Off

- **To Power On:** Press and hold the Power Button for approximately 2-3 seconds. You will hear an audible prompt, and the indicator light will illuminate.
- **To Power Off:** Press and hold the Power Button for approximately 2-3 seconds. You will hear an audible prompt, and the indicator light will turn off.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode. The Bluetooth indicator light will typically flash rapidly.
2. On your mobile device (smartphone, tablet, computer), enable Bluetooth.
3. Search for available Bluetooth devices. The speaker will appear as "aowoka S15-1" or similar.
4. Select "aowoka S15-1" from the list to connect. Once connected, you will hear a confirmation sound, and the Bluetooth indicator light will stop flashing and remain solid.
5. If prompted for a password, enter "0000".
6. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

### 5.2. Music Playback

- **Play/Pause:** Press the Play/Pause button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.

### 5.3. Hands-Free Calling

When connected via Bluetooth, the speaker can be used for hands-free calls.

- **Answer Call:** Press the Play/Pause button once.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds.

### 5.4. AUX-in Mode

Connect an external audio device (e.g., MP3 player) to the speaker's AUX-in port using a 3.5mm audio

cable. The speaker will automatically switch to AUX mode or you may need to press the Mode button. Audio will be played directly from the connected device.

## 6. CHARGING THE SPEAKER

When the battery is low, the speaker may emit an audible warning or the indicator light may flash. To charge:

1. Connect the provided USB charging cable to the speaker's charging port.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., wall adapter, computer USB port).
3. The charging indicator light will illuminate (e.g., red) to indicate charging is in progress.
4. Once fully charged, the indicator light will change color or turn off. Disconnect the charging cable.

## 7. MAINTENANCE

### 7.1. Cleaning

Wipe the speaker's exterior with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, benzene, or other chemicals, as these may damage the surface or internal components.

### 7.2. Storage

Store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and excessive dust. If storing for an extended period, charge the battery periodically to maintain its lifespan.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Low battery Power button not pressed correctly	Charge the speaker fully Press and hold the Power button for 2-3 seconds
Cannot pair via Bluetooth	Speaker not in pairing mode Bluetooth disabled on device Device too far from speaker	Ensure speaker is flashing Bluetooth indicator Enable Bluetooth on your device Move device closer to speaker (within 10 meters)
No sound	Volume too low Incorrect input mode Device not connected	Increase volume on speaker and device Press Mode button to select correct input Ensure Bluetooth is connected or AUX cable is secure
Poor sound quality	Device too far Interference	Move device closer Avoid obstacles or other wireless devices

## 9. SPECIFICATIONS

- **Model:** aowoka S15-1
- **Connectivity Technology:** Bluetooth

- **Speaker Type:** Portable Speaker
- **Speaker Maximum Output Power:** 24 Watts
- **Item Dimensions (D x W x H):** 30D x 30W x 60H millimetres
- **Manufacturer:** aowoka

## 10. WARRANTY AND SUPPORT

---

The aowoka S15-1 Portable Bluetooth Speaker comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or contact aowoka customer support. If you encounter any issues not covered in this manual, please reach out to our support team for assistance.

**Customer Support:** Please visit the official aowoka website or contact your retailer for support information.