

[Manuals.plus](#) /

› [Casio](#) /

› Casio AE-1700H Series Digital Watch Instruction Manual

## Casio AE-1700H

# Casio AE-1700H Series Digital Watch Instruction Manual

Model: AE-1700H

### INTRODUCTION

This manual provides essential information and instructions for the proper use and care of your Casio AE-1700H Series Digital Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The AE-1700H combines a robust design with practical features, including a rotating timer bezel, 10-year battery life, 100-meter water resistance, LED backlight, stopwatch, and dual time capabilities.



Image: Casio AE-1700H Digital Watch. This image displays the watch face, highlighting the digital display, buttons, and the rotating bezel.

## SETUP

### Initial Settings

Your watch comes with a pre-installed battery designed for approximately 10 years of operation. Before first use, ensure the watch is in the Timekeeping Mode.

### Setting the Time and Date

1. In Timekeeping Mode, press and hold the **ADJUST** button until the seconds begin to flash, indicating the setting screen.
2. Press the **MODE** button to cycle through the settings: Seconds → DST → Hour → Minute → Year → Month → Day.
3. Use the **LIGHT** (or **START**) button to increase the flashing value. For seconds, pressing **LIGHT** resets them to 00.
4. Once all settings are correct, press the **ADJUST** button to exit the setting screen.

### Setting Dual Time

The Dual Time mode allows you to track a second time zone.

1. From Timekeeping Mode, press **MODE** until you reach the Dual Time mode.
2. Press and hold the **ADJUST** button until the hour setting flashes.
3. Use the **LIGHT** (or **START**) button to change the hour and minute.
4. Press **ADJUST** to confirm and exit.

## OPERATING THE WATCH

---

### Mode Navigation

Press the **MODE** button to cycle through the watch's functions in the following order:

- Timekeeping Mode
- Stopwatch Mode
- Countdown Timer Mode
- Alarm Mode (AL1, AL2, AL3, SNZ, SIG)
- Dual Time Mode
- Fishing Mode (if applicable to your specific model variant)

### Stopwatch Function

The stopwatch measures elapsed time, split times, and two finishes.

1. Enter Stopwatch Mode.
2. Press **START** to begin timing.
3. Press **START** again to stop.
4. Press **ADJUST** to reset to zero.
5. For split times, press **ADJUST** while timing to display the split. Press **ADJUST** again to return to elapsed time.

### Countdown Timer

The countdown timer can be set from 1 minute up to 24 hours.

1. Enter Countdown Timer Mode.
2. Press and hold **ADJUST** until the hour setting flashes.
3. Use **LIGHT** (or **START**) to set the desired countdown time.
4. Press **ADJUST** to confirm.
5. Press **START** to begin the countdown. An alarm sounds when the timer reaches zero.

### Alarms and Hourly Time Signal

The watch features three multi-function alarms (AL1, AL2, AL3), a snooze alarm (SNZ), and an hourly time signal (SIG).

1. Enter Alarm Mode. Press **MODE** to cycle through AL1, AL2, AL3, SNZ, SIG.
2. To set an alarm, select AL1, AL2, or AL3. Press and hold **ADJUST** until the hour setting flashes.
3. Use **LIGHT** (or **START**) to set the alarm time. Press **MODE** to switch between hour and minute.
4. Press **ADJUST** to confirm.
5. To turn an alarm or the hourly time signal ON/OFF, select it and press **START**.

### LED Backlight

Press the **LIGHT** button to illuminate the display. The backlight duration can be set to 1.5 or 3 seconds (refer to the full module manual for detailed setting instructions).

## Rotating Timer Bezel

The rotating bezel can be used for simple elapsed time measurements. Rotate the bezel to align the desired minute mark with the minute hand (or current time marker) to track elapsed time up to 60 minutes.

## MAINTENANCE

### Cleaning

Wipe the watch with a soft, dry cloth to remove dirt and moisture. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner or benzine, as they may damage the resin components.

### Water Resistance

The AE-1700H is 100-meter water resistant (10 ATM). This means it is suitable for swimming, snorkeling, and active water sports. **Do not operate buttons while the watch is wet or submerged.**Avoid exposing the watch to hot water or steam, as this can compromise the water resistance seals.

### Battery Replacement

The watch uses a CR2032 battery with an approximate 10-year life. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by an authorized Casio service center to ensure proper sealing and maintain water resistance.

## TROUBLESHOOTING

### Display is Blank or Dim

- **Cause:** Low battery.
- **Solution:** Replace the battery. Refer to the "Battery Replacement" section.

### Buttons are Unresponsive

- **Cause:** Watch may be in a frozen state or water ingress.
- **Solution:** Try pressing all buttons simultaneously for a few seconds to attempt a soft reset. If the issue persists, or if the watch was recently exposed to water, contact Casio customer support.

### Time is Incorrect

- **Cause:** Time settings were accidentally changed, or battery is low.
- **Solution:** Re-adjust the time and date settings as described in the "Setting the Time and Date" section. If the problem recurs frequently, consider battery replacement.

## SPECIFICATIONS

|                  |                     |
|------------------|---------------------|
| Model Number     | AE-1700H-1AVCF      |
| Display Type     | Digital             |
| Movement         | Quartz              |
| Water Resistance | 100 Meters (10 ATM) |

|                            |                                                                                                                  |
|----------------------------|------------------------------------------------------------------------------------------------------------------|
| <b>Battery Type</b>        | CR2032                                                                                                           |
| <b>Battery Life</b>        | Approx. 10 years                                                                                                 |
| <b>Case Material</b>       | Resin                                                                                                            |
| <b>Band Material</b>       | Resin                                                                                                            |
| <b>Crystal Material</b>    | Resin                                                                                                            |
| <b>Case Diameter</b>       | 47.3 mm                                                                                                          |
| <b>Case Thickness</b>      | 14.3 mm                                                                                                          |
| <b>Item Weight</b>         | 4 Ounces (approx. 113g)                                                                                          |
| <b>Additional Features</b> | LED Backlight, Stopwatch, Countdown Timer, Multi-function Alarms, Dual Time, Auto-Calendar, Rotating Timer Bezel |

## WARRANTY INFORMATION

Your Casio AE-1700H Series Digital Watch is covered by a limited warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Casio website. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries regarding your Casio AE-1700H Series Digital Watch, please contact Casio customer support directly. You can find contact information and frequently asked questions on the official Casio website:

[Casio Official Support Website](#)