

KRUPS SA4028E0

KRUPS Coffee Crush Automatic Coffee Machine SA4028E0 User Manual

Model: SA4028E0

1. INTRODUCTION

Thank you for choosing the KRUPS Coffee Crush Automatic Coffee Machine, model SA4028E0. This compact and intuitive machine is designed to deliver the rich aroma and taste of freshly ground coffee directly to your cup. With 15 bars of pressure and versatile settings, you can enjoy a variety of coffee beverages, from espresso to filter coffee, using either whole beans or pre-ground coffee.

This manual provides essential information for the safe and efficient operation of your coffee machine. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is connected to a grounded power outlet.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged.
- Avoid contact with hot surfaces, such as the coffee outlet and steam nozzle, during and after operation.
- Only use cold, fresh water in the water tank.
- Unplug the appliance before cleaning and when not in use.

3. SETUP

3.1 Unpacking and Initial Cleaning

1. Carefully remove all packaging materials from the coffee machine.
2. Wipe the exterior of the machine with a damp cloth.
3. Wash the water tank, drip tray, and coffee grounds container with warm, soapy water. Rinse thoroughly and dry.

3.2 Filling the Water Tank

- Remove the water tank from the back of the machine.
- Fill the tank with fresh, cold water up to the MAX level indicator.
- Place the water tank back into the machine, ensuring it is securely seated.

3.3 Adding Coffee Beans

CAFÉ A TU GUSTO
Espresso, lungo, café de filtro



Image: Freshly ground coffee. Pour whole coffee beans into the bean hopper. The machine features 15 bars of pressure and 3 grind levels for optimal flavor.

- Open the lid of the bean hopper located on top of the machine.

- Pour fresh whole coffee beans into the hopper. Do not overfill.
- Close the lid securely.

3.4 First Use / Priming

- Plug the machine into a power outlet.
- Place a container under the coffee outlet.
- Follow the on-screen prompts or refer to the operating section for the initial rinse cycle. This primes the system and cleans internal components.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



Image: Easy customization. The intuitive panel allows for control of intensity, volume, and temperature settings.

The KRUPS Coffee Crush features an intuitive touch screen panel for easy operation. You can select your desired coffee type, adjust grind level, and customize beverage settings.

4.2 Brewing Coffee from Whole Beans



Image: Coffee to your taste. Enjoy Espresso, Lungo, or Filter Coffee.

1. Ensure the water tank is filled and coffee beans are in the hopper.
2. Place a cup under the coffee outlet.
3. On the control panel, select your desired coffee type: **Espresso**, **Lungo**, or **Filter Coffee**.
4. Adjust the coffee volume (S, M, L) and intensity as desired using the respective touch icons.
5. Press the **START/STOP** button to begin brewing.
6. The machine will grind the beans and dispense the coffee.

4.3 Using Pre-Ground Coffee

INCLUSO CON CAFÉ MOLIDO

Para consumidores de café descafeinado



Image: Even with ground coffee. This feature is ideal for decaffeinated coffee consumers.

1. Open the pre-ground coffee compartment (usually a small drawer or opening on the front or side).
2. Add one scoop of pre-ground coffee. Do not add more than one scoop to avoid blockages.
3. Close the compartment.
4. Select your desired coffee type and press **START/STOP**. The machine will bypass the grinder and use the pre-ground coffee.

4.4 Adjusting Grind Level

- The machine features 3 versatile grind levels, from coarse to extra-fine.
- To adjust the grind level, locate the grind adjustment knob inside the bean hopper.
- Turn the knob to your desired setting. A finer grind produces a stronger coffee, while a coarser grind results in a milder taste.
- **Note:** Adjust the grind level only when the grinder is operating to prevent damage.

5. MAINTENANCE

5.1 Daily Cleaning

- **Emptying Coffee Grounds:** After each brewing cycle, simply discard the used coffee grounds from the internal container. This ensures the machine is ready for the next cup.
- **Drip Tray:** Empty and rinse the drip tray daily to prevent overflow and maintain hygiene.
- **Water Tank:** Rinse the water tank daily and refill with fresh water.
- **Coffee Outlet:** Wipe the coffee outlet with a damp cloth to remove any coffee residue.

5.2 Regular Cleaning

- **Descaling:** The machine will indicate when descaling is required. Use a suitable descaling solution for coffee machines and follow the instructions provided with the descaler. Regular descaling prevents mineral buildup and ensures optimal performance.
- **Brew Unit:** Refer to the full instruction manual for specific cleaning procedures for the internal brew unit.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty, coffee beans empty, brew unit clogged.	Refill water tank, add coffee beans, clean brew unit.
Coffee is too weak.	Grind setting too coarse, insufficient coffee dose.	Adjust grind to a finer setting, increase coffee intensity setting.
Machine is leaking.	Water tank not properly seated, drip tray full.	Ensure water tank is correctly inserted, empty drip tray.
Error message on display.	Specific issue indicated by code.	Refer to the full manual for specific error code explanations and solutions.

7. SPECIFICATIONS

- **Brand:** KRUPS
- **Model Number:** SA4028E0
- **Capacity:** 2 Liters (Water Tank)
- **Color:** Black
- **Product Dimensions (D x W x H):** 27 cm x 14 cm x 28 cm
- **Coffee Maker Type:** Espresso Machine
- **Product Weight:** 4 Kilograms
- **Wattage:** 1370 Watts
- **Voltage:** 5 Volts

- **Country of Origin:** China
- **Dishwasher Safe Parts:** No

8. WARRANTY AND REPAIRABILITY

KRUPS is committed to product longevity. This product is designed for **15-year repairability at a fair price**. We recommend repairing your product within our network of 6,200 repair centers worldwide to ensure its extended lifespan. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official KRUPS website.

9. CUSTOMER SUPPORT

For further assistance, technical support, or to locate a service center, please visit the official KRUPS website or contact your local customer service representative. Contact details can typically be found in the packaging or on the KRUPS brand website.

KRUPS Official Website: www.krups.com

© 2026 KRUPS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

