

Upstreman W54

Upstreman W54 24-Inch Dual Zone Wine Cooler Instruction Manual

Model: W54 | Brand: Upstreman

1. INTRODUCTION

Thank you for choosing the Upstreman W54 Dual Zone Wine Cooler. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your wine cooler, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not store explosive substances such as aerosol cans with flammable propellants in this appliance.
- This appliance must be properly grounded. Connect only to properly grounded outlets.
- Do not use extension cords.
- Unplug the wine cooler before cleaning or making any repairs.
- Keep ventilation openings clear of obstruction.
- Do not damage the refrigerant circuit.
- This appliance is intended for household use only.

3. PRODUCT OVERVIEW

The Upstreman W54 wine cooler is designed to store your wine collection under optimal conditions, featuring dual temperature zones and a sleek design.

Key Features

- **Precise Dual Zone Temperature Control:** Independent temperature zones for red and white wines (Upper: 4055F, Lower: 5565F).
- **Spacious Capacity:** Holds up to 54 standard 750ml bottles.

- **Flexible Storage:** Features 7 adjustable and removable solid wood shelves.
- **Double-Layer Glass Door:** Provides UV protection and maintains consistent internal temperatures.
- **Quiet Operation:** High-efficiency compressor operates at a low noise level of 42 dB.
- **Built-in or Freestanding:** Versatile installation options to suit your space.

Product Components

Familiarize yourself with the main components of your wine cooler:

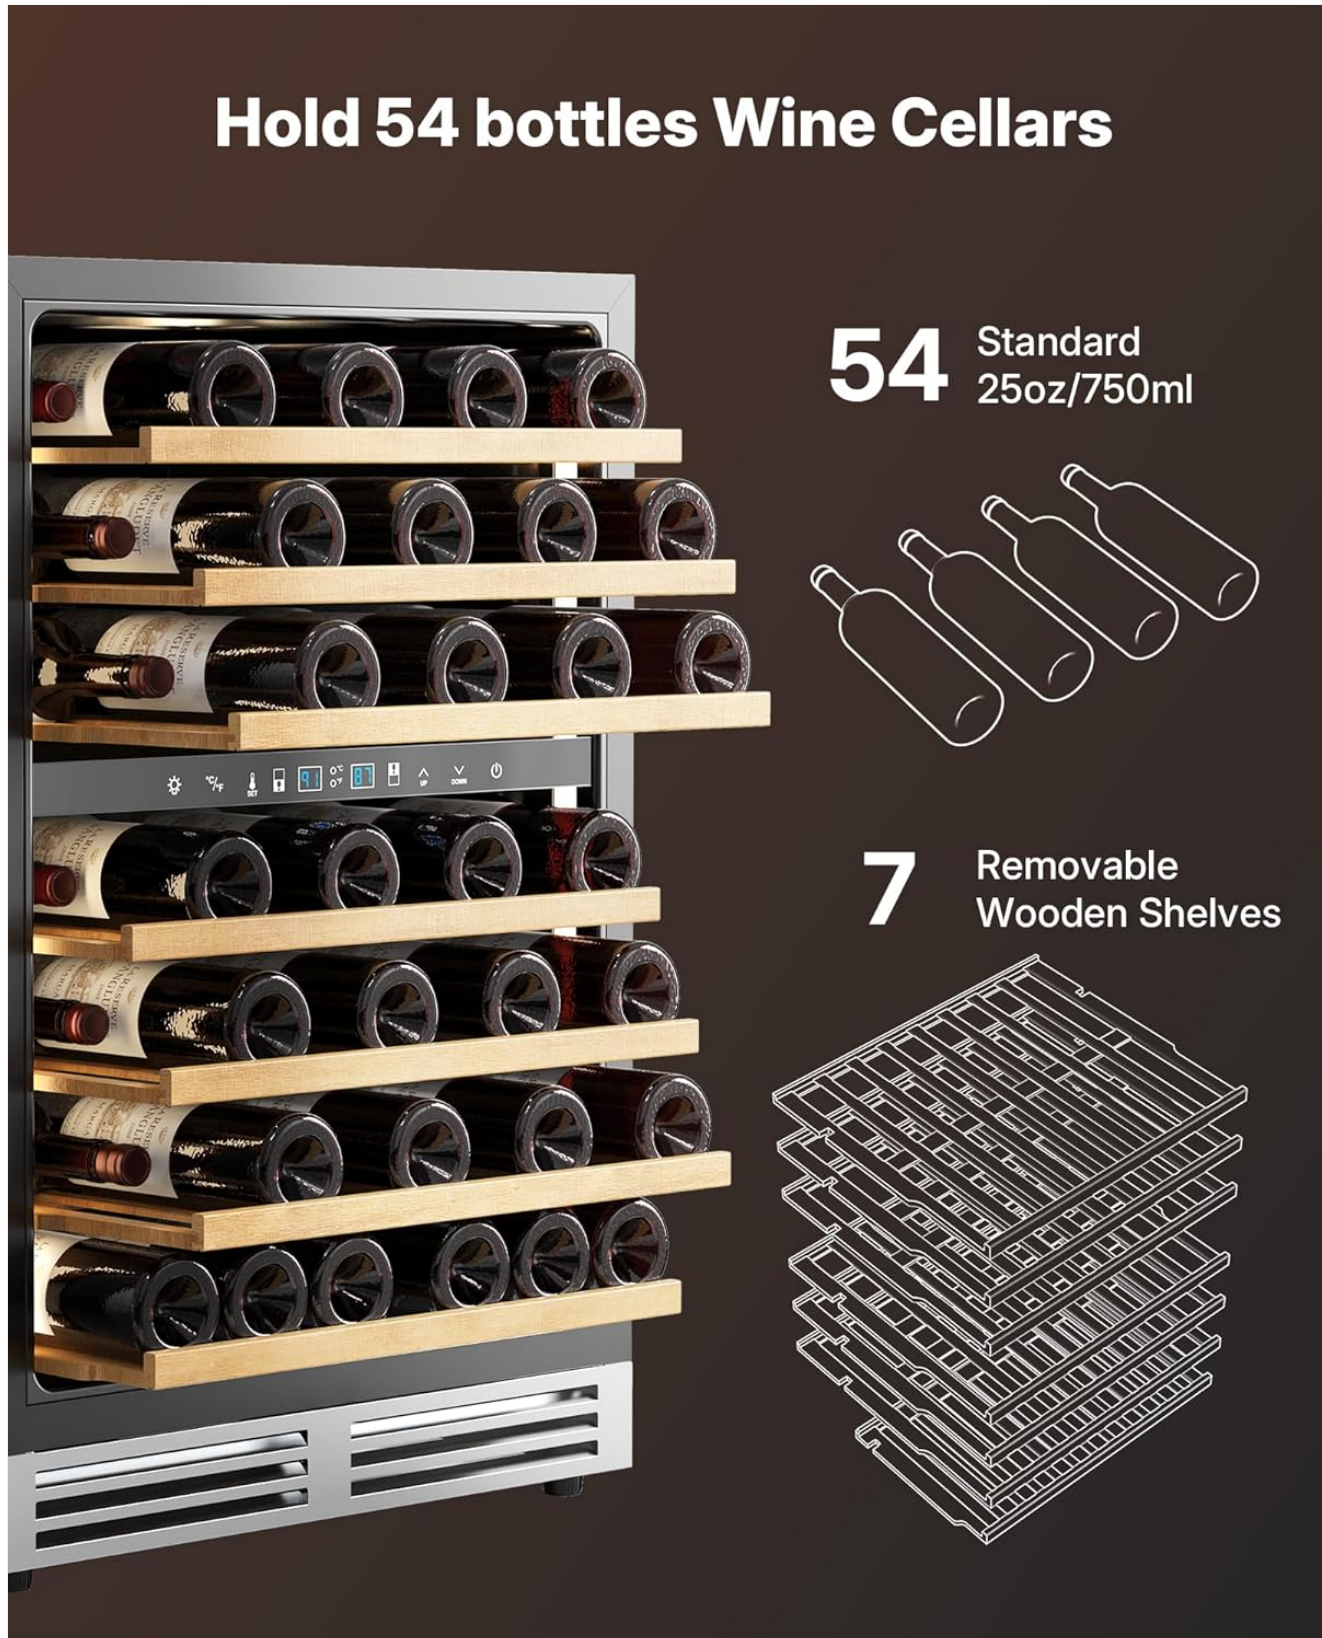 


Figure 3.1: Front view of the Upstreaman W54 Dual Zone Wine Cooler, showcasing its stainless steel glass door and interior lighting.

UV Protection, Purity Preserved



Figure 3.2: Interior view showing the capacity for 54 standard 750ml bottles and the 7 removable wooden shelves.

40-65°F Precision Control

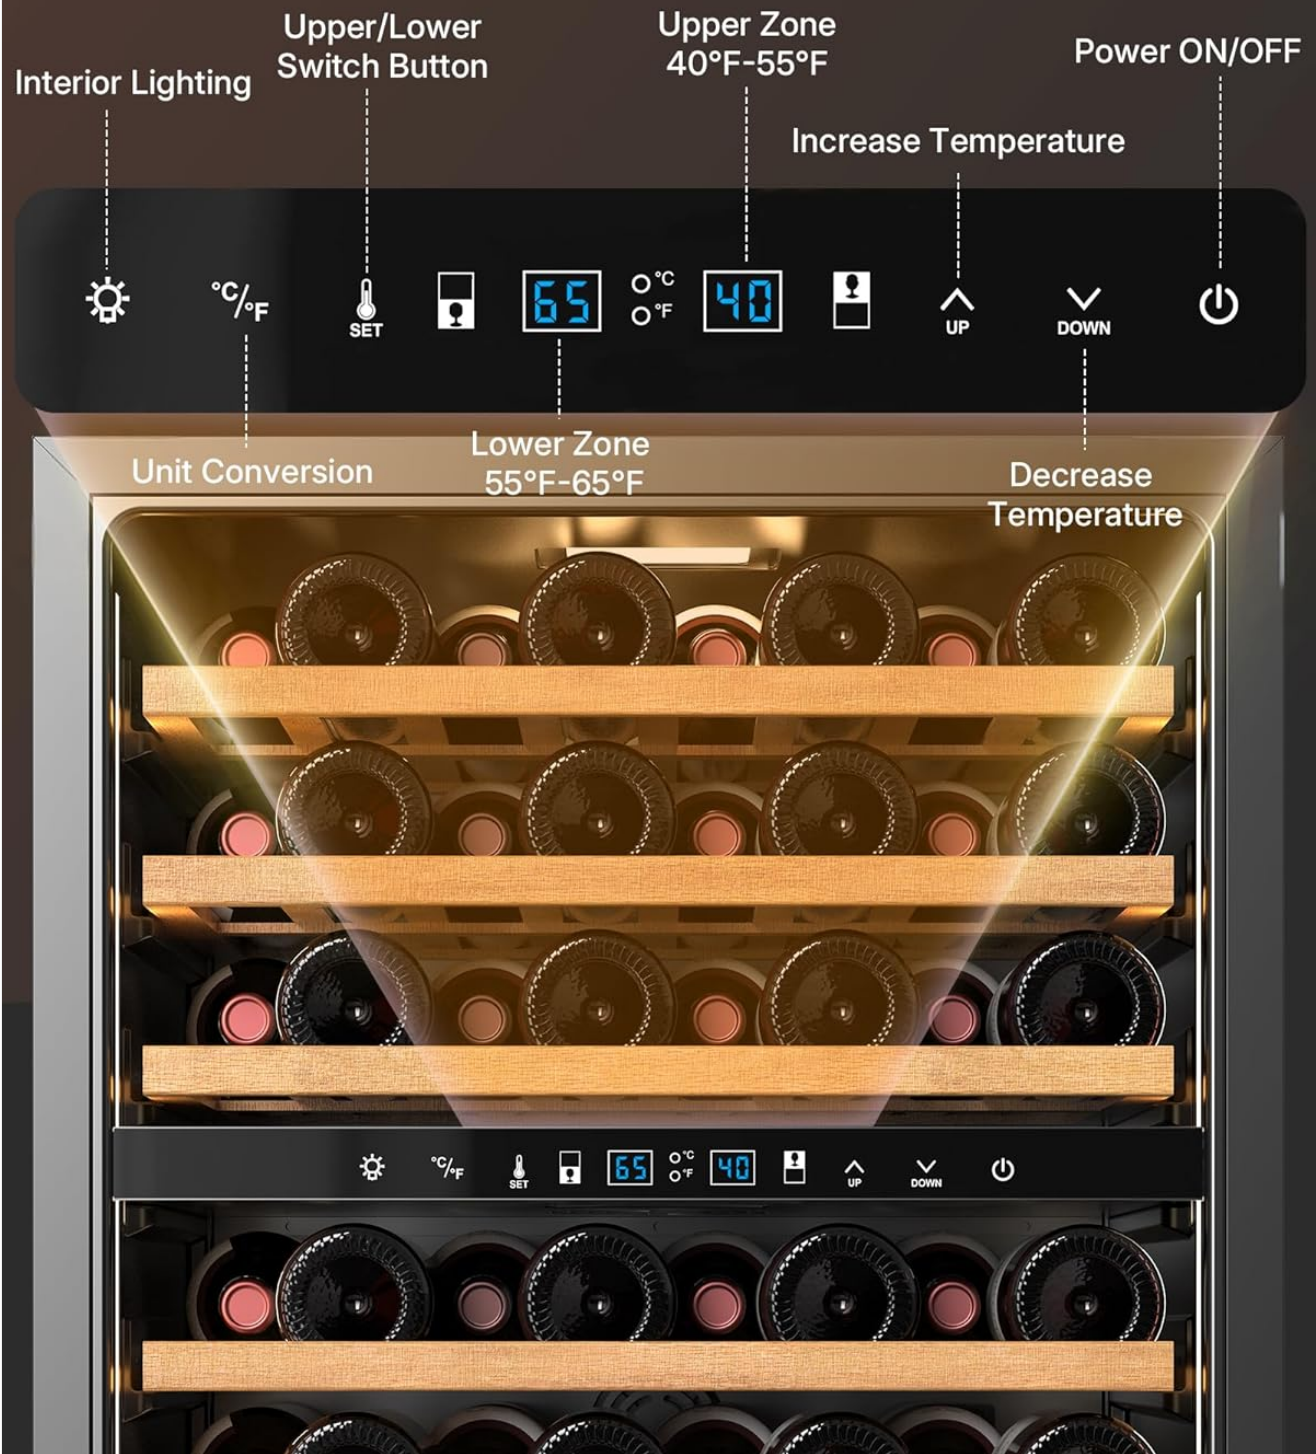 


Figure 3.3: Close-up of the digital control panel for setting temperatures and managing other functions.

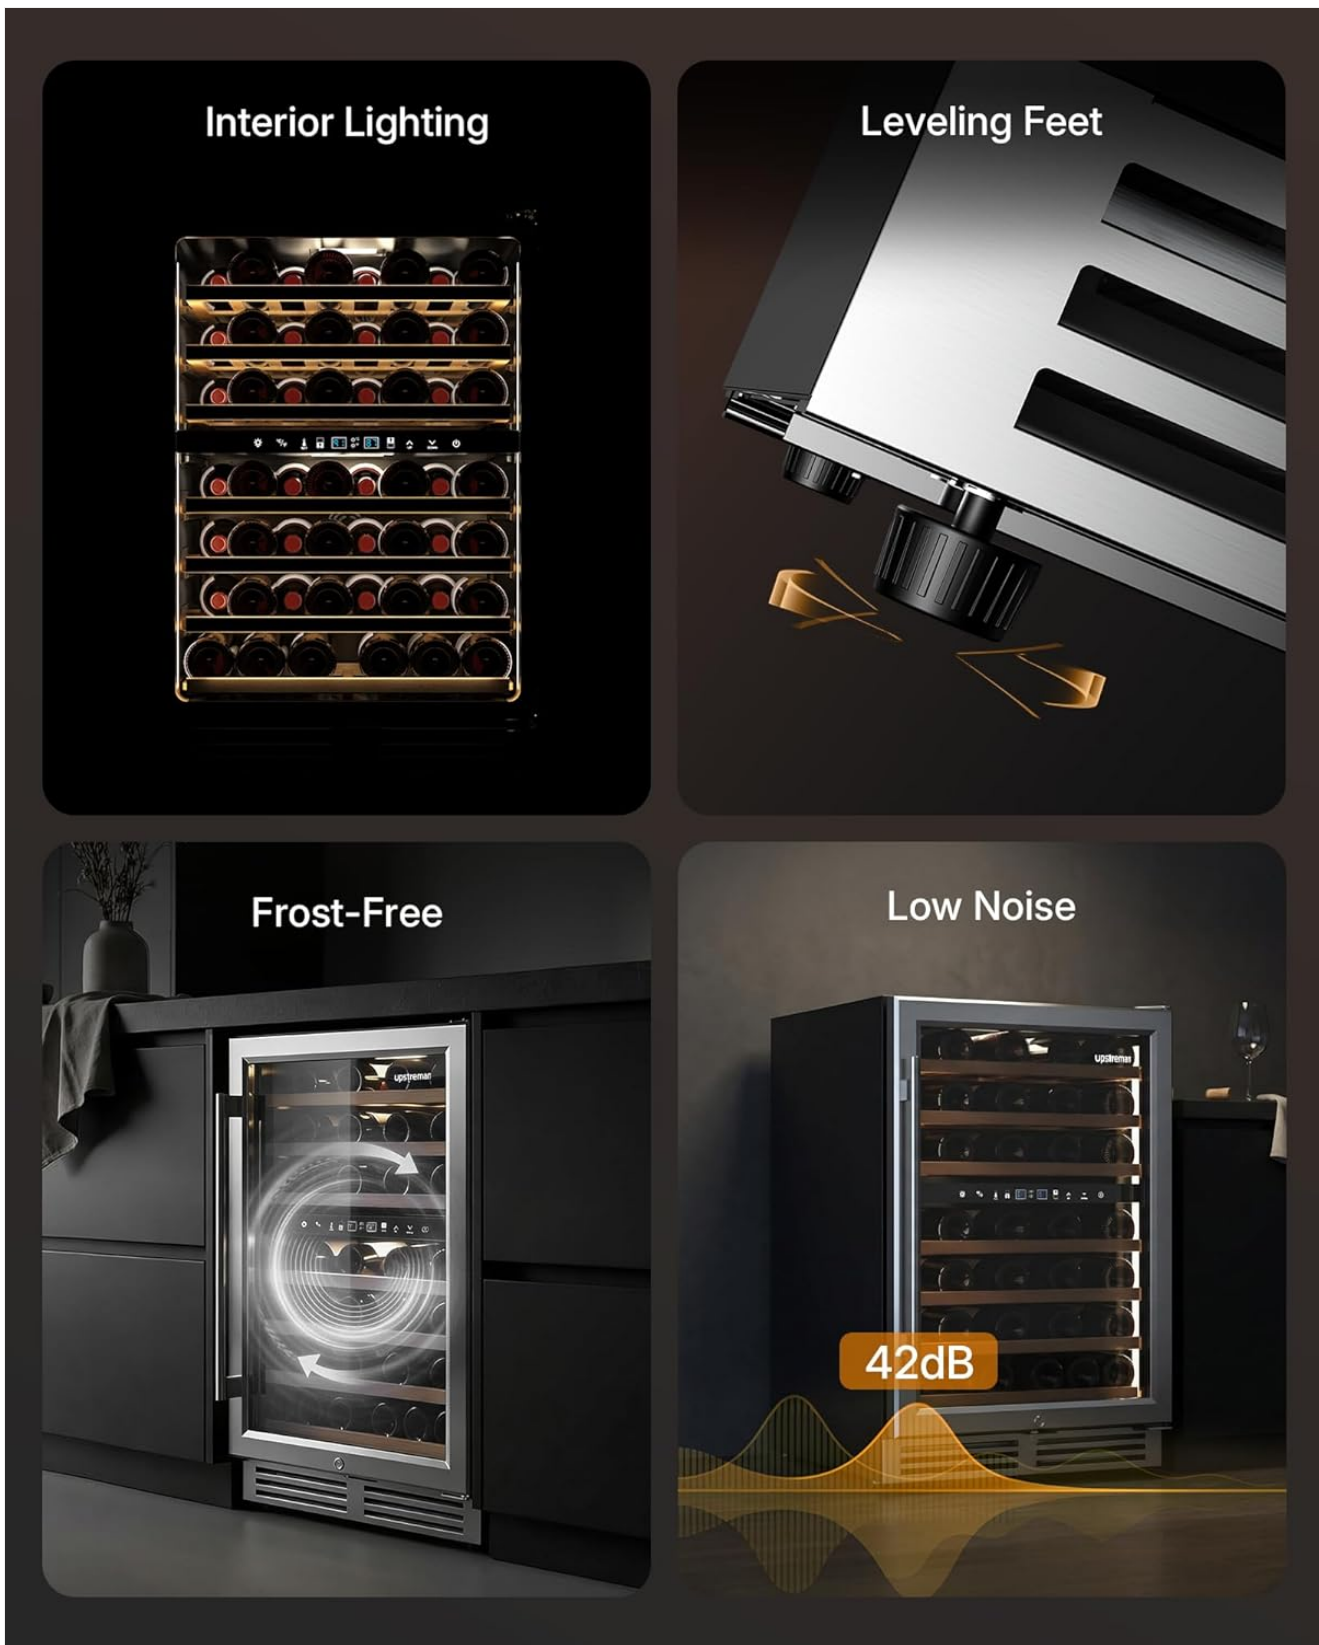 


Figure 3.4: Illustration of the double-layer glass door providing UV protection for your wine.

Video 3.1: An overview video demonstrating the features and design of the Upstreamer W54 Wine Fridge & Cooler Stainless Steel.

4. SETUP & INSTALLATION

Unpacking

- Remove all packaging materials, including the foam base and adhesive tape.
- Inspect the wine cooler for any damage during transit. Report any damage immediately to the retailer.

- Clean the interior and exterior of the appliance with a soft cloth and mild detergent before use.

Placement

Your Upstreman W54 wine cooler can be installed as a freestanding unit or built into cabinetry.

- **Freestanding Installation:** Ensure at least 2 inches of space at the back and sides for proper ventilation.
- **Built-in Installation:** Ensure adequate ventilation space around the unit as specified in the dimensions. The front air vent must not be obstructed.
- Place the unit on a flat, stable surface away from direct sunlight and heat sources.
- Avoid placing the unit in areas with extreme temperature fluctuations.

Fast Cooling Technology



High-Speed
Fan



Air-Cooled
Circulation



Front Cooling
Vents



Figure 4.1: Illustrates the dimensions of the wine cooler and examples of both freestanding and built-in installations.

Leveling

The wine cooler has adjustable leveling feet. Adjust them to ensure the unit is perfectly level, which is crucial for proper door sealing and efficient operation.

Electrical Connection

Plug the appliance into a dedicated, grounded 115V AC outlet. Do not use an adapter or extension cord.

5. OPERATING INSTRUCTIONS

Control Panel Functions

The control panel allows you to manage the temperature settings and internal lighting.



Figure 5.1: Detailed view of the control panel buttons and digital displays.

- **Power Button (U):** Press to turn the unit ON or OFF.
- **Light Button (O):** Press to turn the interior LED light ON or OFF.
- **Zone Selection (I):** Press to select the upper or lower temperature zone for adjustment.

- **Temperature Up (^) / Down (v):** Use these buttons to increase or decrease the desired temperature for the selected zone. Each press adjusts by 1F.
- **C / F Switch:** Press to toggle the temperature display between Celsius and Fahrenheit.

Setting Temperatures

1. Press the Zone Selection button to choose either the upper or lower zone. The selected zone's display will flash.
2. Use the Temperature Up or Down buttons to set your desired temperature.
3. After a few seconds, the display will stop flashing, indicating the new temperature is set. The unit will then work to reach and maintain this temperature.

Recommended Temperatures:

- Upper Zone (White/Sparkling Wines): 40F - 55F (5C - 13C)
- Lower Zone (Red Wines): 55F - 65F (13C - 18C)

6. MAINTENANCE & CLEANING

Cleaning the Interior

- Always unplug the unit before cleaning.
- Remove all bottles and shelves.
- Wash the interior with a mild detergent and warm water solution. Do not use abrasive cleaners.
- Rinse thoroughly and wipe dry with a clean, soft cloth.
- Clean the wooden shelves with a damp cloth and dry immediately to prevent warping.

Cleaning the Exterior

- Wipe the exterior with a soft cloth and mild detergent.
- For stainless steel surfaces, use a stainless steel cleaner and polish in the direction of the grain.
- Clean the door gasket regularly to ensure a proper seal.

Defrosting

The Upstreman W54 features a semi-automatic defrost system. Frost will accumulate on the back wall of the unit and defrost periodically. The defrosted water is collected in a drain pan at the back of the unit and evaporates.

- Ensure the drain hole at the bottom of the interior is clear to allow water to escape.
- If excessive frost builds up, manually defrost the unit by unplugging it and leaving the door open until the frost melts.

7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Wine cooler does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough.	Door not closed properly; door gasket worn; excessive door openings; unit near heat source; poor ventilation.	Check door seal; replace gasket if necessary; reduce door openings; relocate unit; ensure proper clearance.

Problem	Possible Cause	Solution
Unit is making too much noise.	Unit not level; loose parts; fan obstruction.	Adjust leveling feet; check for loose components; ensure nothing is blocking the fan.
Vibration.	Unit not level; bottles touching each other or interior walls.	Adjust leveling feet; rearrange bottles to prevent contact.
Moisture buildup on glass door.	High humidity; frequent door openings.	This is normal in humid conditions. Reduce door openings.

8. SPECIFICATIONS

Detailed technical specifications for the Upstreman W54 Wine Cooler:

Feature	Specification
Model Name	W54
Product Dimensions (D x W x H)	22.64"D x 23.43"W x 34.25"H
Capacity	4.2 Cubic Feet (54 standard 750ml bottles)
Configuration	Compact Side-by-Side
Color	Stainless
Installation Type	Freestanding / Built-in
Number of Doors	1
Defrost System	Semi-Automatic
Voltage	115 Volts
Cooling Method	Compressor
Number Of Shelves	7
Adjustable Temperature Control	Yes
Item Weight	92.59 Pounds
Annual Energy Consumption	170 Kilowatt Hours Per Year
Included Components	Wine Cooler Refrigerator

9. WARRANTY & SUPPORT

Warranty Information

This Upstreman W54 Wine Cooler is covered by a **1-Year Manufacturer's Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or general inquiries, please contact Upstreman customer support:

- **Website:** [Visit the Upstreman Store on Amazon](#)
- **Email:** support@upstreman.com (Example email, please refer to your product documentation for actual contact details)
- **Phone:** 1-800-XXX-XXXX (Example phone, please refer to your product documentation for actual contact details)

When contacting support, please have your model number (W54) and purchase date available.