

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Migipaws](#) /

> [Migipaws Interactive Cat Toy - Migibox User Manual](#)

Migipaws B0GBSV6DXF

Migipaws Interactive Cat Toy - Migibox User Manual

Model: B0GBSV6DXF

INTRODUCTION

The Migipaws Migibox is an interactive cat toy designed to engage your cat's natural hunting instincts. It features automatically popping feathers from multiple holes, activated by motion, providing stimulating play for indoor cats. This manual provides essential information for the proper setup, operation, and maintenance of your Migibox.

KEY FEATURES

- **7-Hole Design:** Patented technology with colorful feathers randomly popping out and hiding from 7 holes, mimicking prey movement.
- **Automatic Motion Sensor:** Activates the toy when your cat is within 50cm, promoting independent play.
- **Auto-Off Function:** Automatically turns off after 5 minutes of inactivity to conserve battery.
- **Safe and Durable Materials:** Soft, paw-safe, and scratch-resistant feathers. All materials comply with EU and ASTM environmental and safety standards.
- **USB-C Rechargeable:** Convenient charging for sustained play.
- **Stimulates Hunting Instincts:** Encourages active hunting, pouncing, and catching behaviors.
- **Reusable Packaging:** The cardboard packaging can be repurposed as an additional puzzle toy by poking out pre-marked holes and inserting small toys.

SETUP

1. Charging the Device:

Locate the USB-C charging port on the underside of the Migibox. Use the supplied 5V 1A Type-C cable to charge the device. A red indicator light will show during charging.

Please use the supplied 5V 1A Type-C cable

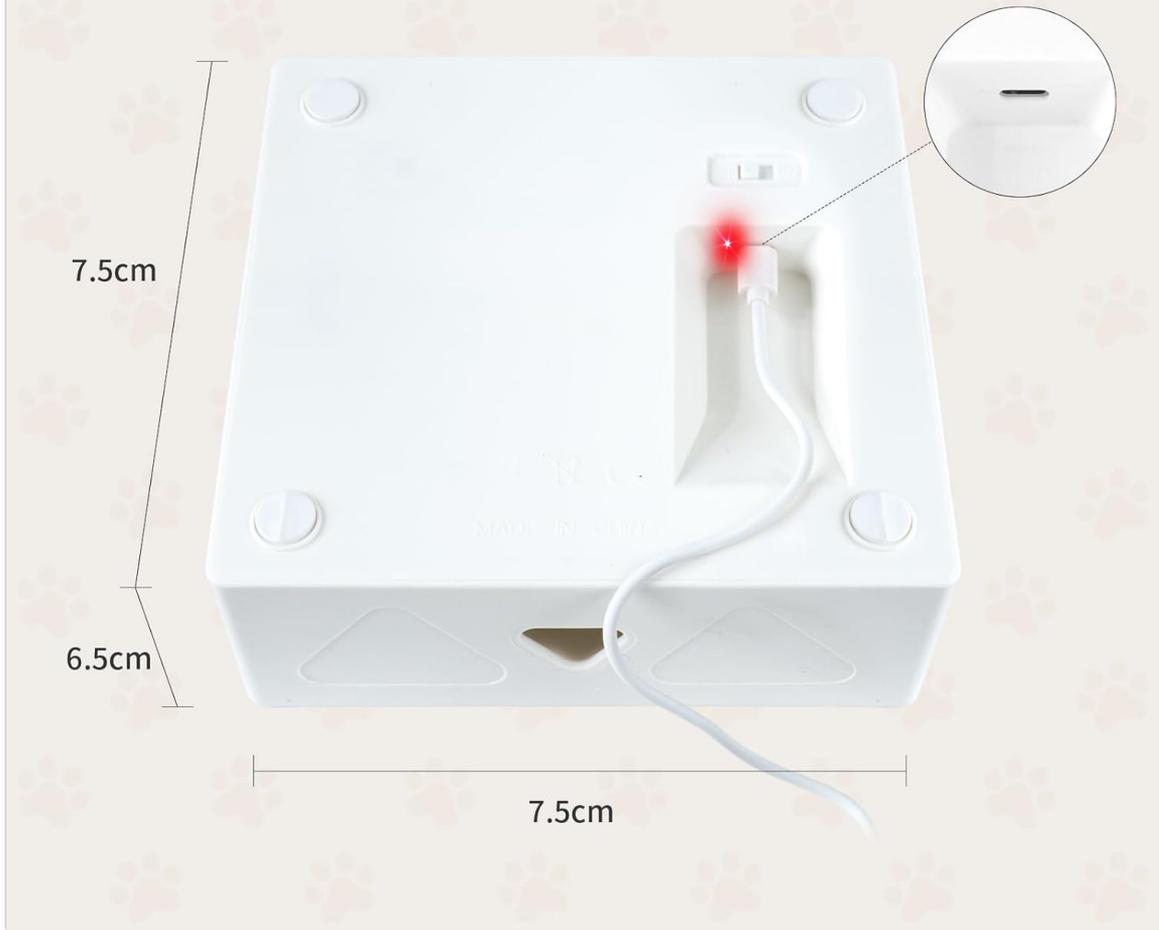


Image: The underside of the Migibox showing the USB-C charging port and the red indicator light, with dimensions of 7.5cm x 7.5cm x 6.5cm.

2. Inserting Feathers:

Open the top cover of the Migibox. Carefully screw the desired feather attachment onto the central mechanism. Ensure it is securely fastened before closing the cover.

How to replace feathers



Image: A visual guide demonstrating how to open the top cover, screw in a new feather attachment, close the cover, and secure it.

3. Optional Fabric Cover:

If using a fabric cover (sold separately or included in some variants), ensure the metal ring on the cover aligns with the motion sensor on the side of the Migibox to avoid blocking the sensor's functionality.

OPERATING INSTRUCTIONS

1. Power On/Off:

Locate the power switch on the underside of the Migibox. Slide the switch to the 'On' position to activate the toy. Slide to 'Off' to power down.

2. Motion Activation:

The Migibox is equipped with an intelligent motion sensor. When your cat approaches within approximately 50cm, the feathers will begin to pop out and retract randomly from the various holes.

I just can't help getting hooked!

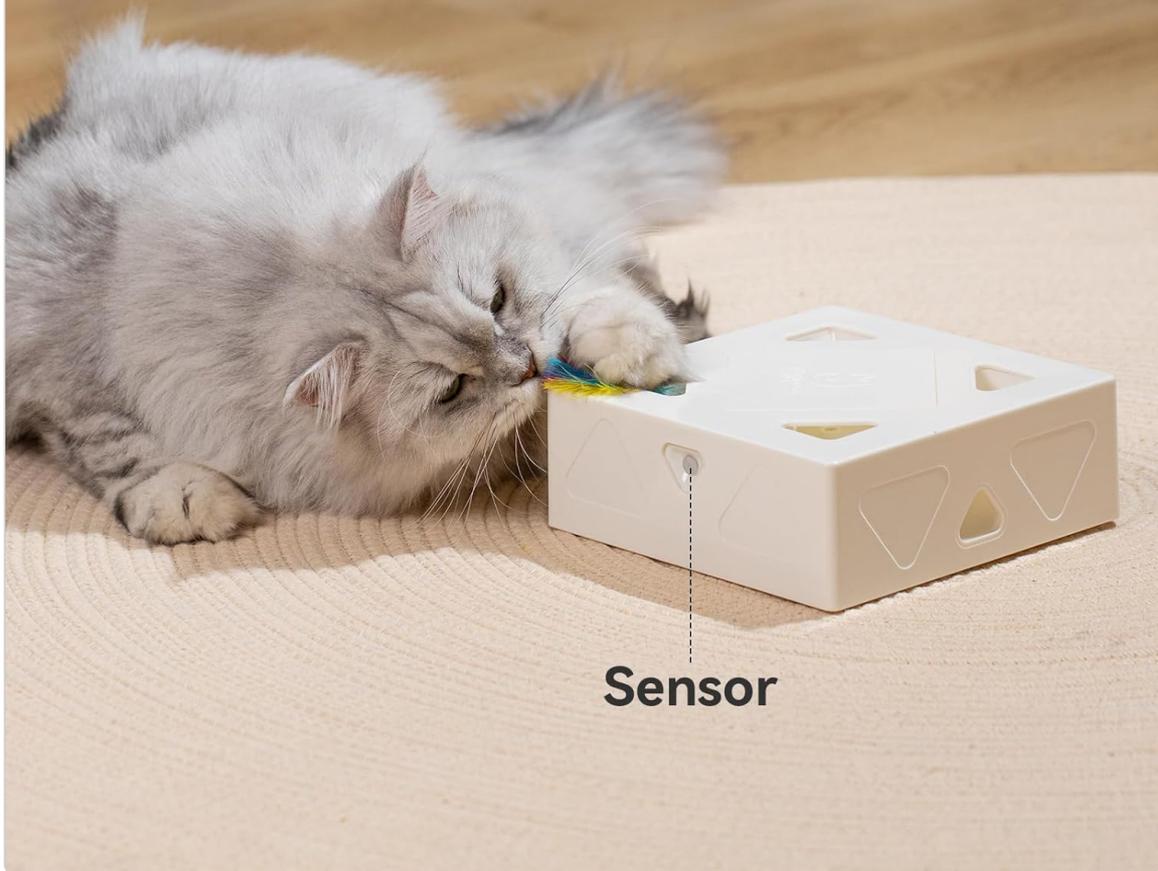


Image: A cat engaging with the Migibox, with an arrow pointing to the motion sensor on the side of the toy.

3. **Automatic Standby:**

If no motion is detected for 5 minutes, the toy will automatically enter standby mode to conserve battery life. It will reactivate once motion is detected again.

Smart Cat Box



Image: An infographic detailing the Migibox's smart features, including its 7-hole design, AI software for random feather movement, 5-minute auto-off, 2-3 feet detecting range, infrared sensor, safe materials, and USB-C rechargeable battery.

MAINTENANCE

- **Feather Replacement:** The Migibox comes with 3 replacement feathers. If the existing feather becomes worn or damaged, follow the steps in the "Inserting Feathers" section to replace it. Replacement feathers can be purchased by searching ASIN: B0917PC7S9.
- **Cleaning:** Wipe the exterior of the Migibox with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

- **Toy not activating:** Ensure the device is fully charged and the power switch is in the 'On' position. Check that the motion sensor is not obstructed, especially if a fabric cover is used.
- **Cat is hesitant to play:** Cats are creatures of habit. Introduce the toy gradually. Allow your cat to observe it first, then try short play sessions. Some cats may take time to adjust to new interactive toys.
- **Battery life seems short:** The toy has a 5-minute auto-off function. If it's activating frequently without interaction, ensure it's placed in an area where accidental motion detection is minimized. Fully charge

the device before each use.

- **Noise level:** While designed to be relatively quiet, some mechanical noise is normal during operation. If the noise is excessive or unusual, contact customer support.

SPECIFICATIONS

Attribute	Detail
Brand Name	Migipaws
Model Number	B0GBSV6DXF
Color	White
Size	Normal
Material	Feather
Product Dimensions (LxWxH)	7.28 x 7.28 x 2.76 inches
Power Source	USB-C Rechargeable
Manufacturer	Nanjing Dimeng Technology Co.,LTD.

WARRANTY AND SUPPORT

For any initial defects or product issues, please contact the store where you purchased the Migibox. They will provide prompt assistance and support.