

[Manuals.plus](#) /

> [Crelander](#) /

> Crelander 8.7-inch Android 15 Tablet User Manual (Model: Upgraded Version)

Crelander Upgraded Version

Crelander 8.7-inch Android 15 Tablet User Manual

Model: Upgraded Version

1. INTRODUCTION

Welcome to the user manual for your new Crelander 8.7-inch Android 15 Tablet. This guide provides essential information for setting up, operating, and maintaining your device. Featuring an HD IPS 1340x800 display, 16GB RAM, 128GB ROM, 5MP front and 13MP rear cameras, and a 5000mAh battery, this tablet is designed for a smooth and enjoyable user experience. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

2. WHAT'S IN THE BOX

Upon unboxing your Crelander 8.7-inch Android 15 Tablet, you should find the following items:

- Crelander 8.7-inch Android 15 Tablet (Upgraded Version)
- Protective Case
- USB-C Charging Cable
- Power Adapter
- User Manual

Note: Additional accessories may be included depending on your specific package.

3. PRODUCT OVERVIEW

The Crelander 8.7-inch Android 15 Tablet is designed for portability and performance. It weighs just 335g, making it comfortable for handheld use. The tablet features a custom-tailored modern design that reduces strain during extended use.

3.1 Physical Features

- **Display:** 8.68-inch IPS HD touchscreen with 1340x800 pixels resolution and 60Hz refresh rate.
- **Cameras:** 5MP front camera and 13MP rear camera.
- **Ports:** USB-C port for charging and data transfer, 3.5mm audio jack.
- **Buttons:** Power button, Volume up/down buttons.
- **Connectivity:** Wi-Fi (802.11 ac/b/g/n) and Bluetooth.

3.2 Key Components

8.7 inch Incell Display

8.7inch incell screen ,wide field of view and agile body, 60Hz high refresh rate. P3 HDR wide color gamut, Smoother and clearer when watching movies



-  8.7inch
-  1340x800
-  Multi-Touch
-  16:10 16:9

Figure 3.1: The Crelander 8.7-inch Android 15 Tablet with its protective case. The tablet is shown from the front, highlighting its sleek design and the included protective accessory.

Record the moment and restore the reality

The rear is equipped with a 13MP high-definition camera with autofocus. Flash photography is equally clear day or night. The front-facing 5MP beauty camera brings you excellent shooting, high-definition video chat and webcast



5MP
Rear camera



13MP
Front camera



Figure 3.2: Rear view of the tablet, showcasing the 13MP main camera module. The tablet's back panel has a matte finish for a comfortable grip.

Light in Hand, Vision Boundless

Slim and lightweight design is not only an external aesthetic, but also pursuit of convenient living.



Figure 3.3: Side view of the tablet, illustrating the placement of the USB-C port, 3.5mm audio jack, and volume/power buttons. This view emphasizes the tablet's slim profile.

4. SETUP

4.1 Initial Power On

1. Press and hold the Power button located on the side of the tablet until the Crelander logo appears on the screen.
2. Follow the on-screen prompts to select your language, region, and accept the terms and conditions.

4.2 Network Connection

1. During the initial setup, you will be prompted to connect to a Wi-Fi network. Select your desired network from the list.
2. Enter the Wi-Fi password if required and tap 'Connect'.
3. Once connected, the tablet will proceed with the rest of the setup, including Google account sign-in and app

restoration.

4.3 Charging the Battery

Before first use, it is recommended to fully charge your tablet. Connect the provided USB-C cable to the tablet's USB-C port and the power adapter, then plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- **Touchscreen:** Navigate the tablet using touch gestures such as tap, swipe, pinch-to-zoom, and long-press.
- **Home Screen:** Swipe left or right to access different home screen panels. Swipe up from the bottom to view all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to access notifications and quick settings toggles (Wi-Fi, Bluetooth, etc.).

5.2 Using Applications

Your Crelander tablet runs on Android 15, providing access to a vast ecosystem of applications via the Google Play Store. Pre-installed Google apps include Drive, Files, Gmail, Google, Maps, Meet, Photos, Play Books, Play Store, YouTube, and YouTube Kids.

8.7-inch Incell Display Android 15 tablet

It's simpler and smarter, with an intuitive, easy-to-use interface and new features for a smoother, easier, and safer user experience.



Figure 5.1: The tablet's home screen showing a variety of pre-installed and user-downloaded applications, demonstrating the Android 15 interface.

5.3 Camera Operation

The tablet is equipped with a 5MP front camera and a 13MP rear camera for capturing photos and videos.

1. Open the Camera app from the home screen or app drawer.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or the video icon to record a video.

Eight core processor

128GB large memory

Starting with large storage,the highest level 128GB storage, photos, videos,apps.Download applications to your heart's content.

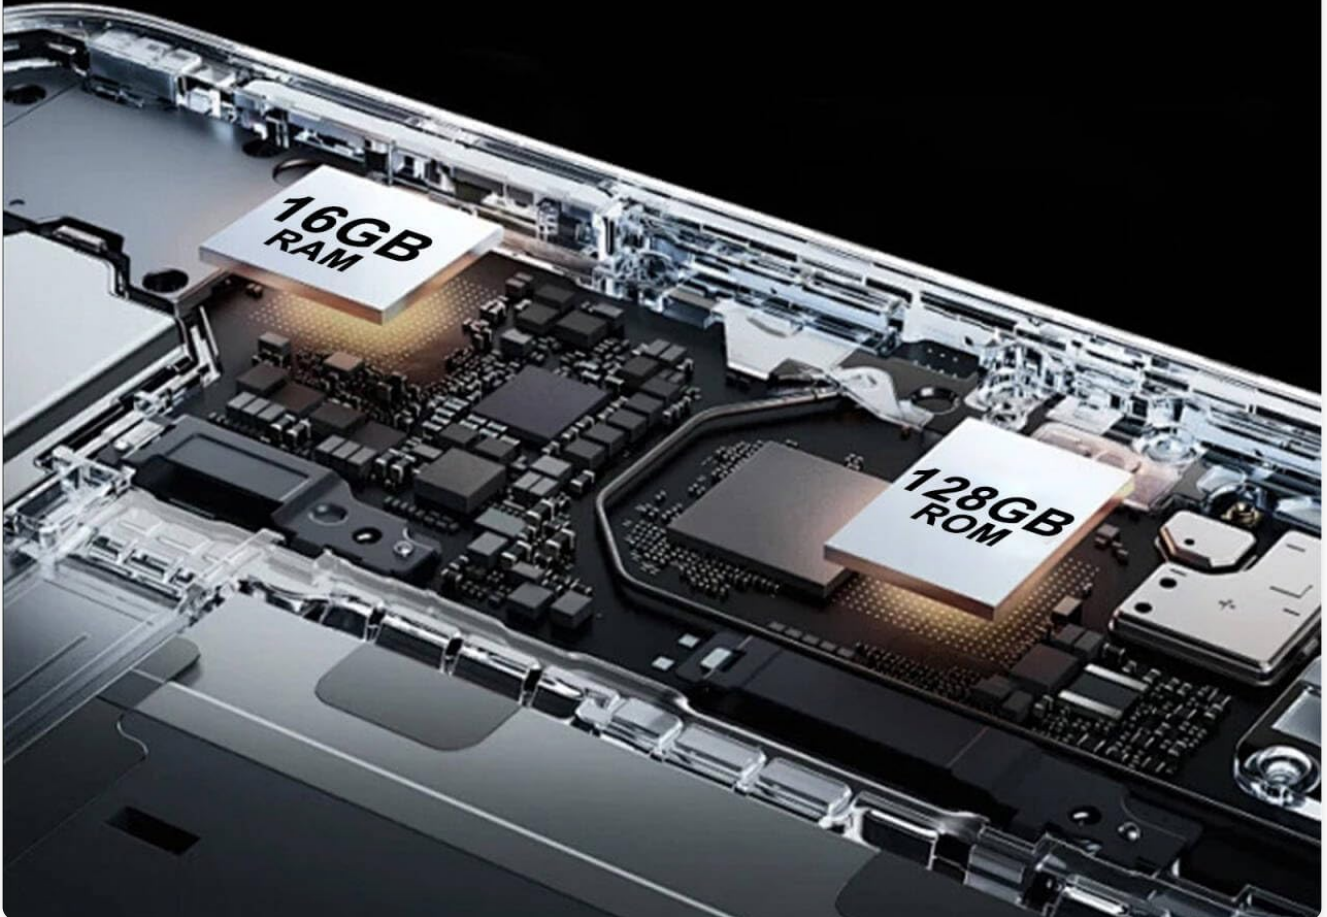


Figure 5.2: The tablet's camera interface, showing options for photo and video capture, and the ability to switch between front and rear cameras.

6. MEDIA INTEGRATION

6.1 Official Product Videos

Below are official product videos from the seller, demonstrating various features and uses of the Crelander Android Tablet.

Video 6.1: An overview of the Crelander Android 15 Tablet, highlighting its design and core functionalities. This video provides a general introduction to the device.

Video 6.2: A detailed review of the Crelander Android Tablet, offering insights into its performance and user experience before purchase.

7. SPECIFICATIONS

Feature	Detail
Brand	Crelander
Model Name	W87
Model Number	Upgraded Version
Operating System	Android 15
Screen Size	8.68 Inches
Display Type	Incell
Display Resolution Maximum	1340x800 Pixels
Display Refresh Rate	60 Hz
RAM Memory Installed	16 GB
Memory Storage Capacity	128 GB
Expandable Storage	Up to 1 TB (via microSD, not included)
Processor Brand	Unisoc
Processor Description	Unisoc SC9863A
Processor Speed	1.6 GHz
Rear Facing Camera Photo Sensor Resolution	13 MP
Front Camera	5 MP
Video Capture Resolution	HD 720p
Battery Capacity	5135 Milliamp Hours (19 Watt Hours)
Wireless Technology	Wi-Fi (802.11 ac/b/g/n), Bluetooth
Cellular Technology	NO
Item Dimensions L x W x Thickness	10"L x 6"W x 1"Th
Color	Black

8. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security. Go to Settings > System > System update.
- **Battery Care:** To prolong battery life, avoid exposing the tablet to extreme temperatures. Do not let the battery completely drain frequently.

- **Storage Management:** Periodically clear unnecessary files and apps to free up storage space and maintain performance.

9. TROUBLESHOOTING

9.1 Common Issues and Solutions

- **Tablet not turning on:** Ensure the battery is charged. Connect the tablet to the charger and try powering it on after a few minutes.
- **Wi-Fi connection issues:** Check if Wi-Fi is enabled in Quick Settings. Restart your Wi-Fi router and the tablet.
- **Apps crashing or freezing:** Close and reopen the app. If the issue persists, clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache).
- **Slow performance:** Close unused apps, clear cache, and ensure sufficient storage space. Restarting the tablet can also help.

10. WARRANTY & SUPPORT

Crelander offers a **3-month product warranty** for this tablet. For any inquiries, technical assistance, or warranty claims, please contact Crelander customer support through the retailer where you purchased the device or visit the official Crelander website for support contact information.