

HOMEFUN B0GBVWHZLR

HOMEFUN Outdoor Chaise Lounge Chair with Cushion User Manual

Brand: HOMEFUN

Model: B0GBVWHZLR

1. INTRODUCTION

The HOMEFUN Outdoor Chaise Lounge Chair with Cushion is designed for comfortable outdoor relaxation. This lounge features a durable cast aluminum frame, adjustable reclining positions, and a weather-resistant cushion, making it suitable for various outdoor settings such as patios, poolsides, and gardens.

2. SAFETY INFORMATION

Important: Please read and understand all safety instructions before assembly and use.

- Always follow the assembly instructions carefully to ensure correct setup.
- Ensure the product is stable and all fasteners are securely tightened before each use to prevent injuries.
- Do not exceed the maximum weight recommendation of 330 pounds.
- Keep small parts away from children during assembly.
- Avoid placing the lounge chair on uneven surfaces.
- Regularly inspect the chair for any loose parts or damage. Discontinue use if damage is found.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Backrest Frame
- Seat/Base Frame
- Armrests (2)
- Legs (2 front, 2 rear)

- Wheels (2)
- Crossbar for wheels
- Cushion (Seat and Back)
- Assembly Hardware (Screws, Washers, Spacers, Nuts)
- Assembly Tools (Wrench, Allen Key - usually included)

4. SETUP AND ASSEMBLY

Assembly is required for this chaise lounge. Please follow the steps below. For visual guidance, refer to the official installation video.

Your browser does not support the video tag.

Video: Official Installation Guide for HOMEFUN Outdoor Chaise Lounge.

1. **Install Backrest Bracket:** Attach the backrest bracket to the backrest frame using 2 screws. Ensure two spacers are used as shown in the video. Tighten the screws securely.
2. **Prepare Crossbar:** Remove the screws from the crossbar.
3. **Install Side Armrests:** Attach one side armrest to the main seat frame using 2 screws. Ensure two spacers are used. Tighten the screws.
4. **Install Wheels:** Insert the crossbar through the wheel mounts. Put the screw on the spacer to install each wheel.
5. **Mount Legs:** Attach the four legs to the underside of the main seat frame using 4 screws. Ensure two spacers are used for each leg. Tighten the screws.
6. **Fasten Backrest and Armrest:** Connect the backrest to the armrests using screws. Spacers may be needed between the armrest and the backrest for proper alignment.
7. **Final Tightening:** Double-check all screws and ensure they are fully tightened for stability.
8. **Place Cushion:** Carefully place the cushion onto the assembled chaise lounge. Use the attached ties or straps to fix the cushion to the frame, preventing it from sliding.

5. OPERATING INSTRUCTIONS

5.1. Adjusting Reclining Positions

The chaise lounge offers five backrest tilting positions for optimal comfort:

- **120° or 135°:** Ideal for reading or light activity.
- **150° or 165°:** Suitable for relaxing.
- **175°:** Perfect for napping or lying flat.

To adjust, gently lift the backrest and select your desired notch on the support mechanism. Ensure the backrest is securely seated in the chosen position before use.

5 RECLINING POSITIONS

More comfortable angle for you



120-135°
for Reading



150-160°
for Relaxing



175°
for Napping



Image: Visual representation of the five adjustable reclining positions.

5.2. Moving the Chaise Lounge

The chaise lounge is equipped with wheels for improved mobility. To move the chair, slightly lift the front end and roll it to your desired location using the rear wheels. Ensure the path is clear of obstacles.

CAST ALUMINUM

RATTAN



STURDY

VS

 


EASY TO DEFORM




DURABLE

VS

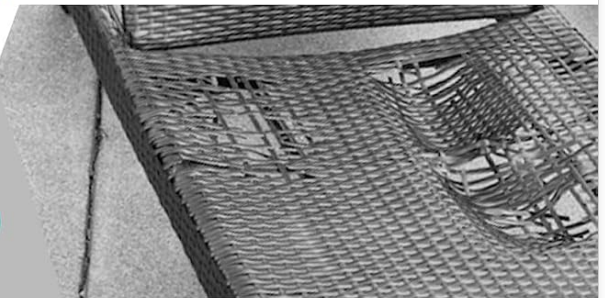

FALL APART

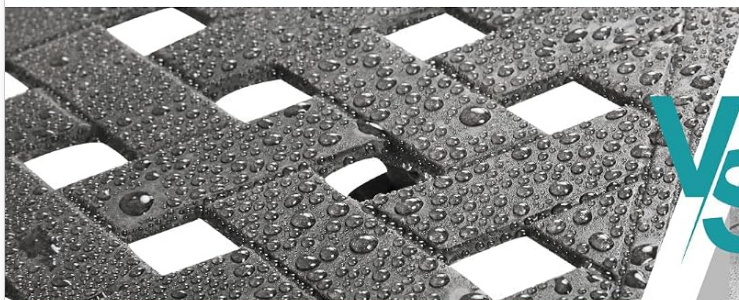 

RUST-PROOF

VS



NO RUST

Image: Close-up of the movable wheels and adjustable foot pads for stability.

6. MAINTENANCE

6.1. Frame Care

- The cast aluminum frame is designed for outdoor use and is rust-resistant.
- To clean, simply wipe with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent water spots.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.

6.2. Cushion Care

- The cushion cover is detachable and easy to clean.
- It is splash-proof, offering protection against light moisture. For heavy rain or prolonged periods of non-use, it is recommended to store cushions indoors or cover them to extend their lifespan.
- Spot clean with a mild soap solution and water. For deeper cleaning, remove the cover and follow the care instructions on the label.

 
COMFORTABLE CUSHION



Thick Cushion



Removable Cover
Easy to Clean

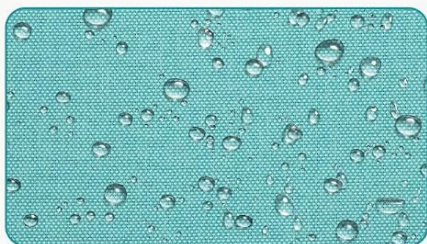

Splash Proof



Image: Details of the comfortable, thick, and removable cushion with splash-proof fabric.

7. TROUBLESHOOTING

If you encounter any issues with your HOMEFUN Outdoor Chaise Lounge, please consider the following:

- **Stability Issues:** Ensure all assembly screws are tightened. Check that the chair is placed on a flat, even surface. The adjustable foot pads can help compensate for minor unevenness.
- **Difficulty Adjusting Backrest:** Ensure no debris is obstructing the reclining mechanism. Apply light lubricant if the mechanism feels stiff.
- **Cushion Slippage:** Verify that the cushion ties are securely fastened to the chair frame.

For persistent problems or issues not covered here, please contact HOMEFUN customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	HOMEFUN
Model Number	B0GBVWHZLR
Color	Cyan Cushion (as per current variant)
Material	Aluminum (Frame), Foam (Cushion Fill)
Product Dimensions (D x W x H)	45"D x 24"W x 39"H
Item Weight	50 Pounds
Maximum Weight Recommendation	330 Pounds
Reclining Position Count	5 Positions
Indoor/Outdoor Usage	Outdoor
Assembly Required	Yes

5 RECLINING POSITIONS

More comfortable angle for you



120-135° for Reading



150-160° for Relaxing



175° for Napping



Image: Product dimensions and maximum weight capacity details.

9. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your HOMEFUN Outdoor Chaise Lounge, please do not hesitate to contact our customer support team. We are committed to providing the best possible service and will do our best to help you with any product or shipment-related issues.

Please refer to your purchase documentation for specific contact details or visit the official HOMEFUN store on Amazon.

Online Store: [HOMEFUN Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question