

[Manuals.plus](#) /

› [iCan](#) /

› iCAN K9973 Wired Gaming Keyboard User Manual

iCan K9973

iCAN K9973 Wired Gaming Keyboard User Manual

Model: K9973

1. INTRODUCTION

The iCAN K9973 is a full-size 104-key wired gaming keyboard designed for various computing environments. It features vibrant rainbow LED backlighting, whisper-quiet membrane keys, a dedicated numeric keypad, and 12 multimedia shortcuts. The keyboard is built with a spill-resistant design and 19-key anti-ghosting technology for reliable performance.

Rainbow LED Backlight

Immersive Gaming Atmosphere



Image 1.1: Overview of the iCAN K9973 Wired Gaming Keyboard, showcasing its full 104-key layout and rainbow LED backlighting.

2. SETUP INSTRUCTIONS

2.1 Connecting the Keyboard

1. Locate an available USB port on your PC, laptop, Mac, or gaming console.
2. Plug the 1.5m USB cable from the iCAN K9973 keyboard into the USB port.
3. The keyboard is plug-and-play; no additional drivers or software installation is required. Your operating system should automatically detect and configure the device.

2.2 Adjusting Keyboard Angle

For ergonomic comfort, the keyboard features foldable rear legs. Gently flip out these legs located on the underside of the

keyboard to achieve a preferred typing angle. Fold them back in for a flatter profile.



Image 2.1: The underside of the keyboard with a close-up of the adjustable tilt legs, which can be extended for an angled typing position.

3. OPERATING INSTRUCTIONS

3.1 Rainbow LED Backlight Control

The iCAN K9973 keyboard features a rainbow LED backlight with adjustable settings:

- **Adjust Brightness:** Press **FN + Page Up** to increase brightness. Press **FN + Page Down** to decrease brightness.
- **Breathing Mode:** Press **FN + LED Key** (usually located near Scroll Lock) to activate or deactivate the breathing light effect.

Note: The LED light colors are fixed in zones across the keyboard and are not individually customizable.



Image 3.1: The iCAN K9973 keyboard illuminated with its rainbow LED backlight, providing visibility in low-light conditions.

3.2 Multimedia Shortcuts

The keyboard includes 12 multimedia shortcuts (FN+F1-F12) and dedicated media control buttons for quick access to common functions:

- **FN + F1:** Media Player
- **FN + F2:** Volume Down
- **FN + F3:** Volume Up
- **FN + F4:** Mute
- **FN + F5:** Stop
- **FN + F6:** Previous Track
- **FN + F7:** Play/Pause
- **FN + F8:** Next Track
- **FN + F9:** Email

- **FN + F10:** Web Browser
- **FN + F11:** My Computer
- **FN + F12:** Calculator

Dedicated buttons for media control (Play/Pause, Stop, Previous, Next, Volume Up/Down) are located above the function keys.



Image 3.2: Close-up of the iCAN K9973 keyboard, illustrating the dedicated media control buttons and FN key shortcuts for quick access to various functions.

4. MAINTENANCE AND CARE

4.1 Cleaning the Keyboard

To maintain optimal performance and appearance, clean your keyboard regularly:

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the keycaps and surface.
- Avoid using harsh chemicals, abrasive cleaners, or solvents.
- Use compressed air to remove dust and debris from between the keys.

4.2 Spill-Resistant Design

The iCAN K9973 features a sealed membrane design to offer protection against accidental liquid splashes. While it is spill-resistant, it is not waterproof. Do not submerge the keyboard in water or expose it to excessive liquids. In case of a spill, immediately disconnect the keyboard and allow it to dry completely before reconnecting.



Image 4.1: The underside of the iCAN K9973 keyboard, illustrating its sealed membrane design for spill resistance.

5. TROUBLESHOOTING

If you encounter issues with your iCAN K9973 keyboard, please refer to the following common solutions:

- **Keyboard Not Responding:**
 - Ensure the USB cable is securely plugged into a functional USB port on your computer.
 - Try plugging the keyboard into a different USB port.
 - Restart your computer.
- **Backlight Not Working or Dim:**
 - Check if the backlight brightness is set to maximum using **FN + Page Up**.
 - Ensure the keyboard is properly connected and receiving power.
- **Keys Not Registering or Ghosting:**
 - The keyboard features 19-key anti-ghosting. If multiple keys are not registering, ensure no debris is lodged under the keys.
 - Test the keyboard on another computer to rule out system-specific issues.

6. SPECIFICATIONS

Model	K9973
Brand	iCan
Keyboard Layout	QWERTY, 104-Key Full Size with Numeric Keypad
Key Type	Membrane
Backlight	Rainbow LED (fixed zones, adjustable brightness, breathing mode)
Connectivity	Wired USB
Cable Length	1.5m
Anti-Ghosting	19-Key
Special Features	Spill-Resistant Design, Multimedia Shortcuts, Adjustable Tilt Legs
Compatible Devices	PC, Mac, Gaming Console
Product Dimensions (L x W x H)	44.3 cm x 16.2 cm x 3 cm (approximate)
Weight	840 g
Manufacturer	Canada Computers & Electronics
Country of Origin	China

Standard 104-Key Layout with Numeric Keypad



Image 6.1: The iCAN K9973 keyboard with its approximate length (44.3cm) and width (16.2cm) dimensions labeled.

7. WARRANTY INFORMATION

No explicit warranty information is provided with this product. For details regarding returns or potential defects, please refer to the retailer's return policy or contact the point of purchase.

8. CUSTOMER SUPPORT

For further assistance or inquiries regarding your iCAN K9973 Wired Gaming Keyboard, please contact the retailer or the manufacturer, Canada Computers & Electronics, through their official support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question