

Vongrasig SHX15754-WH-6

Vongrasig Kitchen Pantry Cabinet Instruction Manual

Model: SHX15754-WH-6

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Two-Person Assembly:** This product requires two people for safe assembly due to its size and weight. Ensure you have assistance before beginning.
- **Anti-Tipping Device:** Always install the included anti-tipping device to secure the cabinet to the wall. This prevents accidental tipping and potential injury, especially in households with children or pets.
- **Weight Limits:** Do not exceed the specified weight limits for shelves and compartments. Overloading can compromise stability and cause damage.
- **Stable Surface:** Place the cabinet on a flat, level, and stable surface to ensure proper balance and prevent wobbling.
- **Children Safety:** Do not allow children to climb on or play with the cabinet. Keep small parts and hardware out of reach of children during assembly.

2. SETUP AND ASSEMBLY

Assembly is required for this Vongrasig Kitchen Pantry Cabinet. It is recommended to assemble with a companion. Ensure all parts are present before starting.

2.1. Unpacking and Part Identification

- Carefully unpack all components from the packaging.
- Lay out all parts on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches.

- Refer to the included parts list and hardware diagram to identify each component. Contact customer support immediately if any parts are missing or damaged.

2.2. Assembly Steps

Follow the step-by-step instructions provided in the separate assembly guide included with your product. General steps typically involve:

1. Assemble the base frame of the cabinet.
2. Attach side panels and back panels. Ensure the hole in the back panel is correctly oriented for appliance link charging if desired.
3. Install shelves and dividers. The middle shelf is adjustable to 3 heights.
4. Assemble and install the drawer.
5. Attach doors, including the two clear acrylic cabinet doors for the upper section.
6. Install handles and any other decorative hardware.
7. Secure the anti-tipping device to the top rear of the cabinet and to a wall stud using appropriate hardware.

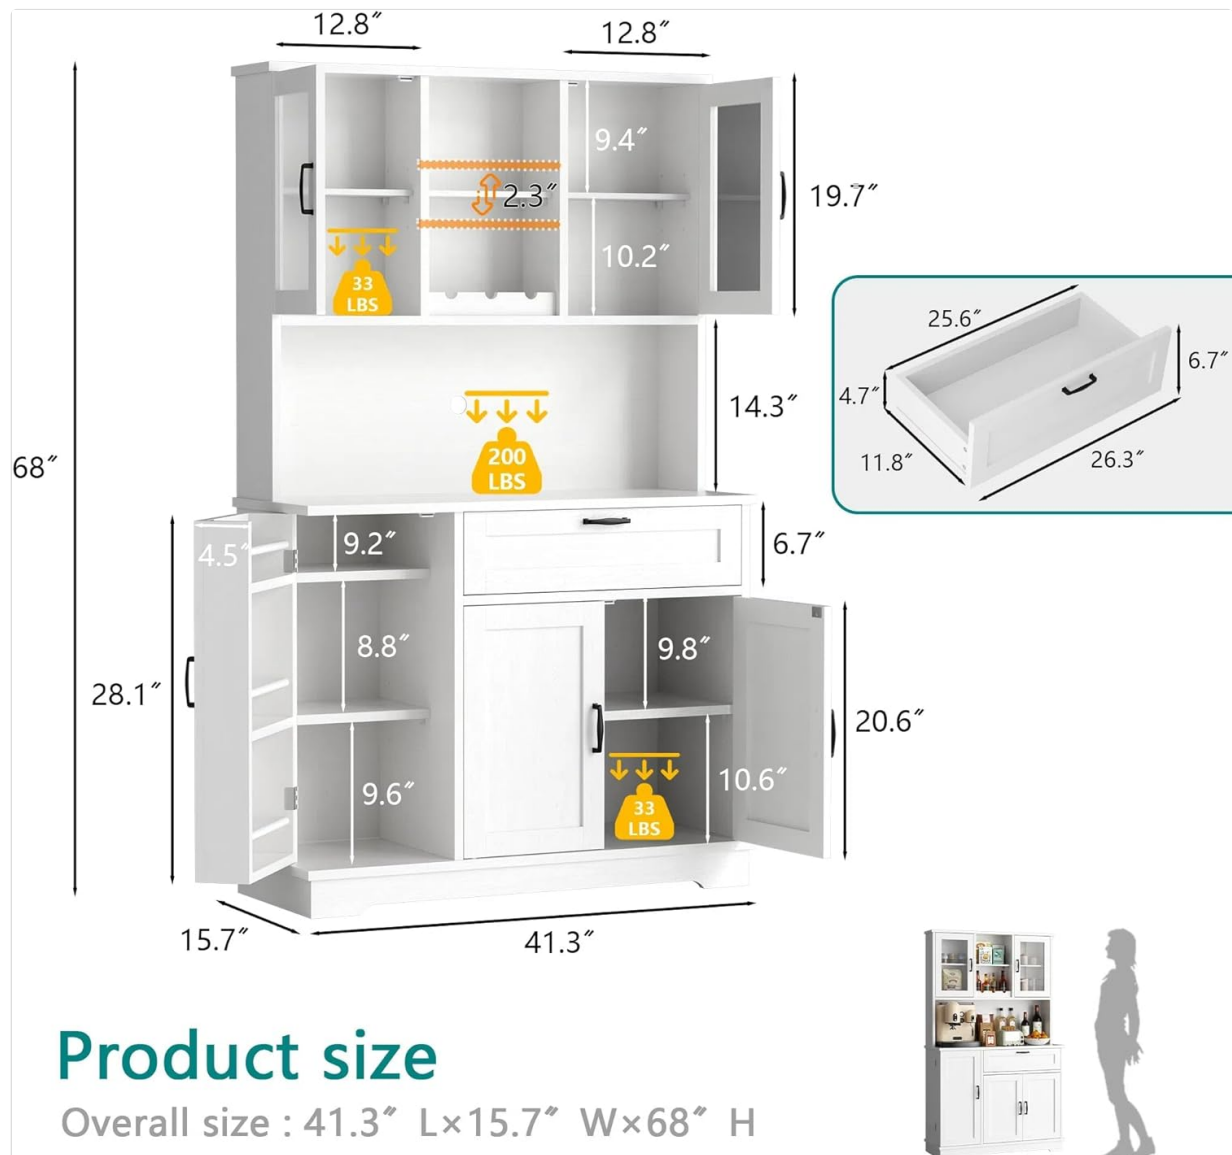


Figure 1: Product dimensions and internal structure. Overall size: 41.3"W x 15.7"D x 68"H. Upper shelves support up to 33 lbs each, the open middle section supports up to 200 lbs, and lower shelves support up to 33 lbs each. The drawer measures 25.6"W x 11.8"D x 6.7"H internally.

Large storage drawer



Figure 2: Details of the large storage drawer, featuring a waterproof surface, the anti-tipping device for wall attachment, and the sturdy base design.

3 heights can be adjusted to meet your needs



Figure 3: Illustration of the adjustable shelf feature, showing three possible height settings to accommodate various item sizes.

3. OPERATING INSTRUCTIONS

The Vongrasig Kitchen Pantry Cabinet is designed for versatile storage in various rooms.

3.1. Storage Utilization

- **Top Cabinets (with clear acrylic doors):** Ideal for displaying glassware, decorative items, or frequently accessed pantry staples.
- **Open Compartments:** Suitable for appliances like coffee makers, toasters, or for easy access to daily-use items. The back panel includes a hole for appliance cords.
- **Privacy Drawer:** Use for storing utensils, small accessories, or other items you wish to keep out of sight.
- **Lower Cabinets:** Provide ample space for larger items, bottles, or bulkier pantry goods. The adjustable shelf allows customization for different heights.
- **Removable Wine Rack:** Utilize the integrated wine rack for organized bottle storage, or remove it for more general shelf space.



Figure 4: The Vongrasig Kitchen Pantry Cabinet in use, demonstrating its capacity for storing kitchen appliances, pantry items, and beverages.

Ample storage space

suitable for dining room, living room, kitchen.



Figure 5: Visual representation of the cabinet's ample storage space, including top cabinets for tins and bottles, open compartments for commonly used items, and a privacy drawer for bits and pieces.

4. MAINTENANCE

Proper care will ensure the longevity and appearance of your Vongrasig Kitchen Pantry Cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the painted finish.
- **Spills:** Clean up spills immediately to prevent moisture damage, especially on the engineered wood surfaces.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain structural integrity.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.
- **Humidity:** Maintain a stable humidity level in the room to prevent warping or cracking of the wood material.

5. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Uneven floor; loose fasteners; anti-tipping device not installed.	Ensure cabinet is on a level surface. Tighten all assembly screws. Install the anti-tipping device securely to a wall stud.
Drawer does not slide smoothly.	Improper rail alignment; debris in rails.	Check that drawer rails are correctly installed and aligned. Clean any dust or debris from the rails.
Doors do not close properly or are misaligned.	Loose hinge screws; improper hinge adjustment.	Tighten hinge screws. Adjust hinges as needed (refer to hinge manufacturer's instructions if specific adjustments are required).
Missing hardware or damaged parts upon arrival.	Shipping error or manufacturing defect.	Do not proceed with assembly. Contact Vongrasig customer support immediately for replacement parts.

6. SPECIFICATIONS

Feature	Detail
Brand	Vongrasig
Model Number	SHX15754-WH-6
Color	White
Material	Wood, Engineered Wood
Product Dimensions (D x W x H)	15.7" x 41.3" x 68"
Item Weight	95 Pounds
Number of Compartments	7
Number of Shelves	8 (including fixed and adjustable)
Number of Drawers	1
Number of Doors	5 (2 with clear acrylic panels)
Assembly Required	Yes (Two-person assembly recommended)
Mounting Type	Floor Mount (with wall attachment for anti-tipping)
Additional Features	Adjustable Shelf, Removable Wine Rack, Appliance Cord Hole

7. WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. For warranty inquiries, please contact Vongrasig customer support directly through your purchase platform.

8. CUSTOMER SUPPORT

If you encounter any problems, have questions about assembly, or require replacement parts, please contact Vongrasig customer support.

To contact seller via Amazon:

1. Login to your Amazon account.
2. Navigate to "Your Orders".
3. Find the order ID for your Vongrasig Kitchen Pantry Cabinet.
4. Click on "Contact seller".

Please have your order ID and model number (SHX15754-WH-6) ready when contacting support.