



[Manuals.plus](#) /

> [ATSENT](#) /

> ATSENT Grind and Brew Coffee Maker Instruction Manual (Model: Coffee maker parent)

ATSENT Coffee maker parent

ATSENT Grind and Brew Coffee Maker Instruction Manual

Model: Coffee maker parent

INTRODUCTION

Thank you for choosing the ATSENT Grind and Brew Coffee Maker. This appliance is designed to provide fresh, delicious coffee with convenience and versatility. Please read this manual thoroughly before operating the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your coffee maker.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.

- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
- Scalding may occur if the lid is removed during the brewing cycles.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of your ATSENT Grind and Brew Coffee Maker:

- **Water Reservoir:** For adding water for brewing.
- **Bean Hopper with Grinder:** Holds whole coffee beans and grinds them before brewing.
- **Grind Coarseness Selector:** Adjusts the fineness of the coffee grind.
- **Filter Basket:** Holds ground coffee (either freshly ground or pre-ground).
- **Glass Carafe:** Collects the brewed coffee, with capacity markings up to 5 cups.
- **Warming Plate:** Keeps the brewed coffee hot.
- **Control Panel:** Features power, grind, brew strength, and keep-warm settings.
- **Measuring Spoon:** Magnetic spoon for precise coffee measurement.



SETUP AND FIRST USE

Before first use, clean all removable parts according to the 'Cleaning & Maintenance' section. Run two full cycles with only water to clean the internal components.

1. Place the coffee maker on a flat, stable surface.
2. Ensure the filter basket is empty and properly seated.
3. Fill the water reservoir with fresh, cold water up to the desired level (max 5 cups).
4. Plug the appliance into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Brewing with Whole Coffee Beans

1. Open the top lid and add whole coffee beans to the bean hopper. Use the magnetic measuring spoon for accurate quantity.
2. Adjust the grind coarseness using the selector dial inside the bean hopper. Options range from coarse (1-4) for pour-over, medium (5-8) for drip, to fine (9-12) for lattes.
3. Ensure the filter basket is empty and correctly placed.
4. Add water to the reservoir.
5. Press the Power button, then select the 'Grind' option. The machine will grind the beans and then automatically begin the brewing process.
6. Once brewing is complete, the machine will beep and enter the keep-warm mode.

PRODUCT DIMENSIONS

Brew Perfect Cups at Home



The coffee maker supports both whole bean grinding and pre-ground coffee brewing.

2-Way Brew: Beans or Grounds

Grind whole beans for barista-level freshness, or use pre-ground coffee for a fast, no-fuss cup—your perfect brew, your way, every time.



Adjust the grind coarseness from 1 (coarse) to 12 (fine) for your preferred brewing method.

Brewing with Pre-Ground Coffee

1. Open the filter basket compartment and add your desired amount of pre-ground coffee to the reusable filter.
2. Ensure the filter basket is securely closed.
3. Add water to the reservoir.
4. Press the Power button. The machine will begin the brewing process without grinding.
5. Once brewing is complete, the machine will beep and enter the keep-warm mode.

Adjusting Brew Strength

The coffee maker features a 'Strength Mode' to customize your coffee's richness. After pressing the Power button, press the 'Strength' button to cycle through mild, medium, or strong options before brewing starts.

Keep Warm

4 time setting, perfect for work breaks, or lazy afternoons. Your coffee stays hot when you're ready.



Activate Strength Mode to select your preferred coffee intensity.

Keep-Warm Function

The warming plate automatically activates after brewing. To adjust the keep-warm duration (30, 60, 90, or 120 minutes), press and hold the 'Keep Warm' button until the display flashes, then cycle through the options. The default setting is 30 minutes.

Adjustable Grinding Coarseness

Coarse for pour-over, medium for drip, fine for lattes—One simple knob lets you switch between 12 precision levels



The warming plate keeps your coffee hot for up to 120 minutes.

General Operation Steps

Easy Operation, Amazing Taste

Great coffee comes right after you press the button



Add water



Add coffee beans or ground coffee



Adjust the grind fineness



Press the button



Brew the coffee

A visual guide to the simple operation of the coffee maker.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and taste. Always unplug the coffee maker before cleaning.

Cleaning the Filter Basket and Grinder

The filter basket and grinder components are detachable for easy cleaning.

1. Pull up the filter basket compartment to remove it.
2. Remove the reusable filter. Discard any used coffee grounds.
3. Rinse the filter basket and reusable filter under running water. For thorough cleaning, the grinder mechanism can also be rinsed.
4. Ensure all parts are dry before reassembling.



The detachable grinder and filter basket are designed for hassle-free rinsing and cleaning.

Cleaning the Carafe and Exterior

- Wash the glass carafe and its lid in warm, soapy water. Rinse thoroughly.

- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- Descale the coffee maker periodically (e.g., monthly) using a descaling solution or a vinegar-water mixture to prevent mineral buildup. Follow the descaling product's instructions or run a brew cycle with a 1:2 vinegar-to-water solution, followed by several plain water cycles.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; power not connected; brew cycle not initiated.	Fill water reservoir; ensure power cord is plugged in; press the appropriate brew button.
Coffee tastes weak.	Insufficient coffee grounds; grind too coarse; Strength Mode set to mild.	Add more coffee; adjust grind to a finer setting; select a stronger Strength Mode.
Coffee overflows from filter.	Too much coffee grounds; filter basket clogged; carafe not properly placed.	Reduce coffee quantity; clean filter basket; ensure carafe is correctly positioned on the warming plate.
Grinder not working.	No beans in hopper; lid not closed properly; grinder clogged.	Add whole beans; ensure lid is fully closed; clean grinder mechanism.

SPECIFICATIONS

Feature	Detail
Brand	ATSENT
Model Name	Coffee maker parent 1.14
Capacity	5 Cups
Color	Black
Product Dimensions (D x W x H)	10.6" x 4.9" x 13.4"
Special Feature	Self-Cleaning
Coffee Maker Type	Drip Coffee Machine
Operation Mode	Fully Automatic
Coffee Input Type	Ground, Whole Bean
Power Source	AC adapter
Filter Type	Detachable Filter
Dishwasher Safe	No

Easy to Clean

Ours

✓ **Hassle-Free Cleaning:** Water flows directly from the top lid to rinse coffee grounds residue in the bean hopper—no manual scrubbing needed!

✓ **Convenient:** Eliminates leftover grounds buildup for fresher brews every time.



Others

✗ **Tedious Manual Work:** Must disassemble the bean hopper to scrape/wipe stubborn residue.

✗ **Time-Consuming:** Takes extra minutes of cleaning after each use.



Product dimensions for easy placement in your kitchen.

PRODUCT DEMONSTRATION

Watch this video for a detailed overview and demonstration of the ATSENT Grind and Brew Coffee Maker's features and operation.

Video: A comprehensive demonstration of the ATSENT Grind and Brew Coffee Maker, covering its functions, grinding capabilities, and brewing process.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact information provided with your product packaging or visit the official ATSENT website. Keep your purchase receipt as proof of purchase for warranty claims.

