

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

- › [Saker](#) /
- › Saker EverSteam Instant-Heat Steam Cleaner User Manual

## Saker CP102898-X64820

# Saker EverSteam Instant-Heat Steam Cleaner User Manual

Model: CP102898-X64820 | Brand: Saker

## 1. INTRODUCTION

---

The Saker EverSteam Instant-Heat Steam Cleaner is a versatile handheld device designed for various cleaning tasks around the home, car, and kitchen. Utilizing instant-heat technology, it produces steam quickly to help loosen and remove dirt, grime, and stains from multiple surfaces. This manual provides essential information for safe and effective operation, setup, maintenance, and troubleshooting.

## 2. SAFETY INFORMATION

---

Please read all safety instructions carefully before using the Saker EverSteam Instant-Heat Steam Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Hot Steam Hazard:** The steam produced by this device is extremely hot (up to 130°C / 266°F). Avoid direct contact with skin or eyes. Keep hands, face, and body away from the steam nozzle during operation.
- **Electrical Safety:** Ensure the power outlet matches the voltage requirements (120V, 60Hz). Do not operate the device with a damaged cord or plug. Do not immerse the device in water or other liquids. Always unplug the device before filling, cleaning, or performing maintenance.
- **Water Tank:** Only use clean, cold tap water or distilled water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the device and void the warranty.
- **Child Safety:** Keep the steam cleaner out of reach of children and pets. Do not allow children to operate the device.
- **Surface Compatibility:** Always test the steam cleaner on an inconspicuous area of the surface to be cleaned to ensure compatibility and prevent damage. For wood floors, keep the steamer moving constantly and wipe residual moisture promptly with a dry cloth.
- **Accessory Use:** Use only the accessories provided or recommended by the manufacturer. Ensure accessories are correctly attached before use.
- **Storage:** Store the device in a cool, dry place when not in use. Ensure it is completely cooled down before storing.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- Saker EverSteam Instant-Heat Steam Cleaner Main Unit
- Extension Hose
- Window Squeegee
- Straight Nozzle
- Angled Nozzle
- Round Brush
- Upholstery Nozzle
- Microfiber Cover (x5)
- Funnel
- Measuring Cup
- User Manual



Image: The Saker EverSteam Instant-Heat Steam Cleaner main unit shown with all its included accessories, including various nozzles, brushes, extension hose, measuring cup, and funnel.

#### 4. PRODUCT OVERVIEW

---

The Saker EverSteam features a compact, handheld design for ease of use and portability. Key features include a digital display for temperature and steam control, a detachable water tank, and a quick 15-second heat-up time.

# One-Touch Mode Control

Designed for Every Cleaning Task & How To Turn On

## 15s Fast Heating Up

**HIGH** For Heavy Grease



**COMMON** For Daily Dirt



## USAGE STEPS



**STEP 1** Press the power button.

**STEP 2** Press and hold the unlock button until the gear indicator lights up.

**STEP 3** Select the appropriate gear.

Image: A detailed view of the steam cleaner's digital control panel, displaying the current temperature and icons for steam level selection and child lock.



Image: An illustrative diagram highlighting the internal components and rapid heating mechanism of the Saker EverSteam cleaner, showing steam being generated.

## 5. SETUP

---

Follow these steps to prepare your steam cleaner for first use or before each cleaning session.

### 5.1 Attaching Accessories

Select the appropriate accessory for your cleaning task and attach it to the steam outlet.

1. **Straight Nozzle:** Align the base of the straight nozzle with the steam outlet on the main unit, insert it, and rotate it clockwise until it clicks into place.
2. **Round Brush:** Install the round brush head onto the straight nozzle. Align it, insert it, and rotate it clockwise until both are securely in place.
3. **Window Scraper:** Connect the interior trim nozzle to the steam outlet. Next, connect the windshield wipers to the interior trim nozzles, align them correctly, insert them, and then rotate clockwise until firmly secured.
4. **Extension Hose:** Align one end of the extension hose with the steam outlet, insert it, and rotate it clockwise until it is secured. Attach the required fittings (e.g., round brush, straight nozzle) to the other end of the hose in the same manner.

Your browser does not support the video tag.

Video: This video demonstrates the correct procedure for installing various accessory heads onto the Saker EverSteam Instant-Heat Steam Cleaner, ensuring a secure fit for different cleaning applications.

### 5.2 Filling the Water Tank

Always ensure the device is switched off, disconnected, and cooled down before refilling.

1. Rotate the water tank counter-clockwise to unlock it, then lift it off the device.
2. Open the water inlet cap on top of the water tank.
3. Using the provided measuring cup and funnel, pour clean, cold water into the water tank. Do not exceed the maximum fill line (400 ml capacity).
4. Close the water inlet cap securely.
5. Align the water tank with the device and rotate it clockwise until you hear a "click" and it is securely locked in place.



Image: A visual guide demonstrating the process of detaching the water tank, opening the cap, filling it with water using the measuring cup and funnel, and securely reattaching it to the main unit.

## 6. OPERATING INSTRUCTIONS

---

Once the steam cleaner is set up, follow these steps for operation.

- 1. Power On:** Plug the steam cleaner into a standard 120V, 60Hz power outlet. Press the power button. The digital display will show the heating progress.
- 2. Heat-up Time:** The device heats up in approximately 15-20 seconds. Wait until the display shows the ready temperature (e.g., 100°C or higher).
- 3. Unlock and Select Steam Mode:** Once heated, press and hold the unlock button for a few seconds until the steam mode icons appear. Select the appropriate steam level (Low Steam for daily dirt, High Steam for heavy grease) by pressing the corresponding button.
- 4. Begin Cleaning:** Direct the steam head towards the surface to be cleaned. Keep the nozzle close to the dirt for maximum effectiveness, as steam temperature decreases with distance. Move the steam head slowly across the surface. For optimal results, use the correct accessory for the task (e.g., glass scraper for water stains on glass, small round brush for heavy filth).
- 5. Refilling During Use:** If the water tank runs empty during cleaning, the device will stop producing steam. Turn off and unplug the device, allow it to cool slightly, then refill the water tank as described in Section 5.2.
- 6. Power Off:** After cleaning, press the power button to turn off the device and unplug it from the outlet.

# Saker EverSteam Instant-Heat Steam Cleaner

## **15s** Fast heating up to 100°C



Image: The steam cleaner in action, demonstrating its use on a wooden surface to remove dirt and grime with visible steam output.

Your browser does not support the video tag.

Video: This video showcases the Saker EverSteam Instant-Heat Steam Cleaner in various cleaning scenarios, demonstrating its quick heat-up and effectiveness on different surfaces like kitchenware, air vents, and bathroom grout.

Your browser does not support the video tag.

Video: This video illustrates the Saker EverSteam Instant-Heat Steam Cleaner's versatility, showing it being used to clean an oven,

stovetop, and mattress, highlighting its digital steam control and quick action.

## 7. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your steam cleaner.

### 7.1 Cleaning the Device

- Always unplug the device and allow it to cool completely before cleaning.
- Wipe the exterior of the steam cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Empty any remaining water from the tank after each use.
- Clean accessories (nozzles, brushes) with water and mild soap, then rinse thoroughly and allow to air dry before storing.

### 7.2 Descaling (If Necessary)

Over time, mineral deposits from tap water can build up inside the device. If you notice reduced steam output or unusual noises, descaling may be necessary.

- Mix a solution of equal parts white vinegar and water.
- Pour the solution into the water tank (do not exceed max fill line).
- Allow the solution to sit in the tank for 30 minutes to an hour (do not heat).
- Empty the tank and rinse thoroughly with clean water several times to remove all vinegar residue.
- Run a tank of clean water through the steamer to flush out any remaining solution before regular use.

## 8. TROUBLESHOOTING

---

If you encounter issues with your Saker EverSteam Instant-Heat Steam Cleaner, refer to the following table:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty; Device not heated sufficiently; Mineral buildup (scaling); Nozzle blocked.	Refill water tank; Allow device to heat up completely (15-20 seconds); Perform descaling (see Section 7.2); Clean or unblock the nozzle.
Device does not turn on	Not plugged in; Power outlet malfunction; Device malfunction.	Ensure device is securely plugged into a working outlet; Try a different outlet; Contact customer support.
Water leaking from nozzle	Accessory not properly attached; Device not fully heated.	Ensure all accessories are securely attached and rotated clockwise until locked; Allow device to reach full operating temperature before use.
Steam not hot enough for heavy dirt	Incorrect steam mode selected; Nozzle too far from surface.	Select 'High Steam' mode on the digital display; Keep the nozzle as close as possible to the surface being cleaned.
Water tank runs out quickly	Normal operation for a handheld unit.	The 400ml tank provides approximately 10 minutes of continuous steam. Refill as needed for longer cleaning tasks.

## 9. SPECIFICATIONS

---

- **Brand:** Saker
- **Model Name:** CP102898-X64820
- **Form Factor:** Handheld
- **Power Source:** Corded Electric
- **Wattage:** 1350W
- **Heat Time:** 15 Seconds
- **Maximum Temperature:** 130°C (266°F)
- **Tank Volume/Capacity:** 400 Milliliters
- **Power Cord Length:** Approximately 9.84 ft (3 meters)
- **Color:** White
- **Special Feature:** Portable, Digital Steam Control
- **Surface Recommendation:** Tile, Grout, Window, Car, Furniture, Upholstery, Fabric, Sink, Countertop, Wall, Kitchen and Bath Surfaces

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Saker website. Keep your purchase receipt as proof of purchase for any warranty claims.

