

## **SPORTNOW A70-120V00MX**

# **SPORTNOW Electronic Dartboard User Manual**

Model: A70-120V00MX

## **1. INTRODUCTION**

Thank you for purchasing the SPORTNOW Electronic Dartboard. This manual provides essential information for the safe and efficient use of your dartboard. Please read it thoroughly before installation and operation, and retain it for future reference.

This electronic dartboard is designed for up to 8 players and includes 34 games with 369 variations, offering a total of 2235 multiplayer options. It features an illuminated target, a 14.4 cm LED display, and rechargeable batteries for cordless operation.

## **2. SAFETY INFORMATION**

- This product is intended for recreational use.
- Use only the provided soft-tip darts. Do not use steel-tip darts, as they can damage the dartboard and pose a safety risk.
- Ensure the dartboard is securely mounted before use to prevent it from falling.
- Keep children and pets away from the throwing area during play.
- Do not expose the dartboard to extreme temperatures or moisture.
- Do not attempt to disassemble or repair the dartboard yourself. Contact customer support if issues arise.
- Use only the specified Type-C cable for charging the batteries.

## **3. PACKAGE CONTENTS**

Verify that all components are present in the package:

- 1 x Electronic Dartboard
- 6 x Soft-Tip Darts
- 24 x Replacement Soft Tips
- 1 x Type-C Charging Cable
- 1 x User Manual (this document)

## 4. SETUP

### 4.1 Charging the Batteries

The dartboard is powered by 2 rechargeable 2000 mAh Lithium-Ion batteries. Before first use, ensure the batteries are fully charged.

1. Locate the Type-C charging port on the dartboard.
2. Connect the provided Type-C cable to the dartboard and to a suitable USB power source (e.g., USB wall adapter, computer USB port).
3. The LED display may indicate charging status. Charge until the indicator shows full charge.



### PANTALLA LED DE GRAN TAMAÑO DE 14,4 CM

Realice un seguimiento de cada punto con facilidad y claridad

- ① 1-8 jugadores
- ② 34 juegos
- ③ Oponente de computadora de 5 niveles
- ④ 369 variaciones (2235 opciones multijugador)
- ⑤ Volumen 0-5
- ⑥ IDIOMA: Chino/Inglés. Instrucciones de voz. REBOTE: Función de retorno de puntuación (sin retorno de dardos)


The dartboard can be easily mounted on a wall, suitable for different indoor environments like a home, office, or entertainment area.

### 4.2 Mounting the Dartboard

The dartboard can be installed on a wall using either traditional mounting hardware (not included) or the included hook-and-loop fasteners.

1. **Wall Mounting (Hardware):** Choose a suitable wall location. Ensure the center of the dartboard is 1.73 meters (5 feet 8 inches) from the floor. Use appropriate screws and anchors for your wall type to securely fasten the dartboard.

2. **Hook-and-Loop Fasteners:** Clean the wall surface where you intend to mount the dartboard. Apply the adhesive side of the hook-and-loop strips to the back of the dartboard and the corresponding strips to the wall. Press firmly to ensure a secure attachment.

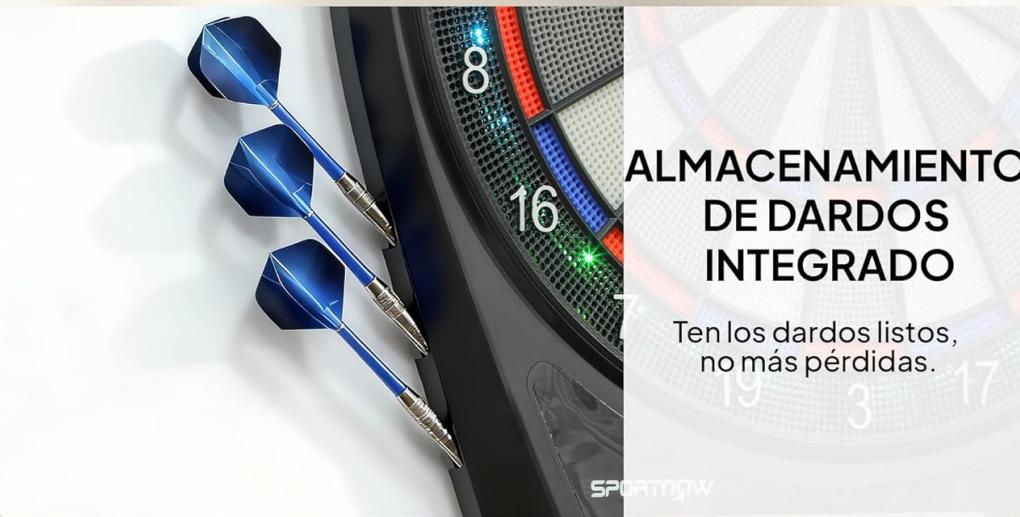

The dartboard includes integrated storage for darts and uses Velcro fasteners for quick and tool-free wall mounting.

#### 4.3 Assembling Darts

The dartboard comes with soft-tip darts and replacement tips.

1. Screw the soft tips onto the dart barrels.
2. Ensure tips are securely fastened before playing.



**Disfruta del juego sin marcas de pared ni accidentes**  
**DARDOS DE PUNTA**  
**BLANDA SEGUROS**

The package includes six soft-tip darts and 24 spare soft tips, ensuring safe play and extended use.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

Press the **ON/OFF** button on the control panel to turn the dartboard on or off.

### 5.2 Player Selection

The dartboard supports up to 8 players. Use the **PLAYER** button to select the number of players for your game.

### 5.3 Game Selection

The dartboard offers 34 games and 369 variations. Use the **GAME** button to cycle through the available games. The LED display will show the game number and name.

### 5.4 Computer Opponent

For solo play, you can engage a computer opponent with five difficulty levels. Select the desired level using the **CYBER MISS** button.

### 5.5 Volume Control

Adjust the voice prompt volume (levels 0-5) using the **VOLUME** button.

## 5.6 Language Selection

Switch between English and Chinese voice prompts using the **LANGUAGE** button.


## 5.7 LED Display and Scoring

The 14.4 cm LED display automatically tracks scores and provides game information. Voice prompts assist players during gameplay.



## BATERÍAS RECARGABLES DOBLES

Libertad sin cables para una diversión sin fin en cualquier lugar

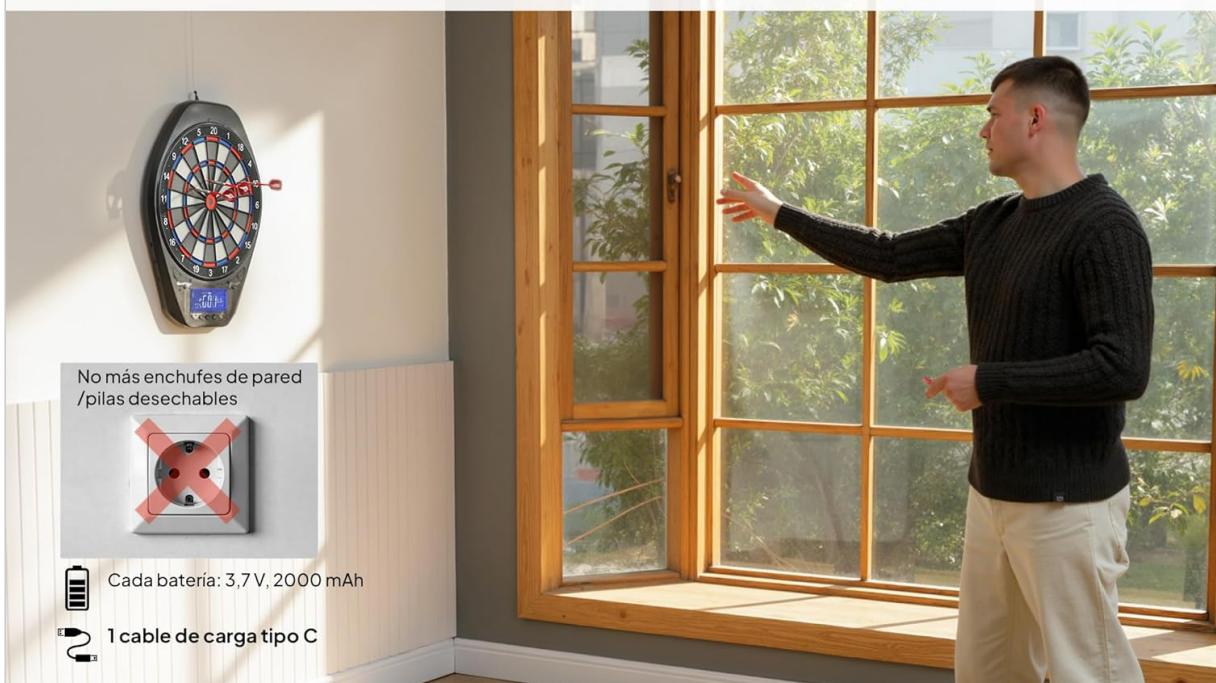

The 14.4 cm LED display shows scores, game information, and player status. Control buttons for power, game restart, options, cyber miss, volume, language, and bounce out are clearly visible.

# OBJETIVO ILUMINADO Y ANILLO DIGITAL

Ilumina cada manta para un emocionante juego nocturno



objetivo iluminado



anillo digital

The dartboard features an illuminated target and a digital ring, enhancing visibility and game experience, especially in low-light conditions.

## 6. MAINTENANCE

### 6.1 Cleaning

Wipe the dartboard surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or electronic components.

### 6.2 Battery Care

To prolong battery life, avoid fully discharging the batteries frequently. Recharge them regularly, especially if the dartboard will not be used for an extended period.

### 6.3 Dart Tip Replacement

If a dart tip becomes damaged or worn, unscrew it from the dart barrel and replace it with a new soft tip from the included spares.

## 7. TROUBLESHOOTING

- Dartboard does not power on:** Ensure batteries are charged. Connect the Type-C charging cable and try again.

- **Darts not registering:** Ensure soft tips are securely attached. Check if the dartboard segments are clear of debris.
- **Display issues:** Try turning the dartboard off and on again. If the problem persists, contact customer support.
- **Darts bouncing out frequently:** Ensure soft tips are not worn. The dartboard features a thin spider net design and an extended catch area to minimize bounce-outs.



The specially designed PP target features concave holes and thin segment borders to reduce bounce-outs, along with an extended catch area for improved accuracy.


## 8. SPECIFICATIONS

Model Number	A70-120V00MX
Dimensions (L x W x D)	60.5 cm x 45.5 cm x 3.6 cm
Weight	2 kg
Material	Polypropylene (PP)

<b>Power Source</b>	2 x 2000 mAh Lithium-Ion Rechargeable Batteries
<b>Charging</b>	Type-C USB Cable
<b>Max Players</b>	8
<b>Games / Variations</b>	34 Games / 369 Variations (2235 multiplayer options)
<b>Display</b>	14.4 cm LED Screen
<b>Darts Included</b>	6 Soft-Tip Darts, 24 Replacement Soft Tips
<b>Features</b>	Illuminated Target, Thin Spider Net Design, Wide Catch Area, Voice Prompts (English/Chinese), 5-level Computer Opponent

# OBJETIVO DE PP ESPECIALMENTE DISEÑADO

Reduce la tasa de rebote y  
protege la pared

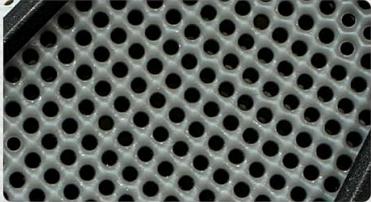  
Agujeros cóncavos

  
Bordes de segmentos delgados

  
Área de captura extendida



This image illustrates the physical dimensions of the dartboard, measuring 60.5 cm in height, 45.5 cm in width, and 3.6 cm in depth.

