

[Manuals.plus](#) /

› [KRIB BLING](#) /

› KRIB BLING KB03-WHITE6 17.7 lbs Full-Automatic Washing Machine User Manual

KRIB BLING KB03-WHITE6

KRIB BLING KB03-WHITE6 Full-Automatic Washing Machine User Manual

Model: KB03-WHITE6

INTRODUCTION

Thank you for choosing the KRIB BLING Full-Automatic Washing Machine. This compact and portable washing machine is designed for convenience in apartments, RVs, camping, and other small living spaces. It features 10 preset wash programs and 8 water level selections to cater to various laundry needs. This manual provides essential information for safe operation, installation, maintenance, and troubleshooting.



Figure 1: KRIB BLING Full-Automatic Washing Machine

SAFETY INFORMATION

- Do not use water at a temperature exceeding 50°C (122°F).
- Ensure the washing machine is plugged into a dedicated socket; do not share with other appliances.

- Always check connections of inlet and drain pipes before operation.
- Clothing with colors that may bleed should be washed separately.
- Keep children away from the appliance during operation. The machine includes a child lock feature for safety.
- If the water level is below the minimum, the impeller may stop running.
- All products are fully inspected; minor water stains or residual water may be present, which is normal for a new product.

Child Lock For Safety

Lock All Buttons To Avoid Kids Accidental Touching



WATER LEVEL



CHILD LOCK



ADDITIONAL RINSE



Figure 2: Child Lock Feature for Safety

WHAT'S IN THE BOX

Upon unpacking, please ensure all the following components are present:

- KRIB BLING Full-Automatic Washing Machine
- Cover
- Fill Hose
- Intake Hose
- Venting Duct

SETUP

Follow these steps to set up your washing machine:

1. **Connect the Water Inlet Pipe:** Attach the water inlet pipe securely to the designated inlet on the washing machine.
2. **Connect to Tap:** Connect the other end of the inlet pipe to a water tap. Ensure the connection is tight to prevent leaks, then turn on the tap.
3. **Power Connection:** Plug the washing machine into a grounded electrical socket. Avoid using extension cords or sharing the socket with other high-power appliances.
4. **Position the Drain Hose:** Place the drain hose into a suitable drainage area. The machine features a built-in drain pump.
5. **Leveling:** Ensure the washing machine is placed on a flat, stable surface to prevent excessive vibration during operation.

OPERATING INSTRUCTIONS

The KRIB BLING washing machine offers 10 preset programs and 8 water level selections for optimal washing performance.

Control Panel Overview

Washing Machine

The following points will make your life more convenient

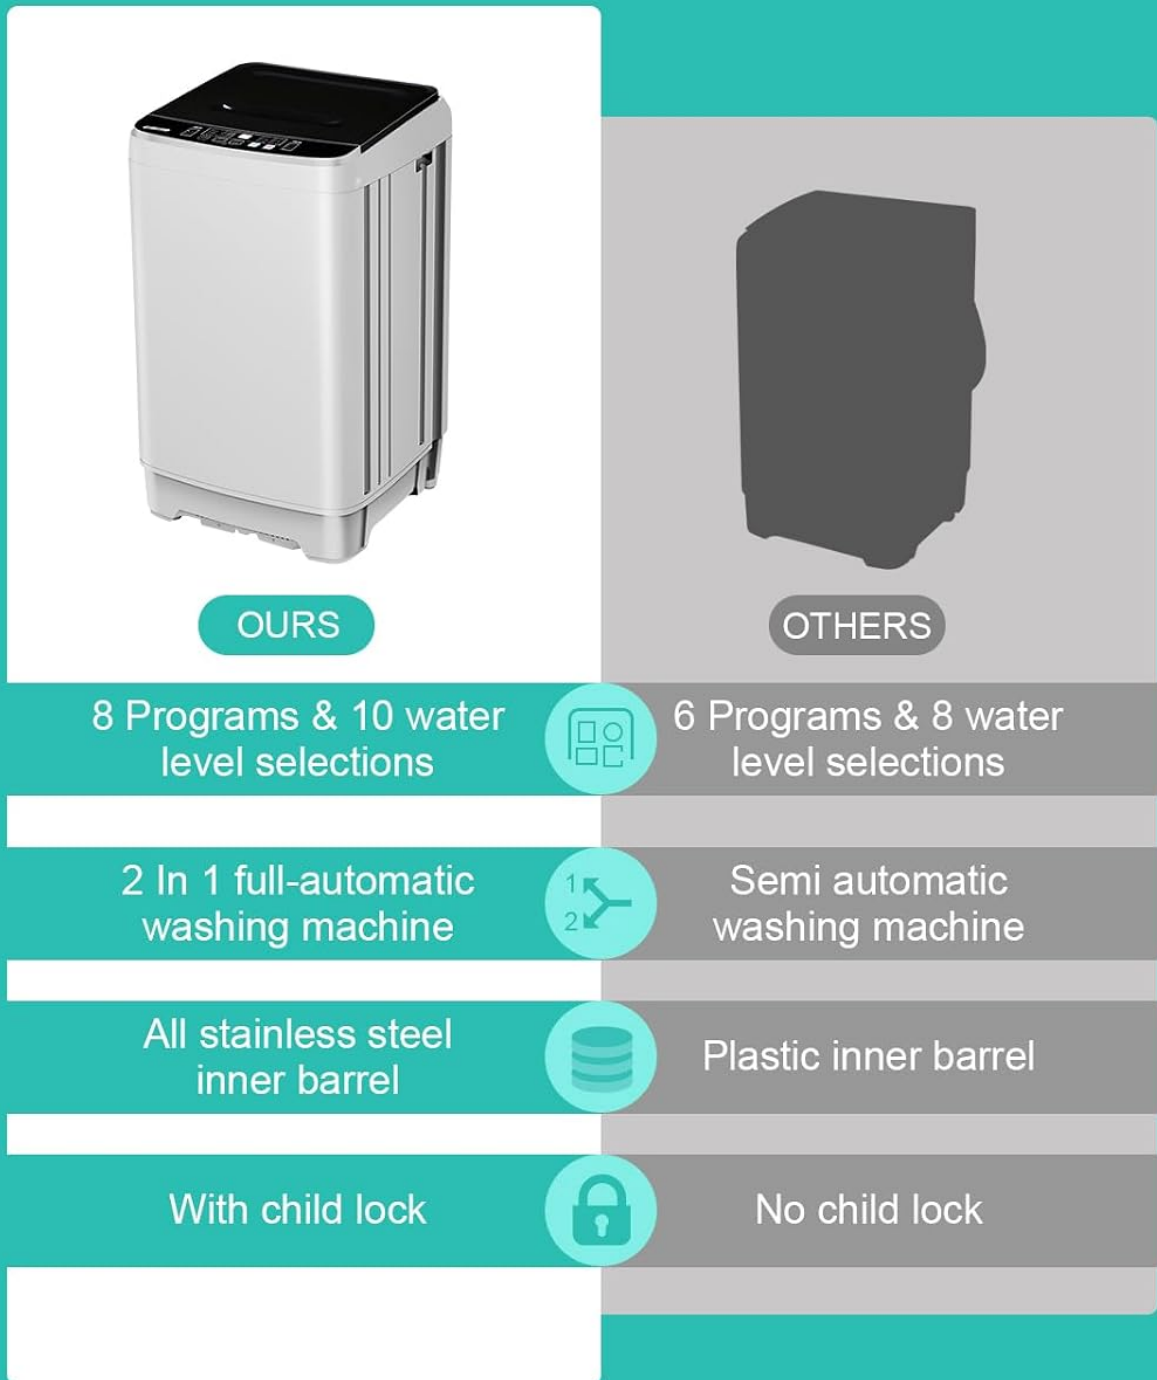


Figure 3: Control Panel and Features

Washing Process

1. **Load Laundry:** Open the lid and place your clothes into the inner tub. Do not overload the machine. The capacity is 17.7 lbs.
2. **Add Detergent:** Add the appropriate amount of detergent to the dispenser.

3. **Select Water Level:** Use the 'Water Level' button to choose the desired water level (High, Middle, Low, Minimum) based on your laundry load.
4. **Select Program:** Press the 'Program' button to cycle through the 10 available wash programs. These include options like Wash-Rinse-Spin, Soak-Wash-Rinse-Spin, Wash only, Wash-Rinse, Rinse-Spin, and Spin only.
5. **Start Washing:** Press the 'Start/Pause' button to begin the selected wash cycle.
6. **Delay Start Function:** Utilize the 24-hour delay washing function to schedule your laundry cycle to start at a later time.

24 Hours Delay Washing Function

Make Your Daily Washing More Intelligent!



Figure 4: 24 Hours Delay Washing Function

MAINTENANCE

Auto Tub Cleaning Function

The washing machine is equipped with an Auto Tub Cleaning function to help maintain hygiene and prevent odor buildup in the inner tub.

Auto Tub Cleaning Function

6kg

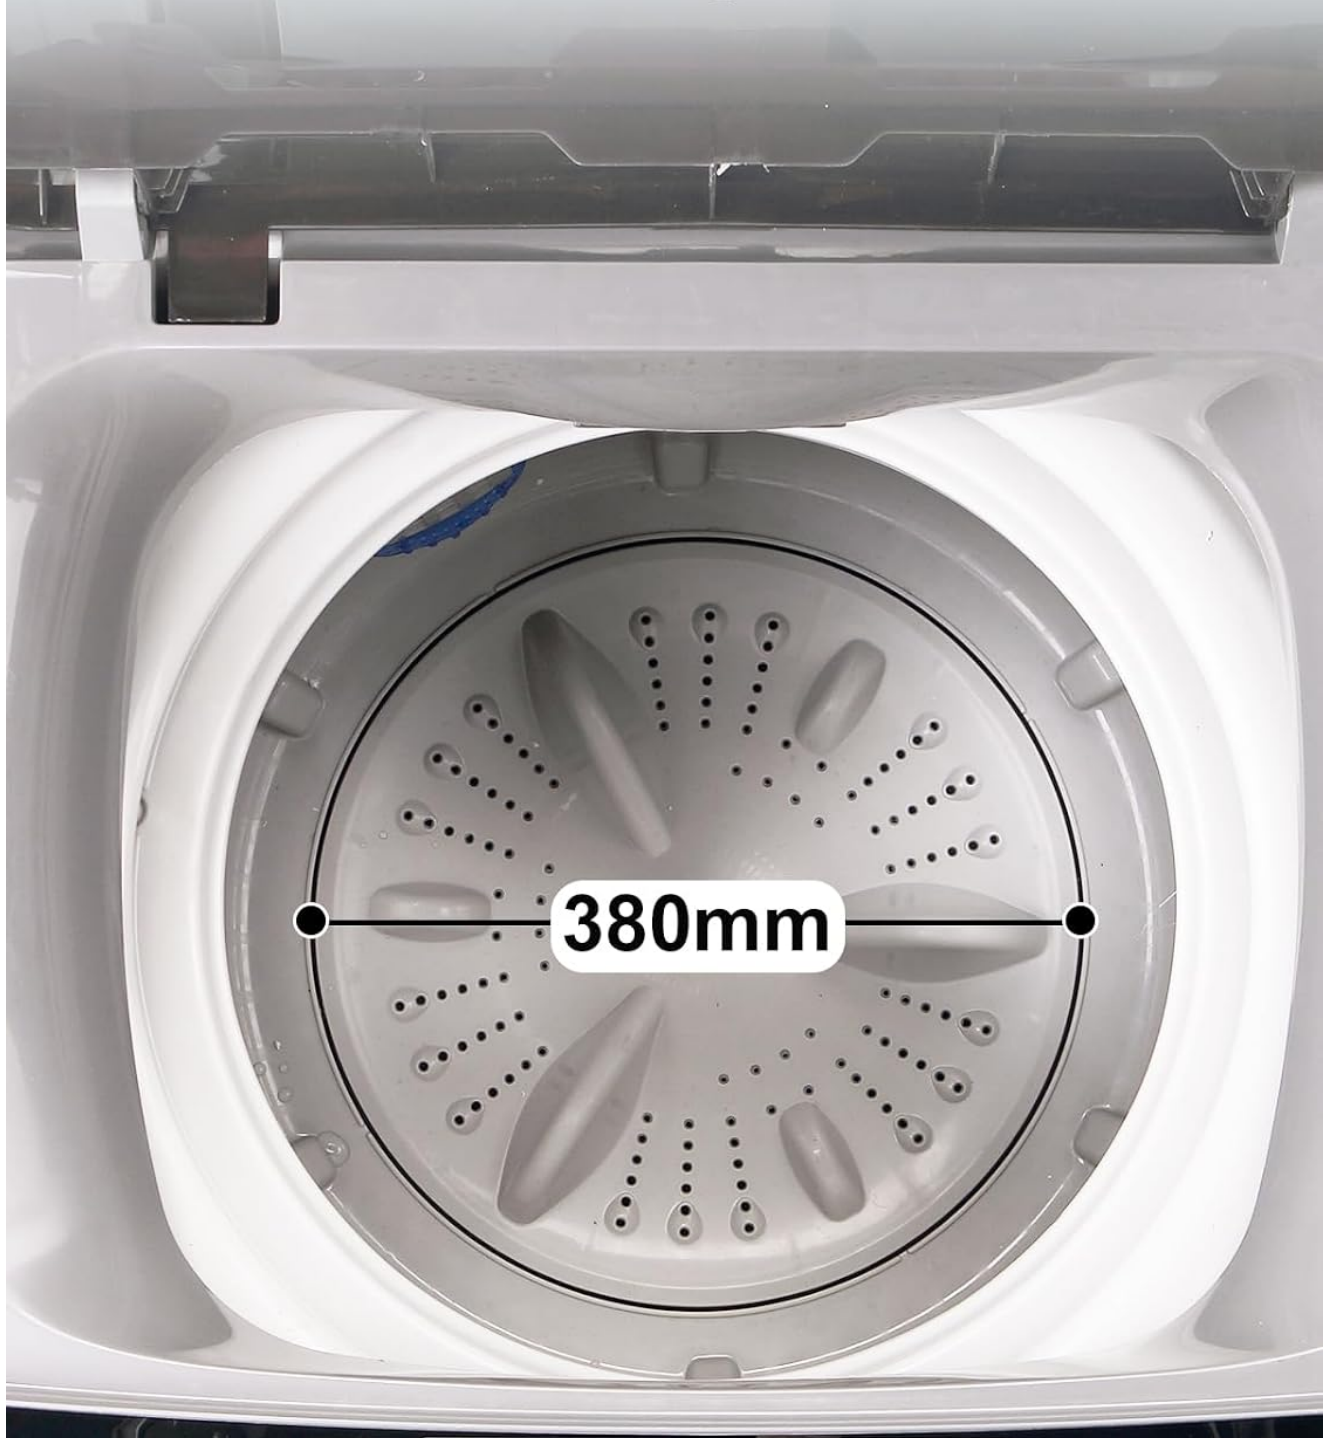


Figure 5: Auto Tub Cleaning Function

General Cleaning

- Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.

- Clean the detergent dispenser regularly to prevent residue buildup.
- Periodically check and clean the lint filter (if applicable, refer to specific model instructions for location).
- After each use, leave the lid slightly ajar to allow the tub to air dry and prevent mildew.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Program not selected.	Check power connection; Ensure lid is fully closed; Select a wash program.
Water leakage	Inlet/drain hose loose; Damaged hose.	Tighten hose connections; Replace damaged hoses.
Excessive vibration/noise	Machine not level; Uneven load; Shipping bolts not removed (if applicable).	Adjust leveling feet; Redistribute laundry evenly; Remove any shipping bolts. The machine has automatic unbalance detection.
Water not draining	Drain hose kinked or blocked; Drain pump issue.	Straighten drain hose; Clear any blockages; Contact customer support if pump is faulty.

AUTOMATIC UNBALANCE DETECTION



Figure 6: Automatic Unbalance Detection

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	KRIB BLING
Model Name	KB03-WHITE6
Capacity	17.7 Pounds
Product Dimensions (D x W x H)	19.7"D x 19.9"W x 33.7"H
Item Weight	46 Pounds
Color	White
Material	Plastic (Body), Stainless Steel (Drum)
Access Location	Top Load
Special Feature	Full-automatic
Number of Standard Cycles	10
Controls Type	Push Button
Max Rotational Speed	1300 RPM
Voltage	110 Volts
Installation Type	Freestanding



Figure 7: Product Dimensions and Capacity

WARRANTY INFORMATION

This KRIB BLING washing machine comes with a **1 YEAR WARRANTY** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does

not cover damage caused by misuse, accident, unauthorized modification, or improper installation.

CUSTOMER SUPPORT

For any quality problems, technical assistance, or warranty inquiries, please contact KRIB BLING customer service. Our customer service team aims to respond within 24 hours.

Please refer to the contact information provided with your product packaging or visit the official KRIB BLING website for support details.