

[Manuals.plus](#) /

› [KRIB BLING](#) /

› KRIB BLING KB02-White6-2 17.7 lbs Full-Automatic Washing Machine Instruction Manual

KRIB BLING KB02-White6-2

KRIB BLING KB02-White6-2 17.7 lbs Full-Automatic Washing Machine Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your KRIB BLING KB02-White6-2 Full-Automatic Washing Machine. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

- Ensure the washing machine is placed on a stable, level surface to prevent vibration and noise.
- Do not use water with a temperature exceeding 50°C (122°F).
- Always plug the machine into a dedicated power socket; avoid sharing with other appliances.
- Keep children and pets away from the washing machine during operation.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel for assistance.
- Unplug the machine from the power outlet before cleaning or performing any maintenance.

PRODUCT OVERVIEW

The KRIB BLING KB02-White6-2 is a full-automatic washing machine designed for compact living spaces such as apartments, dorms, and RVs. It features a 17.7 lbs capacity and a stainless steel inner tub.



Powerful
Engine



Quiet
Operation



Smart
Control Pane



Strong
Inner Cylinder



Image: The KRIB BLING washing machine, illustrating its powerful engine, quiet operation, smart control panel, and strong inner cylinder.

You can wash many kinds of clothes



Image: The washing machine's interior tub, demonstrating its suitability for washing various clothing items such as T-shirts, skirts, jeans, underwear, coats, and sheets.



Image: The KRIB BLING washing machine, displaying its compact dimensions: approximately 34 inches in height, 20 inches in depth, and 20 inches in width.

SETUP INSTRUCTIONS

Follow these steps to properly set up your washing machine:


1. **Unpacking:** Carefully remove the washing machine from its packaging. Inspect for any damage.
2. **Placement:** Position the machine on a firm, level surface. Ensure there is adequate space around it for ventilation and connections.
3. **Connect Water Inlet Pipe:** Attach the water inlet pipe to the designated inlet on the washing machine and securely connect the other end to a water tap. Ensure all connections are tight to prevent leaks.
4. **Position Drain Hose:** Place the drain hose into a suitable drain (e.g., sink or floor drain). Ensure the drain hose is not kinked or obstructed. This model includes a drain pump.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.



Image: The KRIB BLING 17.7 lbs Full-Automatic Washing Machine, ready for setup and use.

OPERATING INSTRUCTIONS

Your KRIB BLING washing machine features a user-friendly control panel with 10 wash programs and 8 water level selections.

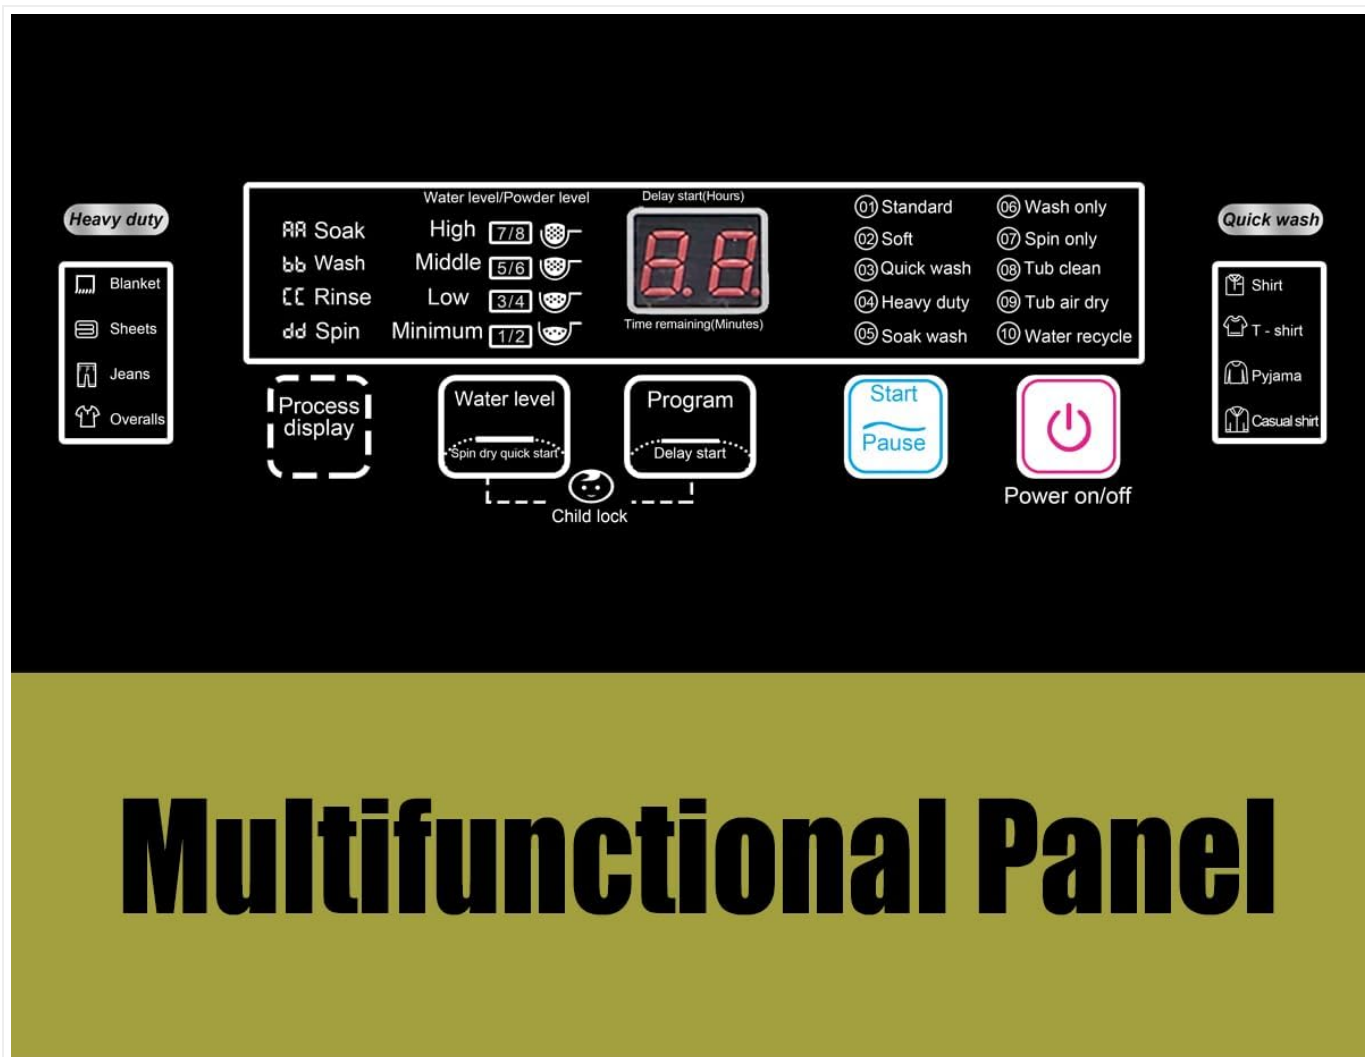

Multifunctional Panel

4

Powder levels

10

Commonly
used programs

24

24-hour delay
cleaning function

Image: Detailed view of the multifunctional control panel, showing program selections, water level options, and LED display.

24 Hours Delay Washing Function

Make Your Daily Washing More Intelligent!



Image: The washing machine highlighting its 24-hour delay washing function, designed for scheduling convenience.

Basic Operation Steps:

1. **Load Laundry:** Open the lid and place clothes loosely into the tub. Do not overload the machine.
2. **Add Detergent:** Add the appropriate amount of detergent to the dispenser.

- 3. **Power On:** Press the 'Power On/Off' button.
- 4. **Select Water Level:** Use the 'Water Level/Spin' button to choose from 8 available water levels (e.g., L/16L, M/23L, H/30L). The machine will automatically detect the load and suggest a water level, but you can adjust it manually.
- 5. **Select Program:** Choose one of the 10 preset wash programs (e.g., Standard, Soft, Quick Wash, Heavy Duty, Soak Wash, Tub Clean, Spin Only, Tub Air Dry, Water Recycle).
- 6. **Start Cycle:** Press the 'Start/Pause' button to begin the wash cycle.
- 7. **Delay Start (Optional):** To use the delay function, select your program and water level, then press the 'Delay Start' button to set the desired delay time (up to 24 hours). Press 'Start/Pause' to confirm.
- 8. **Child Lock (Optional):** Activate the child lock feature to prevent accidental changes to settings during operation. Refer to the control panel for specific child lock activation instructions.

Video Demonstration:

Your browser does not support the video tag.

Video: A demonstration of the KRIB BLING Portable Top Load Washing Machine in operation, showcasing its features and ease of use.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your washing machine.

- **Cleaning the Tub:** Use the 'Tub Clean' program periodically to clean the inner tub and prevent odor buildup.
- **Exterior Cleaning:** Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.
- **Drain Filter:** Regularly check and clean the drain filter to remove lint and debris. This helps maintain efficient drainage.
- **Water Inlet Filter:** Periodically clean the filter screen at the water inlet to prevent blockages.
- **After Use:** After each wash, leave the lid slightly ajar to allow the tub to air dry and prevent mildew.

TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Program not selected.	Ensure power is connected; Close lid securely; Select a wash program.
Water leakage	Loose hose connections; Drain hose kinked or blocked; Overloading.	Check and tighten all hose connections; Clear any kinks or blockages in the drain hose; Reduce laundry load.
Impeller stops running	Water level below minimum.	Ensure sufficient water level for the selected load.
Excessive vibration/noise	Uneven load; Machine not level; Shipping bolts not removed (if applicable).	Distribute laundry evenly; Adjust leveling feet; Refer to setup for shipping bolt removal.

Problem	Possible Cause	Solution
Spin dry cycle takes too long or clothes are still wet	Unbalanced load; Drain hose issue.	Redistribute clothes in the tub; Check drain hose for blockages. Note that a period of time may pass before spin dry starts, even if the tub appears empty.
Clothes rubbing off colors	Mixed colors.	Wash colored clothing separately to prevent color transfer.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	KB02-White6-2
Product Dimensions (D x W x H)	19.7"D x 20.9"W x 34.7"H
Capacity	17.7 pounds
Item Weight	59 pounds
Access Location	Top Load
Operation Mode	Fully Automatic
Number of Standard Cycles	10
Water Level Options	8 (L/16L, M/23L, H/30L, etc.)
Max Rotational Speed	1300 rpm
Voltage	120 volts
Noise Level	59 dB
Drum Material	Stainless Steel
Controls Type	Touch / Buttons
Installation Type	Freestanding
Included Components	Cover, Drain Hose, Fill Hose, Venting Duct

WARRANTY INFORMATION

This KRIB BLING washing machine comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized repair, or normal wear and tear.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact KRIB BLING customer

support. Refer to your purchase documentation or the manufacturer's website for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GCCD5ZBL>

More documents and user manuals: <https://manuals.plus/>