

Huhomco DJ-808

Huhomco Cordless Pressure Washer DJ-808 Instruction Manual

Model: DJ-808

1. INTRODUCTION

Thank you for purchasing the Huhomco Cordless Pressure Washer DJ-808. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before first use and retain it for future reference.

This portable pressure washer is designed for various outdoor cleaning tasks, offering 1500 PSI pressure and 2.6 GPM flow, powered by a 400W brushless motor and dual 4.0Ah batteries.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses, gloves, and hearing protection.
- Never direct the water jet at people, pets, electrical devices, or the unit itself.
- Ensure all connections are secure before operating the pressure washer.
- Do not operate the unit if any parts are damaged. Contact customer support for replacement parts.
- Keep children and bystanders away from the operating area.
- Use only manufacturer-approved accessories and replacement parts.
- Disconnect the battery pack before performing any adjustments, changing accessories, or storing the tool.
- Do not immerse the battery or charger in water or other liquids.

3. PRODUCT COMPONENTS

The Huhomco Cordless Pressure Washer DJ-808 comes with the following components:

- Cordless Pressure Washer Unit
- 2 x 4000mAh Batteries
- Battery Charger
- 6-in-1 Nozzle
- Foam Cannon (Soap Bottle)
- 16.4FT Kink-Free Hose
- Hose Clamp
- Water Filter
- Stop Valve
- 2 x Transition Connectors
- 3/4" & 1/2" Garden Hose Connectors
- 3/4" Faucet Adapter
- Water Tap Connector
- Storage Case



4. SETUP INSTRUCTIONS

Follow these steps to set up your pressure washer for operation:

1. **Charge Batteries:** Fully charge both 4000mAh batteries using the provided charger before first use. The LED intelligent power monitor on the unit will show the battery level.
2. **Attach Nozzle:** Connect the 6-in-1 nozzle or the foam cannon to the pressure washer unit. Ensure it clicks securely into place.
3. **Connect Water Source:**
 - **From Faucet:** Use the water tap connector and 3/4" faucet adapter to connect the hose to a standard faucet.
 - **From Garden Hose:** Use the 3/4" or 1/2" garden hose connectors and transition connector to attach your garden hose.
 - **From Bucket/Lake/Pool:** Attach the water filter to the end of the hose and place it into your water source (bucket, lake, or pool). The filter helps prevent impurities from entering the pump.
4. **Install Battery:** Insert a charged battery into the battery slot on the pressure washer handle until it locks into place.
5. **Prime the Pump:** Before starting, ensure the water source is open. Squeeze the trigger for a few seconds to allow water to flow through the system and expel any air.

Take Your Cleaning to the Next Level!



Image: Step-by-step guide for connecting components and water sources.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Adjusting Pressure

Press the power button on the unit to turn it on. The LED screen will display the remaining battery power and the current pressure level (P1, P2, P3). Use the switch adjustment button to cycle through the three pressure speeds to suit your cleaning needs.

Complete Accessories Kit



2*4000 Batteries



Charger



Cordless Pressure Washer



Soap Bottle



6-In-1 Nozzle



Storage Case



Hose



Hose Clamp



Water Filter



Stop Valve



2*Transition Connector



3/4\"&1/2\"Garden Hose Connectors



3/4\"Faucet Adapter



Water Tap Connector

Image: Visual Power & 3-Speed Key Interface showing remaining power and pressure level.

5.2 Using the 6-in-1 Nozzle

The multi-functional 6-in-1 spray nozzle allows you to switch between different spray patterns by rotating the nozzle head. The available patterns are:

- **0° Jet:** For concentrated, high-impact cleaning on tough spots.
- **15° Fan:** For intense cleaning over a moderate area.
- **25° Fan:** For general cleaning tasks.
- **40° Fan:** For gentle cleaning or rinsing a wider area.
- **Spray:** For watering plants or light rinsing.
- **Straight:** For a direct, focused stream.



Image: The 6-in-1 nozzle with various spray patterns for versatile cleaning.

5.3 Using the Foam Cannon

Attach the foam cannon (soap bottle) to the pressure washer for applying detergent. Fill the bottle with appropriate cleaning solution. The foam cannon produces dense suds for effective cleaning, especially useful for vehicle washing.



Image: Using the foam cannon for deep cleaning a vehicle.

5.4 Multi-Water Source Compatibility

Your pressure washer can draw water from various sources, providing flexibility for different cleaning environments:

- **Faucets:** Direct connection to a tap.
- **Buckets:** Ideal for portable use where a tap is not available.
- **Lakes/Rivers/Pools:** Use the water filter to protect the pump from debris.



Image: The pressure washer's compatibility with multiple water sources.

5.5 General Cleaning Applications

This pressure washer is suitable for a wide range of cleaning tasks:

- Car and bike washing
- Patio and deck cleaning
- Window cleaning
- Garden tool cleaning
- Watering plants (using the 'Spray' nozzle setting)

Your browser does not support the video tag.

Video: Demonstration of the Huhomco Brushless Pressure Washer in action, cleaning a car wheel and body.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Cleaning:** After each use, flush the system with clean water to remove any detergent residue or debris. Wipe down the exterior of the unit with a damp cloth.
- **Nozzle Care:** Clean the nozzle regularly to prevent blockages. If the spray pattern becomes irregular, clear any obstructions from the nozzle opening.
- **Water Filter:** Inspect and clean the water filter frequently, especially when drawing water from non-tap sources, to ensure proper water flow and protect the pump.
- **Battery Storage:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store fully discharged batteries for extended periods.
- **Storage:** Store the pressure washer and all accessories in the provided storage case in a dry, frost-free environment. Disconnect the battery before storage.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Unit does not start	Battery not charged or improperly inserted	Ensure battery is fully charged and correctly inserted.
Low pressure or no water flow	Water source off, hose kinked, water filter clogged, or air in the system	Check water supply. Straighten hose. Clean water filter. Prime the pump by squeezing the trigger without the nozzle attached until water flows steadily.
Irregular spray pattern	Nozzle clogged	Clean the nozzle opening to remove any debris.
Water leaking from connections	Loose connections or worn O-rings	Tighten all connections. Inspect O-rings for damage and replace if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	Huhomco
Model Number	DJ-808
Power Source	Battery Powered
Motor Type	Brushless Motor
Motor Power	400W
Max Pressure	1500 PSI
Max Flow Rate	2.6 GPM
Batteries	Dual 4.0Ah (4000mAh)

Feature	Detail
Hose Length	5 Meters (16.4 FT)
Item Weight	7 Pounds
Product Dimensions (L x W x H)	11.42" x 6.1" x 14.96"
Nozzle Type	6-in-1 Multi-functional

9. WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms, conditions, and duration. Retain your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Huhomco Cordless Pressure Washer, please contact our customer support team. Contact details can typically be found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question