

[Manuals.plus](#) /

› [WELLST·G](#) /

› WELLST·G P30S Handheld Game Console Instruction Manual

WELLST·G P30S

WELLST·G P30S Handheld Game Console Instruction Manual

INTRODUCTION

The WELLST·G P30S Handheld Game Console is designed for portable entertainment, featuring a 3.0-inch LCD screen and 220 preloaded retro video games. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure a satisfying user experience.

About Your Console

Your P30S console offers a wide variety of games, including entertainment, sports, and adventure titles, designed to enhance hand-eye coordination, thinking, and problem-solving skills. Its compact and ergonomic design makes it suitable for children's hands and convenient for travel.



Image: The WELLST-G P30S Handheld Game Console showcasing its library of 220 preloaded games.

PRODUCT OVERVIEW

Console Components and Controls

Familiarize yourself with the layout of your P30S console. The following diagram illustrates the key buttons and ports:

Game console key list and size

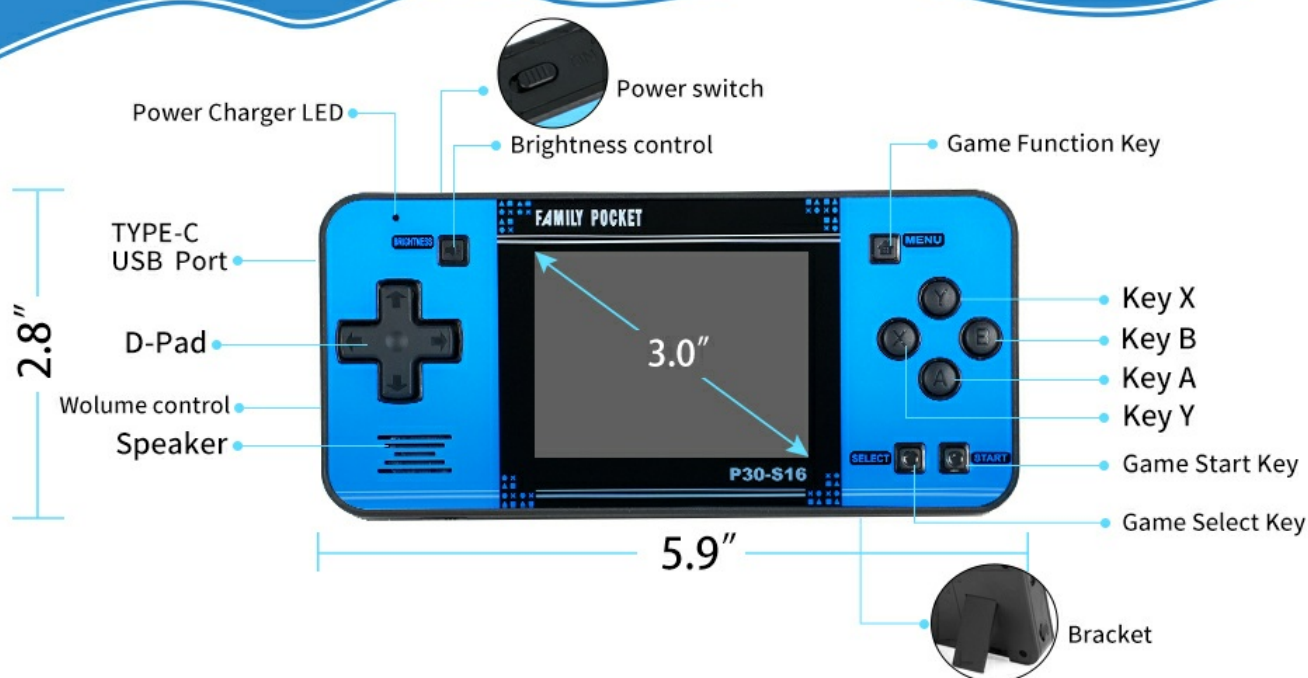


Image: Detailed diagram of the P30S console's buttons, ports, and features.

- **Power Switch:** Located on the top edge, used to turn the console on or off.
- **Power Charger LED:** Indicator light for charging status.
- **Brightness Control:** Adjusts screen brightness.
- **TYPE-C USB Port:** For charging the console.
- **D-Pad:** Directional pad for movement and menu navigation.
- **Volume Control:** Adjusts audio output.
- **Speaker:** Audio output for game sounds.
- **Game Function Keys (A, B, X, Y):** Action buttons for gameplay.
- **Game Start Key:** Initiates games or pauses gameplay.
- **Game Select Key:** Used for selections within game menus.
- **Bracket:** Integrated stand for hands-free viewing.

SETUP


Charging the Console

Before first use, fully charge the console. The P30S is equipped with an 860mAh rechargeable lithium-ion battery, providing approximately 4-6 hours of playtime on a full charge.

1. Locate the TYPE-C USB Port on the console.
2. Connect the included USB charging cable to the console's TYPE-C USB Port.
3. Connect the other end of the USB cable to a 5V USB power adapter (not included) or a compatible USB port on a computer.
4. The Power Charger LED will illuminate to indicate charging.
5. Once fully charged, the LED indicator may change color or turn off, depending on the model. Disconnect the charger.

The console features a low-battery warning function and a charging protection circuit for safety.

Continuous and uninterrupted energy supply

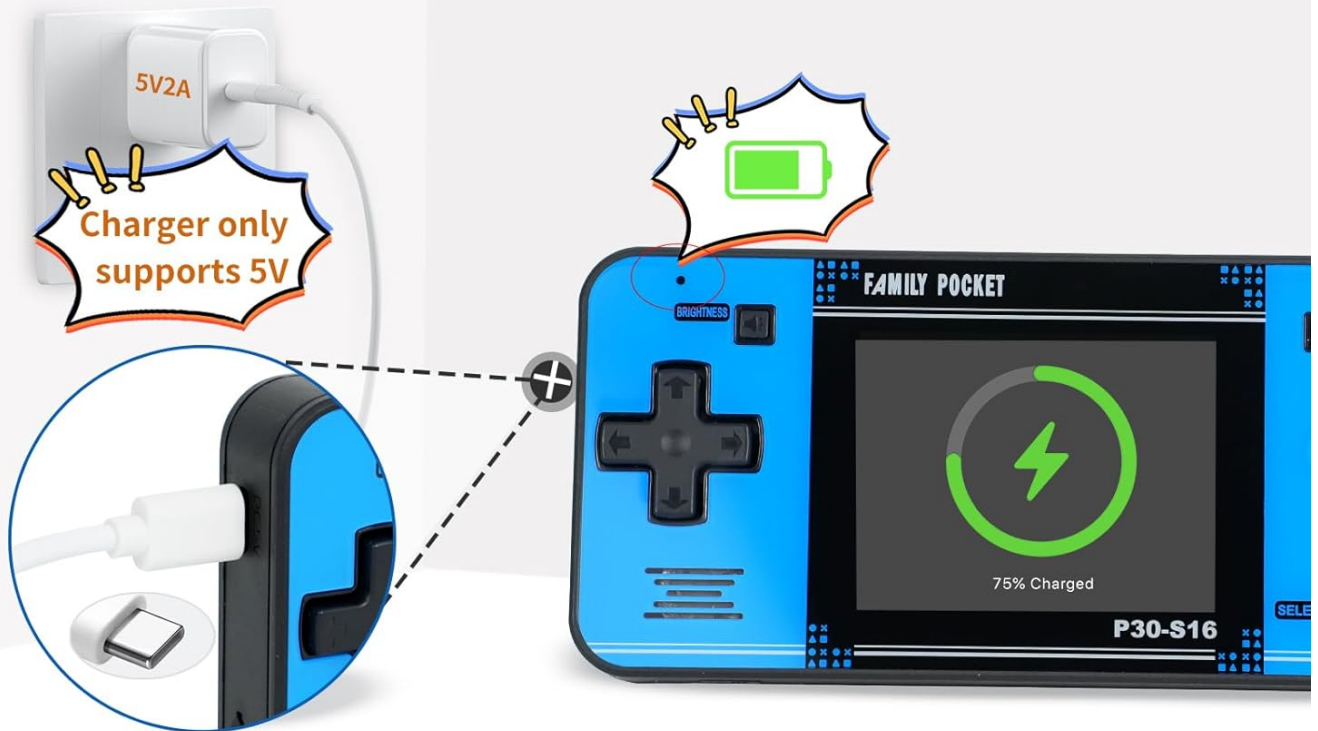

- ✓ 1. Equipped with an 860mAh rechargeable lithium - ion battery.
- ✓ 2. It can be used for 4 - 6 hours after being fully charged.
- ✓ 3. Have a low - battery warning function.
- ✓ 4. Adopt a universal USB interface.
- ✓ 5. Be equipped with a charging protection circuit.

Image: Instructions for charging the P30S console, emphasizing the 5V charger requirement and battery features.

First Use

After charging, slide the Power Switch to the 'ON' position to power on the console. The screen will display the main menu.

OPERATING INSTRUCTIONS

Power On/Off

- To power on: Slide the Power Switch to the 'ON' position.
- To power off: Slide the Power Switch to the 'OFF' position.

Game Selection and Navigation

Use the D-Pad to navigate through the game menus. The 'SELECT' and 'START' keys are used for confirming selections and initiating games.

1. From the main menu, use the D-Pad (Up/Down/Left/Right) to browse through game categories or individual game titles.
2. Press the 'SELECT' key to confirm a category or game selection.
3. Once a game is highlighted, press the 'START' key to begin playing.
4. During gameplay, the A, B, X, Y keys are used for various in-game actions, as defined by each specific game.

Adjusting Settings

- **Volume:** Use the Volume Control dial on the side of the console to increase or decrease the sound level.
- **Brightness:** Use the Brightness Control dial on the top edge to adjust the screen's brightness.

Simple and easy to use



3.0" LCD Screen
Protect Kid's Eyesight No need Wifi
System Runs Fast and Smoothly

6-8-year-old children can also play

Outdoor play can also be 8-12 years old

3-to 5-year-old Darling in the car

Image: The P30S console in use by children, demonstrating its user-friendly design.

MAINTENANCE

Cleaning

To clean the console, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or harsh chemicals, as these can

damage the device.

Battery Care

- Avoid fully discharging the battery frequently to prolong its lifespan.
- If storing the console for an extended period, charge it to about 50% before storage and recharge every few months.
- Do not expose the console to extreme temperatures.

Storage

Store the console in a cool, dry place away from direct sunlight and moisture when not in use.

Durability

The P30S console is constructed with a sturdy and durable ABS body designed to withstand accidental bumps during use.



Image: Illustration of the P30S console's durable construction and fall protection features.

TROUBLESHOOTING

If you encounter issues with your WELLST·G P30S Handheld Game Console, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Console does not turn on.	Battery is depleted; Power switch is off.	Charge the console fully. Ensure the Power switch is in the 'ON' position.
Screen is blank or unresponsive.	Low battery; System error.	Charge the console. Try turning the console off and on again.

Problem	Possible Cause	Solution
No sound from the speaker.	Volume is too low or muted.	Adjust the Volume Control dial to increase the sound.
Battery does not hold a charge.	Faulty charging cable/adapter; Battery degradation.	Try a different 5V USB charging cable and adapter. If the issue persists, contact customer support.
Games are slow or freezing.	Temporary software glitch.	Turn the console off and then on again.

SPECIFICATIONS

Below are the technical specifications for the WELLST·G P30S Handheld Game Console:

Feature	Specification
Model Number	P30S
Screen Size	3.0 inches
Display Type	LCD
Number of Preloaded Games	220
Battery Type	860mAh Lithium-Ion (rechargeable)
Battery Average Life	4-6 hours
Charging Port	TYPE-C USB
Controller Type	Button Control (D-Pad, A, B, X, Y, Select, Start)
Material Type	ABS
Item Dimensions (L x W x H)	5.9" x 2.8" x 0.7"
Number of Players	1
Age Range Description	Kid (Manufacturer Minimum Age: 36 months)

WARRANTY AND SUPPORT

Included Components

The product package includes:

- 1 x WELLST·G P30S Handheld Game Console
- 1 x USB Charging Cable

Customer Support

For any questions, concerns, or technical assistance not covered in this manual, please contact WELLST·G customer support through your retailer or the official brand website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question