

[Manuals.plus](#) /

› [Kitstorack](#) /

› Kitstorack 94.5" Height Adjustable Behind Couch Table Instruction Manual

Kitstorack ZXGZ-303

Kitstorack 94.5" Height Adjustable Behind Couch Table Instruction Manual

Model: ZXGZ-303

1. SAFETY INFORMATION

Important: Always follow the assembly instructions carefully. This table is heavy and long, so ensure it is properly secured to the wall to prevent tipping. Be cautious when handling the table to avoid injury.

- Read all instructions before assembly and use.
- Keep children and pets away during assembly.
- Do not overload the table. Refer to specifications for weight limits.
- Ensure all connections are secure before use.
- Use on a level surface to prevent instability.

2. PRODUCT OVERVIEW

The Kitstorack 94.5" Behind Couch Table is a height-adjustable narrow console designed to maximize space behind your sofa. It features built-in power outlets and USB ports for convenient device charging. Its modular design allows for flexible placement, either as a single extended unit or two separate tables.



Image 2.1: The Kitstorack 94.5\" Behind Couch Table in a living room, showcasing its use for storage and charging behind a sofa.

Key Features:

- **94.5\" Length:** Designed to fit most standard sofas for practical behind-couch storage.
- **Adjustable Height:** Range of 24.3\" to 32.5\" to match various sofa heights.
- **Built-In Power:** Two AC outlets (120V/12A) and two USB ports (5V/2A) for charging devices.
- **Modular Design:** Can be used as one long table or two separate units.
- **Wall-Support Design:** Adjustable screws for enhanced stability against walls, accommodating baseboards.
- **Adjustable Leveling Feet:** For stability on uneven floors.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Tabletop sections (2)
- Leg frames (2)

- Power outlet panel with USB ports (2)
- Adjustable wall-support screws (quantity as per manual)
- Adjustable leveling feet (quantity as per manual)
- Assembly hardware (screws, hex bolts, etc.)
- Assembly tool (e.g., hex key)
- Assembly Guide (this document)

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your Kitstorack Behind Couch Table. It is recommended to have two people for assembly due to the table's length.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Legs to Tabletop:** Attach the leg frames to the tabletop sections using the provided screws. Ensure the holes align correctly. Tighten using the provided tool.
3. **Insert Tabletop Support Brackets:** Insert the tabletop support brackets into the pre-drilled holes on the underside of the tabletop sections.
4. **Secure Legs to Brackets:** Secure the legs to the brackets using the included hex bolts. Do not overtighten initially.
5. **Connect Table Sections (if applicable):** If using as one long table, connect the two tabletop sections using the provided connectors.
6. **Install Power Panel:** The power panel can be installed on either side of the table or in the middle, depending on your preference. Secure it into the designated cutout.
7. **Flip Table Upright:** Once all connections are secure, carefully flip the table upright.
8. **Adjust Leveling Feet:** Adjust the leveling feet at the bottom of the legs to ensure the table is stable and balanced on your floor.
9. **Install Wall-Support Screws:** Position the table against the wall. Install the adjustable wall-support screws to help secure the table and prevent wobbling, especially if baseboards are present. Adjust them until the table is stable.

Install the Power Panel on Either Side



Image 4.1: Options for installing the power panel on the table.

Wall-Friendly Support

Keeps the table stable and prevents wall marks



Adjustable anti-tilt supports prevent wobbling when the table cannot sit flush against the wall due to baseboards.

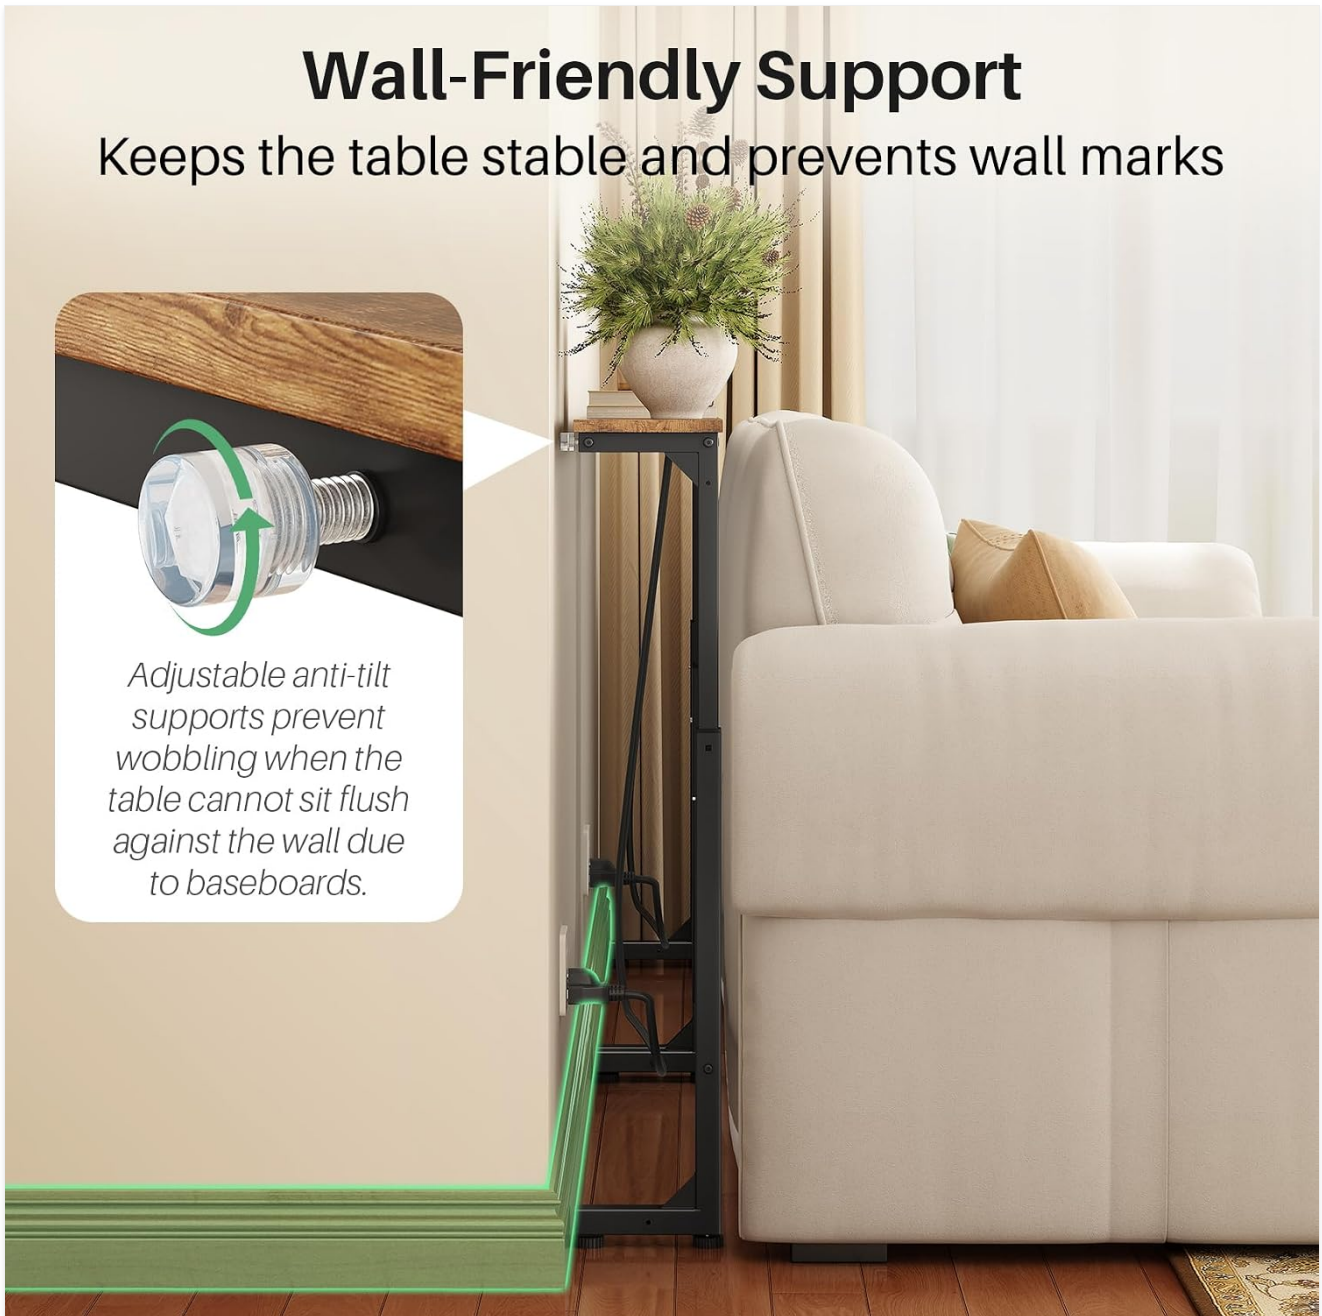


Image 4.2: Detail of the adjustable wall-support mechanism.

Adjustable Leveling Feet

Keep balance & protect floors



Image 4.3: Adjustable leveling feet for stability.

Your browser does not support the video tag.

Video 4.1: Official product video demonstrating the assembly and features of the Kitstorack Behind Couch Table.

5. OPERATION

5.1. Height Adjustment

The table's height can be adjusted from 24.3 inches to 32.5 inches to align with various sofa heights. To adjust, loosen the locking mechanisms on the legs, raise or lower the tabletop to the desired height, and then securely tighten the locking mechanisms.

4-Level Adjustable Height (24.3" - 32.5")

Fits various sofa heights



Image 5.1: Table height adjustment range.

5.2. Using Power Outlets and USB Ports

The integrated power panel provides two standard AC outlets (120V/12A) and two USB ports (5V/2A) for charging your electronic devices. Simply plug your devices into the appropriate ports. The table includes a 4.9 ft power cord for flexible placement.

Reliable Charging, Anytime



Image 5.2: Detail of the integrated power outlets and USB ports.



Image 5.3: The 4.9 ft power cord for extended reach.

5.3. Modular Configuration

The table consists of two modular sections that can be connected to form a single 94.5" long console or used separately as two smaller tables. This allows for versatile placement in different areas of your home.

Use Together or Place Separately

Each unit includes power outlets and can be used separately or combined for a longer console setup



Image 5.4: Modular use of the table, together or separately.

6. MAINTENANCE

- **Cleaning:** Wipe the table surfaces with a dry cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining. The table is not stain resistant.
- **Hardware Check:** Periodically check all screws and bolts to ensure they remain tight. Retighten as necessary to maintain stability.
- **Leveling Feet:** Re-adjust leveling feet if the table becomes wobbly over time.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly.	Uneven floor; loose connections; wall-support not adjusted.	Adjust leveling feet. Tighten all assembly screws and bolts. Adjust wall-support screws.
Power outlets/USB ports not working.	Power cord not plugged in; power strip switch off; faulty device.	Ensure power cord is fully plugged into a working wall outlet. Check if the power strip has an on/off switch. Test with a different device.
Table sections do not align perfectly.	Improper connection during assembly.	Loosen connecting hardware, realign sections, and retighten. Ensure table is on a flat surface during connection.

8. SPECIFICATIONS

Feature	Detail
Brand	Kitstorack
Model Number	ZXGZ-303
Extended Length	94.5 inches
Adjustable Height Range	24.3" - 32.5"
Item Depth	13.8 inches
Material Type	Engineered Wood (Top), Metal (Frame)
Color	Rustic Brown
Power Outlets	2 AC Outlets (120V/12A)
USB Ports	2 USB Ports (5V/2A)
Power Cord Length	4.9 ft
Item Weight	5 Pounds <i>(Note: This weight may refer to a single component. Please verify actual product weight upon receipt.)</i>
Product Care	Wipe with Dry Cloth
Assembly Required	Yes

9. WARRANTY INFORMATION

Kitstorack products are designed for quality and durability. For specific warranty details regarding your Kitstorack 94.5" Behind Couch Table, please refer to the warranty card included with your purchase or visit the official Kitstorack website. Keep your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your Kitstorack Behind Couch Table, please contact our customer support team:

- **Website:** [Visit the Kitstorack Store on Amazon](#)
- **Email:** [Insert Customer Support Email Here]
- **Phone:** [Insert Customer Support Phone Number Here]

Please have your model number (ZXGZ-303) and purchase date ready when contacting support.