

Inalsa Tasty Fry CD4.5

INALSA Tasty Fry CD4.5 Ceramic Coated Air Fryer

Instruction Manual

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before using the appliance.

- Do not immerse the cord, plug, or appliance in water or other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always unplug the appliance when not in use and before cleaning. Allow it to cool down before handling.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any purpose other than described in this manual.
- Hot air is released through the air outlet openings during hot air frying. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- The surfaces may become hot during use.

PRODUCT OVERVIEW

The INALSA Tasty Fry CD4.5 is a 4.5-liter ceramic-coated air fryer designed for healthy cooking with minimal oil. It features a 1400W motor and 360° rapid air circulation technology for efficient and even cooking.



Image: Front view of the INALSA Tasty Fry CD4.5 Air Fryer.

Key features include:

- **Toxin-Free Ceramic Coated Basket:** Ensures healthy cooking without harmful chemicals like PFOA, PTFE, or PFAS.
- **Powerful 1400W Motor:** Provides rapid heating and efficient cooking.
- **360° Rapid Air Circulation:** Delivers crispy results with up to 99% less oil.
- **Digital Touch Panel:** Intuitive controls for easy operation.
- **8 Preset Cooking Functions:** Simplifies meal preparation for various dishes.
- **4.5L Capacity:** Suitable for families, allowing cooking of large batches or a whole chicken.
- **Bonus Food Separator:** Allows simultaneous cooking of two different food items without flavor mixing.

WHY SHOULD I BUY **INALSA** AIR FRYER



INALSA Tasty Fry CD 4.5



Other Brand Air Fryers

Material/ Coating

Ceramic Coated: INALSA's ceramic coated air fryer is crafted for safe, toxin-free cooking

Air fryers may contain harmful chemicals like PFOA and PTFE

Air Fryer Type

Digital

Manual

Capacity

4.5L

4.2 L

Preset Menu

8 Menu options

0 Menu options

Cost

Power packed with best features still economical & pocket friendly

Expensive

Image: Diagram highlighting the benefits of ceramic coating, including non-toxic, scratch-resistant, and no chemical leaching.

HIGH POWER **1400 WATT** **AERO CRISP TECHNOLOGY**

4.5L Capacity | Upto 60 min & 200° Temperature Control



Image: Certifications for the air fryer's ceramic coating, showing it is PFOA/PFOS free, LFGB tested, and food safe.

BEFORE FIRST USE

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the basket and pan thoroughly with hot water, some dishwashing liquid, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a moist cloth.
4. Ensure all parts are completely dry before use.

SETUP

1. Place the air fryer on a stable, horizontal, and heat-resistant surface.
2. Ensure there is at least 10 cm of free space around the appliance for proper ventilation.
3. Insert the power plug into a grounded wall outlet.
4. Pull the pan out of the air fryer. Place the food separator (if desired) and then the food into the basket.
5. Slide the pan back into the air fryer.

OPERATING INSTRUCTIONS

The INALSA Tasty Fry CD4.5 features a digital touch panel for easy control of cooking settings.



Image: Close-up of the digital touch panel, showing temperature, time, and preset icons.

Power On/Off

- Press the power icon (O/I) to turn the appliance on or off.

Using Presets

- After turning on, select one of the 8 preset icons (e.g., Fries, Chicken, Fish). The air fryer will

automatically set the recommended temperature and time for that food type.

- Press the start/pause icon (▶/||) to begin cooking.

Manual Temperature and Time Adjustment

- To manually set cooking parameters, press the temperature icon (°C) and use the plus (+) and minus (-) buttons to adjust the temperature (up to 200°C).
- Press the timer icon (min) and use the plus (+) and minus (-) buttons to adjust the cooking time.
- Press the start/pause icon (▶/||) to begin cooking with your custom settings.

During Cooking

- You can pull out the pan at any time to check or shake the food. The air fryer will automatically pause and resume cooking once the pan is reinserted.
- For even cooking, especially with larger quantities, it is recommended to shake the basket halfway through the cooking time.



Image: Illustration of the 1400W heating element and 360° hot air circulation cooking a whole chicken.

COOKING GUIDE / PRESETS

The 8-in-1 presets offer convenient cooking options for various dishes. The following table provides general guidelines; actual cooking times may vary based on food quantity and desired crispness.

LARGE DISPLAY EASY TO OPERATE



Image: Visual representation of the 8-in-1 presets with examples of food items like fries, chicken, fish, and vegetables.

Preset	Recommended Temperature	Recommended Time
Fries	200°C	15-25 min
Chicken	180°C	15-20 min
Fish	160°C	15-20 min
Cake	160°C	13-18 min
Vegetable	180°C	10-15 min
Shrimp	160°C	8-12 min
Bacon	180°C	10-15 min
Steak	200°C	10-15 min

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

The Ultimate Shield for Your Food.

On Cooking Pan & Food Separator



Image: The air fryer basket and food separator, highlighting the premium ceramic coating.

Cleaning the Basket and Pan

- Always unplug the air fryer and allow it to cool completely before cleaning.
- Remove the pan and basket. They are **not dishwasher safe**.
- Clean the pan and basket with hot water, dishwashing liquid, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes.
- Do not use metal utensils or abrasive cleaning materials, as this may damage the ceramic non-stick coating.

Cleaning the Interior and Exterior

- Wipe the exterior of the air fryer with a damp cloth.
- Clean the interior with a non-abrasive sponge and warm soapy water.
- For the heating element, use a cleaning brush to remove any food residue.
- Ensure all parts are completely dry before storing or next use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power plug is securely inserted into a grounded wall outlet.
Food is not cooked evenly.	Too much food in the basket; food not shaken.	Reduce food quantity. Shake the basket halfway through cooking.
Food is not crispy.	Temperature too low; cooking time too short; food not properly oiled.	Increase temperature or cooking time. Lightly brush or spray food with oil.
White smoke comes from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the pan and basket thoroughly. Remove excess oil from food before air frying.
Display shows an error code.	Internal malfunction.	Unplug the appliance, wait 10 minutes, then plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Tasty Fry CD4.5
Capacity	4.5 Liters
Wattage	1400 Watts
Voltage	240 Volts
Control Method	Touch
Max Temperature Setting	200 Degrees Celsius
Air Frying Technology	Rapid Air Circulation
Material	Ceramic (Inner Material)
Nonstick Coating	Yes
Dishwasher Safe	No
Product Dimensions (D x W x H)	25.5D x 33.5W x 28.3H Centimeters
Item Weight	2950 Grams
Included Components	1 N Air Fryer Unit, 1 N Cooking pan, 1 N Food Separator, 1 N Instruction Manual Cum Warranty Card, 1 Recipe Booklet

WARRANTY AND SUPPORT

Your INALSA Tasty Fry CD4.5 Air Fryer comes with a warranty. Please refer to the included "Instruction Manual Cum Warranty Card" for detailed information regarding warranty terms, conditions, and duration.

For technical assistance, service, or any product-related queries, please contact the manufacturer:

Manufacturer: Tuareg Marketing Pvt. Ltd.

Address: Khasra No- 1189, Bhalswa, New Delhi-110033, India

Contact: 9773982065