

[Manuals.plus](#) /

› [Reshow](#) /

› Reshow Cassette Player 12 User Manual

## Reshow Cassette Player 12

# Reshow Cassette Player 12 User Manual

Model: Cassette Player 12

### INTRODUCTION

---

Thank you for choosing the Reshow Cassette Player 12. This portable device allows you to enjoy your favorite cassette tapes and convert them into digital files. This manual provides essential information for the safe and efficient use of your new cassette player.



Image: Reshow Cassette Player 12

## PACKAGE CONTENTS

- Reshow Cassette Player 12
- USB-C Cable
- User Manual (this document)

## SETUP

### Powering the Device

The Reshow Cassette Player 12 can be powered via the included USB-C cable or by batteries (not included).

1. **USB-C Power:** Connect the USB-C cable to the player's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port.
2. **Battery Power:** Open the battery compartment (location not specified in data, typically on the back or side) and insert the required batteries, ensuring correct polarity.

### Inserting a Cassette Tape

1. Locate the cassette compartment door.
2. Gently open the compartment door.
3. Insert your cassette tape with the open edge facing the player's head mechanism.
4. Close the compartment door until it clicks securely.

## OPERATING INSTRUCTIONS

---

### Playing a Cassette

1. Ensure the cassette player is powered on and a tape is inserted.
2. Press the **PLAY** button to begin playback.
3. Adjust the volume using the volume control dial (location not specified, typically on the side).
4. To stop playback, press the **STOP** button.
5. Use the **FAST FORWARD** and **REWIND** buttons to navigate through the tape.

### Using the Built-in Speaker and Headphone Jack

- **Built-in Speaker:** Audio will play automatically through the integrated speaker when no headphones are connected.
- **Headphone Jack:** Connect standard 3.5mm headphones (not included) to the headphone jack for private listening. Connecting headphones will automatically mute the built-in speaker.

### Converting Cassettes to Digital Files (MP3)

The Reshow Cassette Player 12 can convert your analog tapes to digital files using a computer and appropriate software (not included).

1. Connect the cassette player to your computer using the supplied USB-C cable.
2. Your computer should recognize the device as an audio input.
3. Open your preferred audio recording software (e.g., Audacity, available separately).
4. Configure the software to record from the USB audio input device.
5. Start playback on the cassette player and begin recording in your software.
6. Once recording is complete, stop playback and recording, then save your digital file (e.g., MP3 format).

## MAINTENANCE

---

### Cleaning the Device

- Wipe the exterior of the player with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials.
- Periodically clean the tape head and pinch roller with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality and tape longevity.

### Storage

Store the cassette player in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Player does not turn on.	No power or low batteries.	Check USB-C connection or replace batteries.
No sound during playback.	Volume too low, headphones connected, or tape issue.	Increase volume, disconnect headphones, or check tape for damage.

Problem	Possible Cause	Solution
Poor sound quality.	Dirty tape head or worn tape.	Clean the tape head (see Maintenance). Try a different tape.
Tape gets stuck or chewed.	Damaged tape or dirty pinch roller.	Do not use damaged tapes. Clean the pinch roller (see Maintenance).
Cannot convert to digital.	Incorrect software settings or cable issue.	Ensure USB-C cable is properly connected. Verify audio input settings in your recording software.

## SPECIFICATIONS

- **Model:** Cassette Player 12
- **Manufacturer:** Reshow
- **Power Source:** USB-C or Batteries (type not specified, typically AA or AAA)
- **Audio Output:** Built-in speaker, 3.5mm headphone jack
- **Connectivity:** USB-C for power and digital conversion
- **Package Dimensions:** 7.52 x 4.49 x 1.81 inches
- **Item Weight:** 10.8 ounces
- **ASIN:** B0GCF4WMZ6
- **First Available:** December 24, 2025

## WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the available data. Please refer to the product packaging or the manufacturer's official website for details.