

[Manuals.plus](#) /

› [Pocket Hose](#) /

› Pocket Hose Arrow Customizable Spray Nozzle Instruction Manual

Pocket Hose 18371

Pocket Hose Arrow Customizable Spray Nozzle Instruction Manual

Model: 18371

INTRODUCTION

The Pocket Hose Arrow Customizable Spray Nozzle is designed to enhance your standard garden hose for various outdoor cleaning and watering tasks. It utilizes Flow Force Technology to convert ordinary water flow into a high-velocity jet stream without requiring electricity. This manual provides essential information for the safe and effective use of your spray nozzle.



Image: The Pocket Hose Arrow nozzle in use, demonstrating its powerful cleaning capability on a patio.

SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove the Pocket Hose Arrow nozzle and the four precision tips from the packaging.
2. **Connect to Garden Hose:** Attach the threaded end of the Pocket Hose Arrow nozzle to your standard garden hose. Ensure a tight connection to prevent leaks.
3. **Select and Attach a Tip:** Choose one of the four precision tips (Jet Stream, Triple Blast, Flat Spray, or Wide Stream) based on your intended use. Screw the selected tip onto the end of the nozzle until it is securely fastened. The nozzle holder can be used to store unused tips.

4 Precision Tips for Every Cleaning Job

From pinpoint blasting to gentle rinsing*, Pocket Hose Arrow includes four specialized tips so you can choose the right spray pattern for every surface.

*Spray velocity depends on the water PSI coming from your home. Results may vary.

softer fan spray



Image: The four interchangeable precision tips for the Pocket Hose Arrow, each designed for different spray patterns and cleaning intensities.

OPERATING INSTRUCTIONS

General Operation

1. **Turn on Water Supply:** Slowly turn on the water supply to your garden hose.
2. **Activate Spray:** Squeeze the trigger on the nozzle handle to begin spraying water. Release the trigger to stop the water flow.
3. **Adjust Flow:** Some models may include a flow control knob near the hose connection point. Adjust as needed for desired water volume.

Using Precision Tips

The Pocket Hose Arrow comes with four specialized tips to optimize performance for various tasks:

- **Jet Stream (Red Tip):** Delivers a concentrated, high-velocity stream for stubborn grime, mud, grout, siding, and hard-to-reach areas. Ideal for powerful cleaning.
- **Triple Blast (Purple Tip):** Features three clustered nozzles for fast, powerful cleaning across larger areas, providing high-efficiency cleanup for heavier dirt and large surfaces.
- **Flat Spray (Black Tip):** Provides a wider, softer fan spray suitable for rinsing cars, patio furniture, outdoor decor, and other surfaces requiring gentle cleaning without overly concentrated force.
- **Wide Stream (White Tip):** Creates a broader, more efficient spray pattern for cleaning driveways, patios, walkways, garage floors, and general watering of plants and flowers.



Pocket Hose Arrow uses Flow Force Technology to transform ordinary water flow into a powerful high-velocity jet stream — no electricity, no complicated setup.

Image: An internal diagram of the Pocket Hose Arrow, demonstrating its Flow Force Technology which amplifies standard water flow into a concentrated, high-velocity cleaning stream.

MAINTENANCE

- **Cleaning:** After each use, rinse the nozzle and tips with clean water to remove any dirt or debris.
- **Storage:** Store the sprayer in a clean, dry place away from direct sunlight and extreme temperatures when not in use.
- **Inspection:** Periodically inspect the nozzle and hose connections for any signs of wear, damage, or leaks. Replace components as necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low water pressure or weak spray	Insufficient water supply; Clogged tip; Loose hose connection	Ensure water spigot is fully open; Remove and clean the spray tip; Tighten all hose connections.
Water leaks from connections	Loose connection; Damaged washer/gasket	Tighten hose and tip connections; Inspect and replace any worn or damaged washers/gaskets.
No water flow	Water supply off; Kinked hose; Clogged nozzle/tip	Turn on water supply; Straighten hose; Check for and clear any blockages in the nozzle or tip.

Note: The Pocket Hose Arrow is a garden hose attachment and is not designed to provide the same pressure as a dedicated electric or gas-powered pressure washer.

SPECIFICATIONS

- **Brand:** Pocket Hose
- **Model Name:** Pocket Hose Arrow
- **Model Number:** 18371

- **Material:** Metal, Plastic
- **Product Dimensions:** 2"W x 17.39"H
- **Included Components:** Nozzle, 4 Precision Tips (Jet Stream, Triple Blast, Flat Spray, Wide Stream)
- **Power Source:** Manual (Water Pressure)
- **UPC:** 097298700460

SAFETY INFORMATION

- Always keep hands and face away from the spray.
- Do not use with cleaning solutions containing harsh chemicals.
- Keep the sprayer clean and dry when not in use.
- Dispose of any cleaning solutions according to local regulations.
- Do not leave the sprayer unattended while in use.

WARRANTY

Warranty information is not provided in this manual. Please refer to the product packaging or manufacturer's website for details regarding warranty coverage and terms.

CUSTOMER SUPPORT

For customer support or inquiries, please contact Pocket Hose directly or visit their official website for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question