

[Manuals.plus](#) /

> [COLAMY](#) /

> COLAMY NOYA Mid-Century Modern Dining Chair User Manual

COLAMY B0GCHG5KWS

COLAMY NOYA Mid-Century Modern Dining Chair User Manual

INTRODUCTION

Thank you for choosing the COLAMY NOYA Mid-Century Modern Dining Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new chairs. Please read these instructions carefully before assembly and retain them for future reference.

SAFETY INFORMATION

- Always assemble the chair according to the provided instructions.
- Do not exceed the maximum weight limit of 250 lbs (113 kg).
- This product may contain allergens.
- Keep away from children and pets during assembly.
- Always use the chair on a stable, flat surface.
- Ensure all bolts are tightened securely before use.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Chair components (legs, backrest, seat cushion)
- Hardware pack (bolts, washers, Allen wrench)
- Instruction manual



Image: Overview of the COLAMY NOYA Mid-Century Modern Dining Chair and its main components.

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your COLAMY NOYA Dining Chair. An assembly video is provided for visual guidance.

Your browser does not support the video tag.

Video: Detailed assembly guide for the COLAMY NOYA Dining Chair.

Step 1: Assemble the Leg Frame

Connect upper leg C and lower leg D. Place the X-metal plate E on the bottom of the legs' cross connection. Tighten bolt F using Allen wrench J to approximately 70% tightness. Do not fully tighten yet.



Image: Connecting the upper and lower leg components with the X-metal plate.

Step 2: Attach the Back Cushion

Install the back cushion B onto the assembled leg frame. Tighten the bolts F with Allen wrench J to 100% tightness.



Image: Securing the back cushion to the chair's wooden frame.

Step 3: Install the Seat Cushion

Install the seat cushion A onto the finished frame. Tighten the bolts G, spring washer H, and flat washer I using Allen wrench J to approximately 70% tightness. Do not fully tighten yet.



Image: Attaching the seat cushion to the chair's base.

Step 4: Final Tightening

Once all components are in place, tighten all bolts to 100% to ensure stability and safety.



Image: Ensuring all bolts are fully tightened for a secure assembly.

Step 5: Leveling the Chair

You can use the adjustable nails (foot pads) on the bottom of the legs to level the chair if necessary, ensuring it sits evenly on your floor.



Image: Adjusting the foot pads to level the chair.

OPERATING INSTRUCTIONS

The COLAMY NOYA Dining Chair is designed for indoor use in dining rooms, kitchens, or living areas. Once assembled and leveled, the chair is ready for use. Ensure the chair is placed on a flat, stable surface before sitting.

MAINTENANCE

Proper care will extend the life and appearance of your dining chairs.

- **Cleaning Upholstery:** For general cleaning, vacuum the fabric regularly to remove dust and debris. For spills, blot immediately with a clean, dry cloth. For tougher stains, use a mild fabric cleaner following the product's instructions, testing on an inconspicuous area first.
- **Cleaning Wooden Frame:** Wipe the wooden frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish. Dry immediately with a clean cloth.
- **Regular Checks:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading of the upholstery and damage to the wood finish.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Chair wobbles	Uneven floor or loose connections	Adjust the leveling nails on the bottom of the legs. Check and tighten all assembly bolts.
Squeaking noise	Loose bolts or friction between parts	Tighten all bolts. If noise persists, disassemble and reassemble, ensuring all parts are correctly aligned.
Difficulty assembling	Incorrect part orientation or bolts not aligned	Refer to the assembly video and instructions carefully. Ensure parts are oriented correctly before tightening. Do not overtighten bolts until all are in place.

SPECIFICATIONS

Feature	Detail
Brand	COLAMY
Model Number	B0GCHG5KWS
Color	Beige
Product Dimensions	20.67"D x 22.24"W x 31.89"H
Seat Height	18 inches (Standard)
Seat Cushion Thickness	2.6 inches
Material	Solid Rubber Wood (Frame), Linen Fabric (Upholstery), High-Density Foam (Fill)
Maximum Weight Capacity	250 Pounds (113 kg)
Style	Mid-Century Modern
Indoor/Outdoor Usage	Indoor Only
Assembly Time	Approximately 15 minutes per chair

Product Dimension **weight capacity**



IMPORTANT !!! NOTES

There are two chairs in each box. If you purchase multiple sets, Packages may ship separately and arrive on different days

Image: Detailed product dimensions and weight capacity.

WARRANTY AND SUPPORT

Your COLAMY NOYA Dining Chair comes with a standard return policy. For specific warranty details or if you encounter any issues not covered in this manual, please contact the seller directly through your purchase platform. Ensure you have your order number and product model information ready for faster assistance.

For additional support or inquiries, please visit the COLAMY Store: [COLAMY Home Store](#)