

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [EUHOMY](#) /

> [EUHOMY 0171226 Ice Maker User Manual](#)

EUHOMY 0171226

EUHOMY 0171226 Ice Maker User Manual

Model: 0171226 | Brand: EUHOMY

INTRODUCTION

Thank you for choosing the EUHOMY 0171226 Ice Maker. This appliance is designed to provide convenient and efficient ice production for your home or commercial needs. Please read this manual thoroughly before operating your new ice maker to ensure safe use, optimal performance, and proper maintenance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always plug the ice maker into a grounded electrical outlet.
- Do not immerse the power cord, plug, or any part of the appliance in water or other liquids.
- Supervise children when the appliance is in use.
- Unplug the ice maker before cleaning or when not in use for extended periods.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or is damaged in any way.
- Place the ice maker on a flat, stable surface, away from direct sunlight and heat sources.
- Ensure adequate ventilation around the appliance. Maintain at least 5 inches of space on all sides.
- Use only potable water in the ice maker.

PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- EUHOMY 0171226 Ice Maker Unit
- Ice Scoop
- User Manual

SETUP AND FIRST USE

1. **Unpacking:** Remove all packaging materials and inspect the ice maker for any damage.

2. **Placement:** Position the ice maker on a level, stable surface. Ensure it is not exposed to direct sunlight or near heat-producing appliances. Allow at least 5 inches of clearance around the unit for proper ventilation.
3. **Initial Cleaning:** Before first use, clean the interior of the ice maker.
 - Open the lid and remove the ice basket.
 - Clean the interior with a soft cloth and warm, soapy water. Rinse thoroughly.
 - Drain any remaining water through the drain plug located at the bottom of the unit.
 - Dry all surfaces completely.
4. **Adding Water:** Open the lid and fill the water reservoir with potable water up to the MAX fill line. Do not overfill.
5. **Power Connection:** Plug the ice maker into a grounded electrical outlet.
6. **First Ice Cycle:** Discard the first 3-4 batches of ice produced to ensure the internal components are thoroughly cleaned.

OPERATING INSTRUCTIONS

The EUHOMY 0171226 Ice Maker is designed for simple operation, producing chewable nugget-style ice quickly.

1. **Start Ice Production:** After filling the water reservoir and plugging in the unit, press the "ON/OFF" button (or equivalent power button) to begin the ice-making cycle.
2. **Ice Production:** The machine will automatically start producing ice. The ice will be dispensed into the ice basket.
3. **Ice Full Indicator:** The ice maker will pause production when the ice basket is full. Remove ice as needed to resume production.
4. **Add Water Indicator:** If the water level in the reservoir is too low, the "Add Water" indicator will illuminate. Refill the reservoir to continue ice production.
5. **Collecting Ice:** Use the provided ice scoop to remove ice from the basket.



Image: The EUHOMY 0171226 Ice Maker actively producing and collecting nugget-style ice in its internal basket. The transparent lid allows visibility of the ice-making process.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your ice maker and ensure hygienic ice production.

1. **Daily Cleaning:**
 - Empty the ice basket and drain any remaining water from the reservoir.
 - Wipe down the interior with a clean, damp cloth.
 - Ensure the exterior is clean and dry.
2. **Self-Cleaning Function:** This model features a self-cleaning function. Refer to the specific instructions in your manual for activating this cycle. Typically, it involves adding water and a cleaning solution (if recommended by the manufacturer) and pressing a dedicated clean button.

3. **Descaling:** Over time, mineral deposits can build up. Descale the unit periodically using a mixture of water and vinegar or a commercial ice maker cleaning solution. Follow the product's instructions carefully.
4. **Storage:** If storing the ice maker for an extended period, ensure it is completely drained, cleaned, and dry. Store it in a cool, dry place.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Ice maker not turning on	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power to outlet; try a different outlet.
"Add Water" indicator on	Water reservoir is empty or low.	Fill the water reservoir with potable water up to the MAX line.
No ice production	Low water level; ambient temperature too high; machine malfunction.	Ensure sufficient water; operate in a cooler environment; contact support if issue persists.
Ice is too small or soft	Water temperature too high; ambient temperature too high.	Use colder water; ensure proper ventilation and cooler room temperature.

SPECIFICATIONS

While specific detailed specifications are not provided, the EUHOMY 0171226 Ice Maker is designed as a countertop unit for efficient ice production. For precise dimensions, weight, and electrical requirements, please refer to the product packaging or contact EUHOMY customer support.

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official EUHOMY website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

EUHOMY Customer Support: Please refer to the contact information provided on the product packaging or the official EUHOMY website.