

[Manuals.plus](#) /

› [ZMISHIBO](#) /

› ZMISHIBO 42 Inch Ceiling Fan with Lights Instruction Manual

ZMISHIBO SH42

ZMISHIBO 42 Inch Ceiling Fan with Lights Instruction Manual

Model: SH42

1. SAFETY INFORMATION

Read all instructions carefully before installing and operating your ceiling fan. Keep this manual for future reference.

- **Electrical Safety:** All electrical connections must be performed by a qualified electrician and conform to local codes and ordinances. Disconnect power at the circuit breaker before installation or servicing.
- **Mounting:** Ensure the mounting structure can support the weight of the fan (approximately 15 lbs). The fan must be mounted at a minimum distance of 7 feet (2.1 meters) from the floor to the blades.
- **Blade Clearance:** Maintain at least 30 inches (76 cm) clearance from the blade tips to any walls or obstructions.
- **Motor:** This fan uses a DC motor. Ensure proper wiring as per the installation guide.
- **Light Kit:** Do not attempt to replace the integrated LED light source. Contact customer support if the light malfunctions.
- **Cleaning:** Always turn off the power before cleaning the fan. Use a soft, damp cloth. Do not use abrasive cleaners.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Motor Housing Assembly
- Fan Blades (5)
- Light Kit with LED Panel
- Remote Control with Wall Mount
- Mounting Bracket
- Canopy
- Hardware Pack (screws, wire nuts, washers)
- Instruction Manual

3. SPECIFICATIONS

Feature	Specification
Brand	ZMISHIBO
Model Number	SH42
Size	42 Inch
Color	Nickel
Mounting Type	Flush Mount
Motor Type	Brushless DC Motor
Number of Speeds	6
Noise Level	30 Decibels
Air Flow Capacity	2281 Cubic Feet Per Minute
Light Wattage	24 watts
Color Temperature	3000K (Warm), 4500K (Neutral), 6500K (Cool White)
Dimmable	10% to 100%
Control Method	Remote Control, App Control
Timer Settings	1H, 4H, 8H
Voltage	120 Volts
Product Dimensions	42"D x 42"W x 9.1"H
Indoor/Outdoor Usage	Indoor

4. INSTALLATION

Follow these steps for proper installation. It is recommended to have a qualified electrician perform the installation.

4.1 Pre-Installation Steps

- Turn off Power:** Before starting, ensure the power supply to the ceiling fan location is turned off at the circuit breaker.
- Prepare Mounting Location:** Ensure the junction box is securely fastened to the building structure and can support the fan's weight.
- Unpack Components:** Carefully remove all parts from the packaging and lay them out.

4.2 Mounting the Fan

- Attach the mounting bracket to the ceiling junction box using the provided screws and washers.
- Carefully lift the fan motor assembly and hang it from the mounting bracket using the safety cable.
- Connect the electrical wires (Live, Neutral, Ground) from the ceiling to the corresponding wires on the fan using the wire nuts. Ensure connections are secure.
- Secure the fan motor assembly to the mounting bracket.
- Attach the fan blades to the motor housing. The blades are double-sided (Nickel/Wood Grain); choose your

preferred finish.

6. Install the LED light kit by connecting its wires to the fan's light wires and securing it to the motor housing.
7. Attach the lampshade to the light kit.
8. Install the canopy, ensuring all wires are tucked neatly inside.



42 Inch Ceiling Fan with Lights

Product Dimension



42"

2 Colors in One Blade



5.2"

15.5"

Room Size.

Length & Width:

12ft × 12ft

Height:


8ft-11ft



High Quality DC Motor



Larger Lampshade

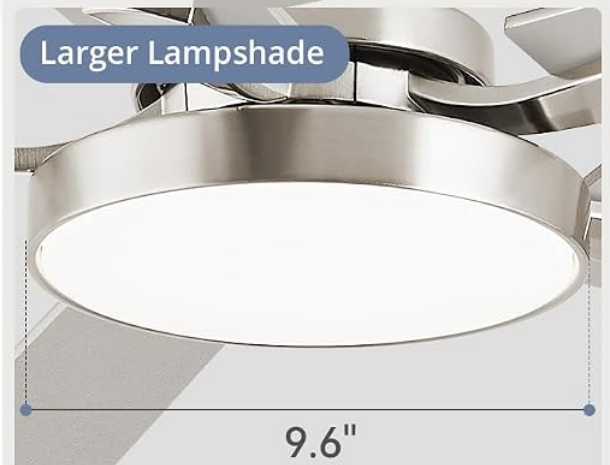

9.6"

Image: Product dimensions and blade options.

4.3 Installation Video Guide

Your browser does not support the video tag.

Video: ZMISHIBO Ceiling Fan Installation Guide. This video demonstrates the installation process for a 52-inch model, which is similar to the 42-inch model.

5. OPERATING INSTRUCTIONS

Your ZMISHIBO ceiling fan can be controlled via the included remote control or a smartphone application.

5.1 Remote Control Functions



Image: Remote control and app features overview.

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Use the fan speed buttons to cycle through 6 available speeds.
- **Light On/Off:** Independently control the light.
- **Dimming:** Adjust light brightness from 10% to 100%.
- **Color Temperature:** Cycle through 3000K (Warm), 4500K (Neutral), and 6500K (Cool White).
- **Timer:** Set the fan to turn off automatically after 1, 4, or 8 hours.
- **Forward/Reverse:** Change the direction of blade rotation for summer (downward airflow) or winter (upward airflow).
- **Memory Function:** The fan remembers your last light and fan settings when turned off and on, even via a wall switch.



3 Color Temperature & 10%-100% Smooth Dimming

Meet the light demand in different scenarios



◀ Color Temperature Selectable ▶



3000K

4500K

6500K

◀ Smooth Dimming ▶



10%

100%

Image: 3 Color Temperature and Smooth Dimming.



Reversible Air Circulation



Image: Reversible Air Circulation modes.

5.2 Seasonal Operation (Forward/Reverse)

- **Summer Mode (Forward):** Blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
- **Winter Mode (Reverse):** Blades rotate clockwise, drawing air upwards to circulate warm air trapped near the

ceiling.

6. APP CONTROL

Control your fan conveniently using the 'FanLamp Pro' application on your smartphone.

6.1 Download the App

Download the 'FanLamp Pro' app from the Google Play Store (for Android) or Apple App Store (for iOS).

6.2 Connect Bluetooth

How To Connect The APP

① Turn on the Bluetooth



② Allow this APP to access Bluetooth

For iPhone users, Android users can ignore this step



Method 1: Click "Allow" when opening the app for the first time




Method 2: Go to your phone settings's page, find this App and enable Bluetooth access

Image: Steps to enable Bluetooth for app control.

1. Turn on Bluetooth on your smartphone.
2. Open the 'FanLamp Pro' app. If prompted, allow the app to access Bluetooth. If not prompted, go to your phone's settings, find the app, and enable Bluetooth access manually.


6.3 Pair the Fan

How To Pair The APP

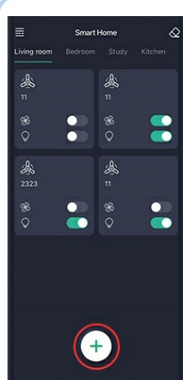


③ Add the fan and pair it

1. Enter the app page and click the plus sign below (Add group).

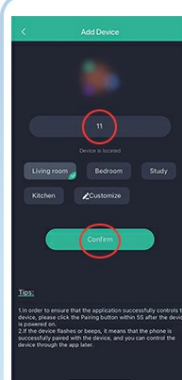

2. Enter any name, then click Confirm.

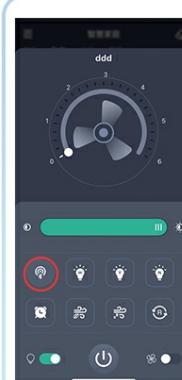

3. Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. The fan light will flash twice to indicate successful pairing.

Image: Steps to pair the fan with the app.

1. In the 'FanLamp Pro' app, navigate to the main page and click the '+' sign (or 'Add group') to add a new device.
2. Enter a name for your fan and confirm.

3. Turn on the fan's power at the wall switch. Once the light is on, press the pairing button within the app within 5 seconds. The fan light will flash twice to indicate successful pairing.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Do not use water directly on the fan or harsh chemical cleaners.
- **Blade Inspection:** Check fan blades for any cracks or damage. Damaged blades should be replaced to prevent imbalance and potential hazards.
- **Tighten Screws:** Over time, screws may loosen. Periodically check and tighten all screws on the blade attachments and mounting hardware.
- **Light Cover:** Clean the light cover gently with a soft cloth to maintain light output.

8. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low/dead; Fan not paired with remote/app.	Check circuit breaker; Verify all wire connections are secure; Replace remote control battery; Re-pair remote/app with fan.
Light does not work	Loose wire connection to light kit; LED panel malfunction; Remote control issue.	Check light kit wiring; If LED panel is faulty, contact customer support; Check remote battery and re-pair.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Ensure blades are installed correctly; Check mounting bracket for secure attachment.
Remote control not working	Battery low/dead; Remote not paired; Obstruction between remote and receiver.	Replace battery; Re-pair remote with fan; Ensure clear line of sight.
Fan makes excessive noise	Loose screws; Motor issue; Blades hitting an obstruction.	Check and tighten all screws; Ensure no obstructions; If noise persists, contact customer support.

If troubleshooting steps do not resolve the issue, please contact ZMISHIBO customer support.

9. WARRANTY AND SUPPORT

ZMISHIBO is committed to providing quality products and customer satisfaction.

- **Motor Warranty:** 5-year support for the motor.
- **Parts Warranty:** 2-year support on other parts.
- **Customer Support:** ZMISHIBO provides 24-hour timely customer support.

For warranty claims or technical assistance, please refer to the contact information provided with your purchase or visit the official ZMISHIBO website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GCK3PSVF>

More documents and user manuals: <https://manuals.plus/>