

Jojoka PHO_33JV5EMCfRdo

Jojoka 6-Drawer Dresser with LED Lights & Power Outlet

Model: PHO_33JV5EMCfRdo

User Manual

1. INTRODUCTION

Thank you for choosing the Jojoka 6-Drawer Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

2. SAFETY INFORMATION

- **Anti-Tip Device:** Always install the included anti-tip device to prevent accidental tipping and ensure stability. This is crucial for safety, especially in households with children.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 22 lbs (10 kg) per drawer. The top surface also has a weight limit; avoid placing excessively heavy items on it.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all parts are securely fastened before use.
- **Electrical Safety:** When using the built-in power outlets and USB ports, ensure that connected devices do not exceed the specified electrical ratings. Do not expose the power strip to moisture.
- **Children:** Keep small parts and packaging materials away from children during assembly.

Anti-Tip Device

Ensures stability and safety for stored items

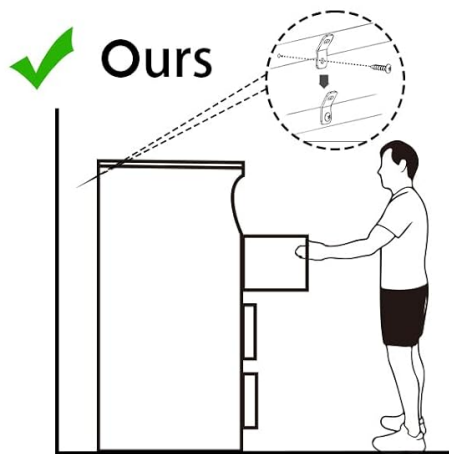


Figure 2.1: Proper installation of the anti-tip device ensures stability and safety, preventing the dresser from tipping forward.

3. PACKAGE CONTENTS

Before assembly, verify that all components listed in the packaging instructions are present and undamaged. If any parts are missing or damaged, contact customer service immediately.

The package typically includes:

- Dresser panels (top, bottom, sides, back)
- 6 Drawer components (fronts, sides, backs, bottoms)
- Drawer slides (metal)
- Drawer handles/knobs
- LED light strip with power adapter
- Power outlet unit with USB ports and power cord
- Anti-tip safety kit
- Assembly hardware (screws, dowels, cam locks, etc.)

- Assembly instructions manual

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this dresser. Please follow the detailed step-by-step instructions provided in the separate assembly guide included in your package. Ensure you have the necessary tools (e.g., screwdriver, hammer) before starting.

1. **Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface. Identify each part using the labels provided.
2. **Assemble Frame:** Begin by assembling the main frame of the dresser according to the diagrams in the assembly guide.
3. **Install Drawer Slides:** Attach the metal drawer slides to the dresser frame and drawer sides. Ensure they are aligned correctly for smooth operation.
4. **Assemble Drawers:** Construct the six drawers, attaching the fronts, sides, backs, and bottoms. Install the handles/knobs.
5. **Install Back Panel:** Secure the innovative back panel for added stability and dustproofing.
6. **Install Power Outlet & LED Lights:** Integrate the power outlet unit and LED light strip into the designated areas as shown in the assembly guide.
7. **Attach Anti-Tip Device:** Securely fasten the anti-tip device to the dresser and the wall. This step is critical for safety.

For detailed visual instructions, refer to the assembly diagrams in your product packaging.

5. OPERATING INSTRUCTIONS

5.1. Using the Built-in Power Outlet and USB Ports

- Locate the integrated power outlet unit on the dresser.
- Plug the dresser's main power cord (6.56 ft) into a standard wall outlet.
- You can now use the 2 AC outlets and 2 USB ports to charge or power your electronic devices.
- Ensure devices are compatible with the outlet's voltage and current ratings.

5.2. Operating the LED Lighting System

- The LED light bar is powered via the dresser's main power connection.
- Control the LED lights using the provided remote control or a compatible smartphone application (if applicable).
- The system offers 16 colors and 21 dynamic modes for customizable ambiance.
- Refer to the separate LED light instruction manual for detailed control functions, including app pairing, music sync, timing functions, and key control.

Adjustable RGB Light Strips

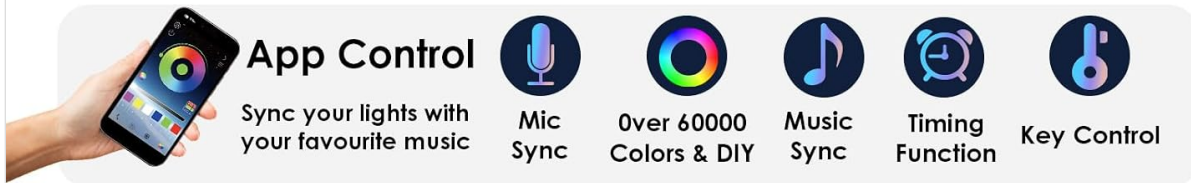


Figure 5.1: The adjustable RGB light strips offer various control options for personalized lighting.

6. MAINTENANCE

- **Cleaning:** Wipe the dresser surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the dresser to prevent buildup.
- **Drawer Slides:** Periodically check drawer slides for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **Hardware:** Occasionally check and tighten all assembly hardware to ensure the dresser remains stable.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood finish.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dresser is wobbly/unstable	Loose hardware; uneven floor; anti-tip device not installed.	Tighten all screws and bolts. Place shims under legs if floor is uneven. Install the anti-tip device as per instructions.
Drawers do not slide smoothly	Drawer slides misaligned; debris in slides; overloaded drawer.	Check alignment of drawer slides and adjust if necessary. Clean slides. Reduce drawer contents to below 22 lbs.
LED lights not working	Power cord unplugged; remote control battery dead; LED strip connection loose.	Ensure power cord is securely plugged into wall and dresser. Replace remote battery. Check all LED strip connections.
Power outlets/USB ports not working	Dresser power cord unplugged; circuit breaker tripped; faulty device.	Verify dresser power cord is plugged in. Check household circuit breaker. Test with a different device.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Jojoka customer service.

8. SPECIFICATIONS

- **Brand:** Jojoka
- **Model:** PHO_33JV5EMCfRdo
- **Overall Dimensions (Approx.):** 55.1" W x 15.7" D x 33.9" H
- **Drawer Interior Dimensions (Approx.):** 26.5" L x 13.4" D x 6.7" H
- **Open Shelf Dimensions (Approx.):** 26.6" W x 8.5" H
- **Number of Drawers:** 6
- **Material:** High-quality MDF (Wood)
- **Finish Type:** Polished
- **Color:** Black
- **Item Weight:** 110.2 pounds
- **Drawer Weight Capacity:** 22 lbs (10 kg) per drawer
- **Power Outlets:** 2 AC outlets, 2 USB ports
- **Power Cord Length:** 6.56 ft
- **LED Lighting:** Multi-color RGB light bar (16 colors, 21 dynamic modes)
- **Assembly Required:** Yes

PRODUCT SIZE

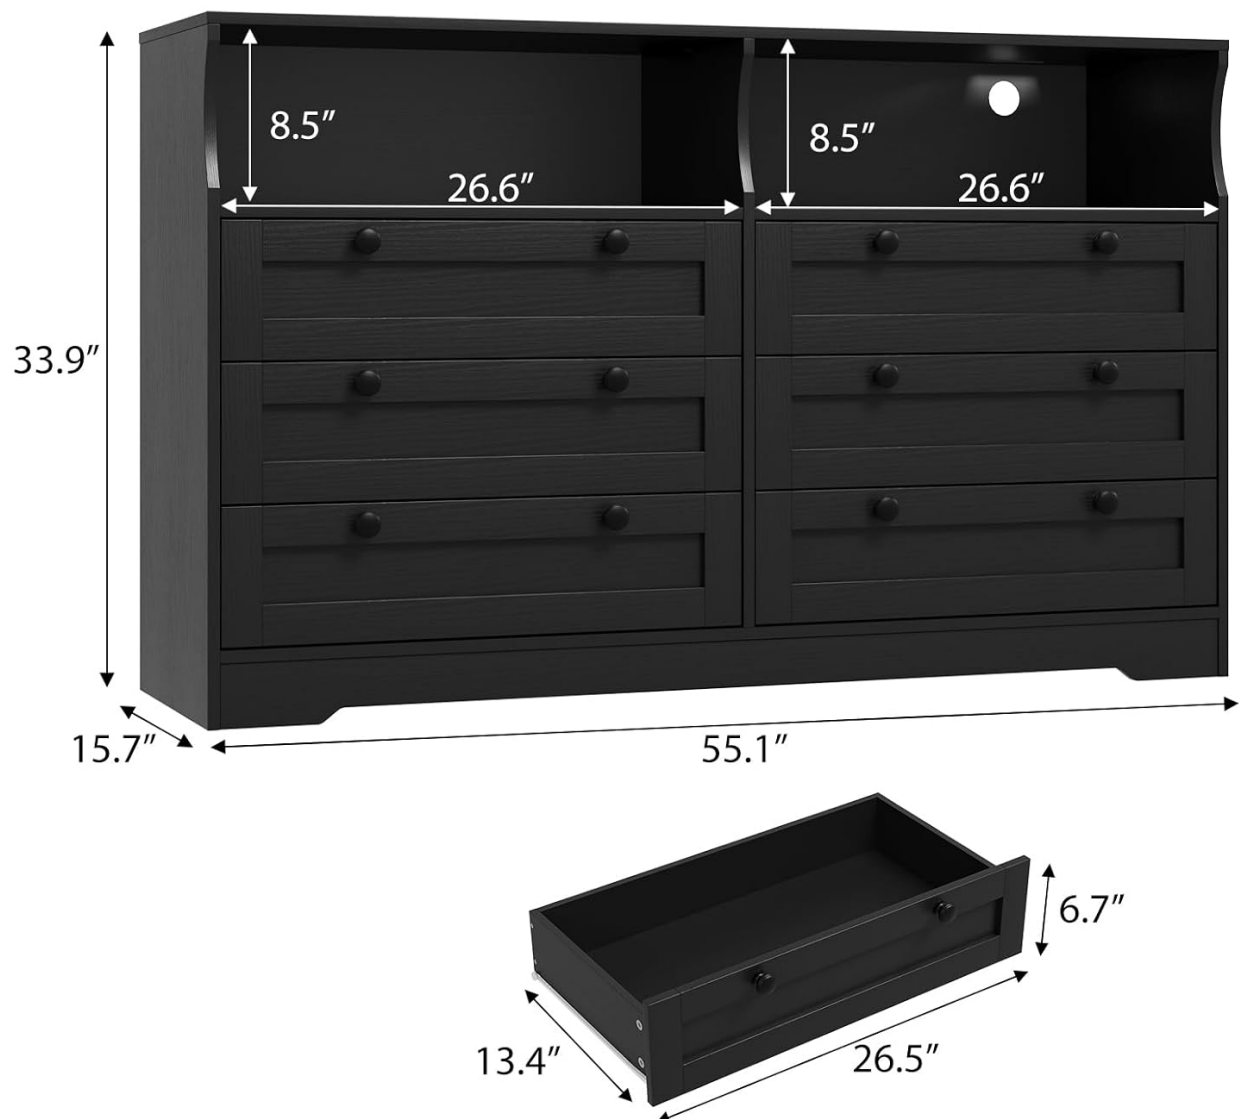


Figure 8.1: Product dimensions for the Jojoka 6-Drawer Dresser.

Large Capacity Storage Space

classify storage to meet your needs



Figure 8.2: Illustration of the dresser's storage capacity with drawers open.

9. WARRANTY AND SUPPORT

Jojoka products are designed for quality and durability. For specific warranty information regarding your dresser, please refer to the warranty card included in your packaging or visit the official Jojoka website.

For any questions, concerns, or assistance with assembly, operation, or troubleshooting, please contact Jojoka customer service. Our team is available to provide support and ensure your satisfaction.

Customer Service: Refer to your purchase documentation or the Jojoka brand store for contact details.

Online Resources: Visit the [Jojoka Brand Store on Amazon](#) for additional product information and support.