

HOUSBRUSH U9

HOUSBRUSH U9 Cordless Vacuum Cleaner Instruction Manual

Model: U9

Introduction	Safety Instructions	Package Contents	Assembly Warranty & Support	Operation	Maintenance
	Troubleshooting	Specifications			

1. INTRODUCTION

Thank you for choosing the HOUSBRUSH U9 Cordless Vacuum Cleaner. This 8-in-1 lightweight rechargeable stick vacuum is designed to provide powerful and efficient cleaning for various surfaces, including carpets, pet hair, and hardwood floors. Featuring 40KPA suction, a 7-layer filtration system, and a self-standing design, the U9 offers convenience and superior cleaning performance. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store indoors.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present and undamaged:

- Cordless Vacuum (Main Engine)
- Electric Floor Brush
- Telescopic Pole (Adjustable Metal Tube)
- Crevice Nozzle
- 2-in-1 Brush Nozzle
- Filter (HEPA Filter x 2, Metal Filter)
- Wall Mount
- Adapter
- Instructions Manual

Washable Filter: Green and Great

Recyclable Parts: Cut waste, helps the planet
Long-lasting Use: Maintain cleaning power after every wash



Image: All components included in the HOUSBRUSH U9 package.

4. ASSEMBLY

The HOUSBRUSH U9 Cordless Vacuum Cleaner is designed for easy assembly. Follow these steps:

1. **Attach the Telescopic Pole:** Insert the top end of the adjustable metal tube into the main engine until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the electric floor brush to the bottom end of the telescopic pole, ensuring it locks firmly.
3. **Install Filters:** Ensure the metal filter and HEPA filters are correctly installed inside the dust cup of the main engine.
4. **Charging:** Before first use, fully charge the vacuum cleaner using the provided adapter. Connect the adapter to the charging port on the main engine and plug it into a wall outlet.

Your browser does not support the video tag.

Video: This video demonstrates the assembly process of the HOUSBRUSH U9 Cordless Vacuum Cleaner, showing how to connect the main components and prepare it for use.

5. OPERATION

5.1 Power On/Off and Suction Adjustment

To power on the vacuum, press the power button located on the main engine. Use the +/- buttons to adjust the suction power between different modes, optimizing for various cleaning tasks and surfaces.



Image: The HOUSBRUSH U9 demonstrating its 40KPA powerful suction, effectively picking up hair, pet hair, and crumbs.

5.2 Self-Standing Feature

The HOUSBRUSH U9 features a convenient self-standing design. When you need to pause cleaning, simply push the vacuum head forward until it locks into an upright position. This allows the vacuum to stand steadily on its own, freeing your hands for other tasks without needing to lean it against a wall.

Hands-Free&Self-Standing

Easy to grab and clean, No wall needed



Image: The HOUSBRUSH U9 Cordless Vacuum Cleaner standing upright independently, showcasing its hands-free self-standing feature.

5.3 Versatile Cleaning with Attachments

The vacuum comes with multiple nozzles for diverse cleaning needs:

- **Electric Floor Brush:** Ideal for tiles, hard floors, and carpets. Its S-Shape anti-tangle design prevents hair from winding around the brush, ensuring continuous cleaning. The powerful motor head and LED lights illuminate dust and debris.
- **Crevice Nozzle:** Perfect for reaching tight corners, gaps, and narrow spaces, such as between sofa cushions or along baseboards.
- **2-in-1 Brush Nozzle:** Suitable for cleaning delicate surfaces like keyboards, desktops, upholstery, and car interiors.

Great Reach for Corners Under Furniture

Bright & Flexible



Image: The HOUSBRUSH U9's ultra-flexible head maneuvering under furniture and into corners, demonstrating its 180° left & right and 90° up & down rotation.

Your browser does not support the video tag.

Video: This official HOUSBRUSH video demonstrates the versatility of the U9 Cordless Vacuum Cleaner, showing its effective use on various surfaces and with different attachments to clean hard-to-reach areas.

Your browser does not support the video tag.

Video: An official HOUSBRUSH video highlighting the U9's efficiency for both quick cleanups and deep cleaning tasks across different floor types.

6. MAINTENANCE

6.1 Emptying the Dust Cup

To empty the dust cup, simply press the one-touch release button. The bottom flap will open, allowing debris to fall directly into a trash bin without direct contact, ensuring hygienic disposal.

One-Touch Empty

Hygienic Hands-Free Emptying



Simple
Operation



No Dismantling
Needed



Large
Capacity



Image: The HOUSBRUSH U9's one-touch empty feature, allowing for hygienic, hands-free disposal of collected debris.

6.2 Cleaning Filters

The HOUSBRUSH U9 features a 7-layer filtration system with washable components, including the metal filter and HEPA filters. Regularly clean these filters under running water to maintain optimal suction power and filtration efficiency. Ensure filters are completely dry before re-installing them into the vacuum cleaner.

Efficient 7-Layer Filtration

High-quality filters remove fine dust, providing a healthier cleaning experience



Image: An exploded view of the HOUSBRUSH U9's efficient 7-layer filtration system, including the metal filter, cyclone filtration, and high-efficiency filter cotton.

7. TROUBLESHOOTING

If you encounter any issues with your HOUSBRUSH U9, please refer to the following common troubleshooting steps:

- **No Power:** Ensure the battery is fully charged. Check if the power adapter is correctly connected and the outlet is functional.
- **Reduced Suction:** Check if the dust cup is full and needs emptying. Inspect filters for blockages or excessive dirt and clean them as per maintenance instructions. Ensure there are no blockages in the brush head, telescopic pole, or main engine.
- **Brush Roll Not Rotating:** Check for hair or debris tangled around the brush roll and remove them. Ensure the brush head is securely attached.
- **Unusual Noise:** Turn off the vacuum immediately and check for any foreign objects or blockages in the brush head, hose, or dust cup.

If the problem persists after following these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	HOUSBRUSH
Model Name	U9
Special Features	Self-Standing, Hands-Free, Lightweight, High-speed motor, Easy Handling, 7-layer Filtration, Versatile Nozzle, Telescopic pole, Suitable for Hard Floors and Carpets
Filter Type	Cotton (HEPA, Metal)
Is Cordless?	Yes
Capacity	0.8 Liters
Recommended Uses	Carpet, Computer, Desk, Hard Floor, Hardwood, Sofa, Tile Floor
Form Factor	Stick
Color	Red
Product Dimensions	10.8"L x 5.5"W x 17.5"H
Item Weight	6 pounds
Power Source	Battery Powered

9. WARRANTY & SUPPORT

The HOUSBRUSH U9 Cordless Vacuum Cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any questions regarding your product, please contact HOUSBRUSH customer service through the contact information provided on the warranty card or the official HOUSBRUSH website.

© 2023 HOUSBRUSH. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What does it mean when the HOUSBRUSH U9 vacuum has 2 blue flashing lights when I try to turn it on?

The provided manual for the HOUSBRUSH U9 Cordless Vacuum Cleaner does not specifically mention what two blue flashing lights indicate. However, based on the troubleshooting section for "No Power," here are the general steps...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0GCM7G5SZ>

More documents and user manuals: <https://manuals.plus/>