

## VG VOGCREST VG-107

# VG VOGCREST Bikini Trimmer User Manual

MODEL: VG-107

## Introduction

The VG VOGCREST VG-107 is a versatile 2-in-1 rechargeable body shaver designed for precise and comfortable hair removal. This device features interchangeable heads for both trimming and shaving, suitable for various body areas including the bikini line, underarms, legs, and face. Its waterproof design allows for convenient wet or dry use, and the ceramic blades are engineered for durability and gentle performance.

## Safety Information

- Do not submerge the device or use it while charging.
- Keep blades away from children.
- Always hold the shaver away from your body when turning it on or off to prevent accidental injury.
- Ensure the device is fully dry before charging.
- Avoid using on irritated or broken skin.

## Package Contents

Verify that all items are present in the package:

- VG VOGCREST VG-107 Main Unit
- Bikini Trimmer Head
- Facial Shaver Head
- Charging Dock
- Type-C Charging Cable
- 2 Length Combs (3-6mm, 9-12mm)
- Cleaning Brush

- User Manual

Your browser does not support the video tag.

**Video:** Unboxing a similar bikini trimmer. This video demonstrates typical package contents and initial handling of a bikini trimmer, which may be helpful for understanding the components of your VG VOGCREST VG-107.

## Product Features

- **2-in-1 Trimmer & Shaver:** Easily switch between the precision trimmer head (0.2mm) and the smooth shaver head for versatile grooming. Designed for sensitive skin to minimize irritation.
- **IPX7 Waterproof:** Fully waterproof construction allows for safe and convenient wet or dry use, including in the shower or bath. Facilitates easy cleaning under running water.
- **Hypoallergenic Ceramic Blades:** Durable, rust-proof blades that last three times longer than steel, providing a gentle and effective shave.
- **Full-Body Application:** Suitable for trimming hair on pubic areas, underarms, legs, and facial areas.
- **Travel-Friendly Design:** Compact and portable with a Type-C charging port, charging dock, and two length combs (3-6mm, 9-12mm) for on-the-go use.

## Setup

1. **Initial Charge:** Before first use, fully charge the device. Connect the Type-C charging cable to the charging dock and plug it into a suitable power source. Place the trimmer in the dock. The indicator light will show charging status. A full charge takes approximately 2 hours and provides up to 90 minutes of runtime.
2. **Attach Desired Head:** Select either the bikini trimmer head or the facial shaver head. Align the head with the main unit and twist or push until it clicks securely into place.
3. **Attach Comb (Trimmer Head Only):** If using the bikini trimmer head for specific lengths, slide one of the provided length combs (3-6mm or 9-12mm) onto the trimmer head until it locks.

**30 DAYS**  
Runtime if  
Daily Use

**90 MINS**  
Runtime Per  
Charging

**2 HOURS**  
Fast Charging

**Type-C & Dock  
Fast Charging**

**Image:** The VG VOGCREST Bikini Trimmer with its charging dock and Type-C cable. This image illustrates how the device is charged, showing the Type-C port and the dock for convenient power replenishment.

## Operating Instructions

The VG VOGCREST VG-107 is designed for both wet and dry use. Choose the method that best suits your preference and skin type.

### General Use:

- Press the power button to turn the device on.
- For optimal results, hold the skin taut with one hand and gently glide the trimmer/shaver against the direction of hair growth.
- Apply light pressure. Do not press too hard, especially on sensitive areas.
- After use, turn off the device and clean it as described in the Maintenance section.

### Using the Bikini Trimmer Head:

- Attach the bikini trimmer head. For desired hair length, use one of the length combs.
- Move the trimmer slowly and steadily over the area. For a closer trim, remove the comb and use the

blade directly on the skin.

- This head is suitable for bikini areas, underarms, and other body areas requiring precise trimming.

### Using the Facial Shaver Head:

- Attach the facial shaver head.
- Gently move the shaver in small circular motions or short strokes on facial areas like the chin, lip, and cheeks.
- This head is designed for smooth, close shaving of fine facial hair.



**Image:** A woman demonstrating the use of the VG VOGCREST trimmer on her armpit, bikini area, legs, and facial areas (cheek, lip, chin). This image highlights the versatility of the 2-in-1 design for full-body grooming.

Soft and  
Smooth Shave



*Bikini Trimmer*

**\*No Pain**  
**\*No Nick**



**Image:** A close-up view of the VG VOGCREST trimmer being used on the bikini area, emphasizing a smooth and gentle shave without nicks or pain.

# Trim & Shave in the Shower

Enjoy Effortless  
Wet and Dry Grooming



**Image:** The VG VOGCREST trimmer submerged in water, illustrating its IPX7 waterproof rating for safe wet and dry use.

## Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your trimmer.

1. **Turn Off Device:** Always ensure the trimmer is turned off before cleaning.
2. **Remove Head:** Detach the trimmer or shaver head from the main unit.
3. **Clean Blades:** Use the provided cleaning brush to remove any trapped hairs from the blades and inside the head.
4. **Rinse:** Rinse the detached head under running water. The main unit is also waterproof and can be rinsed, but ensure the charging port is dry before charging.
5. **Dry:** Shake off excess water and allow the head and main unit to air dry completely before reattaching or storing.

Your browser does not support the video tag.

**Video:** How to wash a shaving head. This video demonstrates the process of cleaning a trimmer head, which is applicable to maintaining your VG VOGCREST VG-107.

## Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Charge the device fully (approx. 2 hours).
Poor trimming/shaving performance.	Blades are dull or clogged with hair.	Clean the blades thoroughly. Ensure the head is securely attached.
Skin irritation after use.	Excessive pressure, dry shaving sensitive skin, or improper technique.	Use light pressure. Consider wet shaving with foam/gel for sensitive areas. Ensure skin is taut during use.
Device stops working during use.	Battery depleted.	Recharge the device.

## Specifications

- **Model:** VG-107
- **Brand:** VG VOGCREST
- **Power Source:** Battery Powered (Rechargeable Lithium, Integrated)
- **Battery Life:** Up to 90 minutes
- **Charging Time:** Approximately 2 hours
- **Charging Type:** Type-C
- **Waterproof Rating:** IPX7
- **Blade Material:** Ceramic
- **Number of Blades:** 2
- **Head Type:** Pivoting
- **Included Components:** Body & Facial Trimmer, Charging Dock, Type-C Cable, 2 Length Combs
- **Dimensions:** 17.6 x 12.19 x 5.69 cm
- **Weight:** 308 g

## Warranty and Support

For warranty information or product support, please contact VG VOGCREST customer service. Refer to your product packaging for specific warranty details.

**Manufacturer Contact:** [customer@vogcrest.com](mailto:customer@vogcrest.com)