

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ANTHBOT](#) /

› [Anthbot Genie 800 Robot Lawn Mower User Manual](#)

ANTHBOT Gennie 800

Anthbot Genie 800 Robot Lawn Mower User Manual

Model: Gennie 800

1. INTRODUCTION

Thank you for choosing the Anthbot Genie 800 Robot Lawn Mower. This manual provides essential information for the safe operation, installation, maintenance, and troubleshooting of your new robot lawn mower. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage.

- Read all instructions carefully before operation.
- Keep hands and feet away from rotating blades.
- Do not operate the mower in wet conditions or during rain.
- Ensure the boundary wire is correctly installed to prevent the mower from leaving the designated area.
- Keep children and pets away from the working area of the mower.
- Turn off the mower and remove the safety key before performing any maintenance or cleaning.
- Use only original Anthbot replacement parts and accessories.
- Do not attempt to modify the mower or its components.
- Store the mower in a dry, secure location when not in use.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Anthbot Genie 800 Robot Lawn Mower
- Charging Station
- Power Adapter
- Boundary Wire (length may vary)
- Boundary Wire Pegs/Stakes
- Replacement Blades and Screws
- User Manual

- Safety Key

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Anthbot Genie 800.



Figure 1: Anthbot Genie 800 Robot Lawn Mower. This image shows the top-down view of the robot mower, highlighting its white body, black control panel with a red stop button, large rear wheels, and front sensors emitting a blue light.

1. **Stop Button:** Immediately stops the mower and blade rotation.
2. **Control Panel:** Displays status and allows programming.
3. **Charging Contacts:** Connects with the charging station.
4. **Cutting Height Adjustment:** Adjusts blade height.
5. **Drive Wheels:** Provides traction for movement.
6. **Front Sensors:** Detects obstacles and boundary wire.
7. **Blades:** Cuts grass.
8. **Safety Key Slot:** Activates/deactivates the mower.

5. SETUP

5.1 Charging Station Placement

Place the charging station on a flat, level surface in an area with access to a power outlet. Ensure there is at least 1 meter of clear space to the front and 0.5 meters to the sides of the station for the mower to dock properly.

5.2 Boundary Wire Installation

The boundary wire defines the mowing area. Lay the wire around the perimeter of your lawn, securing it with the provided pegs. Maintain a distance of approximately 30 cm from obstacles such as walls, fences, and flowerbeds. Ensure the wire forms a continuous loop back to the charging station.

5.3 Initial Charging

Connect the power adapter to the charging station and a power outlet. Place the mower onto the charging station, ensuring the charging contacts align. The mower will begin charging automatically. Allow for a full charge before first use (approximately 2-3 hours).

6. OPERATING INSTRUCTIONS

6.1 Starting the Mower

Insert the safety key. Press the "START" button on the control panel. The mower will begin its mowing cycle according to the programmed schedule or default settings.

6.2 Scheduling

Use the control panel to set specific mowing times and days. Refer to the on-screen menu for detailed scheduling options.

6.3 Stopping the Mower

Press the large red "STOP" button on top of the mower. The blades will immediately cease rotation, and the mower will stop moving. To resume, press "START" again.

6.4 Returning to Charging Station

The mower will automatically return to its charging station when its battery is low or when its mowing cycle is complete. You can also manually send it back via the control panel.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your mower. Always turn off the mower and remove the safety key before any maintenance.

7.1 Blade Replacement

Inspect blades regularly for wear and damage. Replace all blades and screws simultaneously for balanced cutting. Use only genuine Anthbot replacement blades. Wear protective gloves during replacement.

7.2 Cleaning

Clean the underside of the mower, wheels, and chassis regularly to remove grass clippings and dirt. Use a brush or damp cloth. Do not use a high-pressure washer or immerse the mower in water.

7.3 Battery Care

The mower uses Lithium Polymer batteries. For best battery life, avoid extreme temperatures. If storing for an extended period, charge the battery to approximately 50% and store in a cool, dry place.

7.4 Storage

During winter or extended periods of non-use, clean the mower thoroughly, charge the battery, and store the mower and charging station in a dry, frost-free environment.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Mower does not start.	Safety key not inserted; low battery; stop button pressed.	Insert safety key; charge battery; release stop button and press START.
Mower stays within boundary but does not cut.	Blades are dull or obstructed.	Inspect and replace blades; clear any obstructions from the blade disc.
Mower leaves designated area.	Boundary wire broken or improperly installed.	Check boundary wire for breaks; ensure proper connection to charging station.
Mower cannot find charging station.	Charging station signal obstructed; station improperly placed.	Ensure clear path to station; verify station placement as per manual.

9. SPECIFICATIONS

Feature	Detail
Brand	ANTHBOT
Model Number	Gennie 800
Power Source	Battery Powered
Battery Type	Lithium Polymer (4 required, included)
Product Dimensions	20D x 37W x 18H Centimetres
Parcel Dimensions	80 x 47 x 35 cm
Item Weight	21 kg
Color	Black
Manufacturer	Anthbot

10. WARRANTY AND SUPPORT

The Anthbot Genie 800 Robot Lawn Mower comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact Anthbot customer service through their official website or the contact information provided with your purchase.

Note: Keep your proof of purchase for warranty purposes.