

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Dioche](#) /

> [Dioche Electric Nail Clipper User Manual](#)

Dioche Dioche9za7iytu1d

Dioche Electric Nail Clipper User Manual

Model: Dioche9za7iytu1d

1. INTRODUCTION

The Dioche Electric Nail Clipper is an automatic, cordless device designed for effortless fingernail trimming. It features a low-noise operation (45dB) and includes a nail scrap storage compartment for hygienic use. This device is suitable for both home and travel, providing a convenient solution for manicure and pedicure needs.

2. SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep the device away from water or other liquids. Do not use in wet environments.
- This device is not a toy. Keep out of reach of children. Adult supervision is required when used by or near children.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- If you have any medical conditions affecting your nails or hands, consult a healthcare professional before using this device.
- Use only the provided charging cable and power source.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Dioche Electric Nail Clipper:



Figure 3.1: Dioche Electric Nail Clipper with protective cap on. This image shows the overall design of the device, including the main body and the transparent protective cap covering the trimming head.



Figure 3.2: Dioche Electric Nail Clipper with cap removed. The trimming head and the power button are visible, indicating readiness for use.



Figure 3.3: Close-up view of the trimming head. This shows the precise cutting mechanism and the nail entry groove.



Figure 3.4: The USB-C charging port located at the base of the device, used for recharging the internal battery.





Figure 3.5: The Dioche Electric Nail Clipper shown alongside its accessories: a USB-C charging cable and a small cleaning brush.

4. SETUP

4.1 Charging the Device

The Dioche Electric Nail Clipper is equipped with a 240mAh lithium-ion battery. Before first use, ensure the device is fully charged.

1. Locate the Type-C charging port at the base of the device (refer to Figure 3.4).
2. Connect the provided USB Type-C cable to the device and plug the other end into a compatible USB power adapter (not included).
3. The device will indicate charging status (e.g., an indicator light). A full charge takes approximately 35 minutes.
4. Once fully charged, the device offers up to 2 months of standby time.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

To power on the device, press and hold the power button for 3 seconds. Repeat this action to power off the device.

5.2 Trimming Nails

1. Ensure the device is charged and powered on.
2. Gently place your fingernail into the trimming groove. The device is designed to trim and file nails precisely without harming the skin.
3. Indicator lights will show the rotation direction. Allow the automatic cutter to work. Do not force your nail into the device or apply excessive pressure.
4. Move the device along the nail edge as needed to achieve the desired length and shape.
5. After trimming, remove your finger and inspect the nail. Repeat if necessary.

6. MAINTENANCE

6.1 Cleaning the Device

The Dioche Electric Nail Clipper features a dedicated storage compartment for clipped nail debris, ensuring a hygienic experience. Regular cleaning is essential for optimal performance.

1. After each use, ensure the device is powered off.
2. Remove the protective cap.
3. Locate the nail scrap storage compartment. The easy-to-clean rotating cover allows for quick disposal of collected nail scraps. Empty the compartment into a waste bin.
4. Use the provided cleaning brush (refer to Figure 3.5) to gently remove any remaining debris or dust from the trimming head and surrounding areas.
5. Do not rinse the device under water or use harsh chemicals for cleaning. Wipe the exterior with a soft, dry cloth if needed.
6. Replace the protective cap after cleaning.

7. TROUBLESHOOTING

If you encounter issues with your Dioche Electric Nail Clipper, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no charge.	Charge the device fully using the provided USB-C cable.
Nails are not trimming effectively.	Improper nail placement or trimming head is clogged.	Ensure your nail is properly positioned in the groove. Clean the trimming head and debris compartment.
Device makes unusual noise or stops during operation.	Obstruction in the trimming head or low battery.	Power off the device, check for and remove any obstructions. Ensure the device is fully charged. If the problem persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Item Type	Electric Nail Clipper
Model Number	Dioche9za7iytu1d
Material	ABS
Battery Type	Lithium-ion
Battery Capacity	240mAh
Charging Time	Approx. 35 minutes
Standby Time	Up to 2 months
Motor Speed	3600 rpm
Noise Level	45dB

Feature	Detail
Package Dimensions	6.3 x 2.36 x 1.18 inches
Item Weight	2.47 ounces

9. WARRANTY INFORMATION

For specific warranty details regarding your Dioche Electric Nail Clipper, please refer to the product packaging or contact customer support. Keep your purchase receipt as proof of purchase.

10. SUPPORT

Should you require further assistance, have questions, or need troubleshooting beyond what is covered in this manual, please contact Dioche customer support. You can typically find contact information through the retailer's platform where you purchased the product or on the official Dioche website.