

[Manuals.plus](#) /

› [AMOSA](#) /

› AMOSA Electric Salt and Pepper Grinder, 2-in-1 Rechargeable with Adjustable Ceramic Mills, Model Y8

AMOSA Y8

AMOSA Electric Salt and Pepper Grinder

Model: Y8 | Brand: AMOSA

INTRODUCTION

Thank you for choosing the AMOSA Electric Salt and Pepper Grinder. This 2-in-1 rechargeable grinder is designed for convenience and precision, featuring dual ceramic grinding cores and adjustable fineness settings. This manual provides essential information for safe and efficient use of your new appliance.

AMOSA IEC Intelligent Electronic Control Technology

Easy & precise grinding, enjoy your life



AMOSA
IEC MCU



High-Speed
Motor



High-Hardness
Ceramic Grinding
Core



Rechargeable
Battery



LED Power
Indicator



Considerate
Floodlights



2 in 1
Dual Bins



One-Handed
Operation



Image: The AMOSA Electric Grinder in use, demonstrating its intelligent electronic control technology and key features.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- 1 x AMOSA 2-in-1 Electric Salt and Pepper Grinder

- 1 x Spice Baffle
- 1 x USB A to USB C Charging Cable
- 1 x Cleaning Brush
- 1 x User Manual

2. Charging the Grinder

Before first use, fully charge the grinder. Connect the provided USB-C charging cable to the grinder's Type-C port and a suitable USB power adapter (not included). The 4 LED indicators will show the charging status and battery level. A full charge takes approximately 2 hours and provides 1-2 months of typical use or 35 minutes of continuous grinding.

Extra-Large Rechargeable Battery & Ultra-Long Usage Time

Large Battery
800 mAh

Charging
2 Hours

Use
1-2 Months

Continuous Grinding
35 Mins

Type-C
Fast Charging



Type-C Port

Note: Adapter not included

Image: Charging the AMOSA Electric Grinder via its USB-C port. Note: Adapter is not included.

3. Filling the Spice Compartments

The grinder features two separate spice compartments, each with a 100ml capacity. To fill:

1. Remove the top cover by twisting it counter-clockwise.
2. Identify the 'S' (Salt) and 'P' (Pepper) openings.
3. When pouring coarse salt, place the spice baffle at the 'P' opening to prevent the salt from entering the pepper bin.

4. When pouring pepper, press and remove the baffle and place it at the 'S' opening.
5. Fill each compartment with your desired spices (e.g., sea salt, peppercorns). Do not overfill.
6. Replace the top cover by twisting it clockwise until secure.

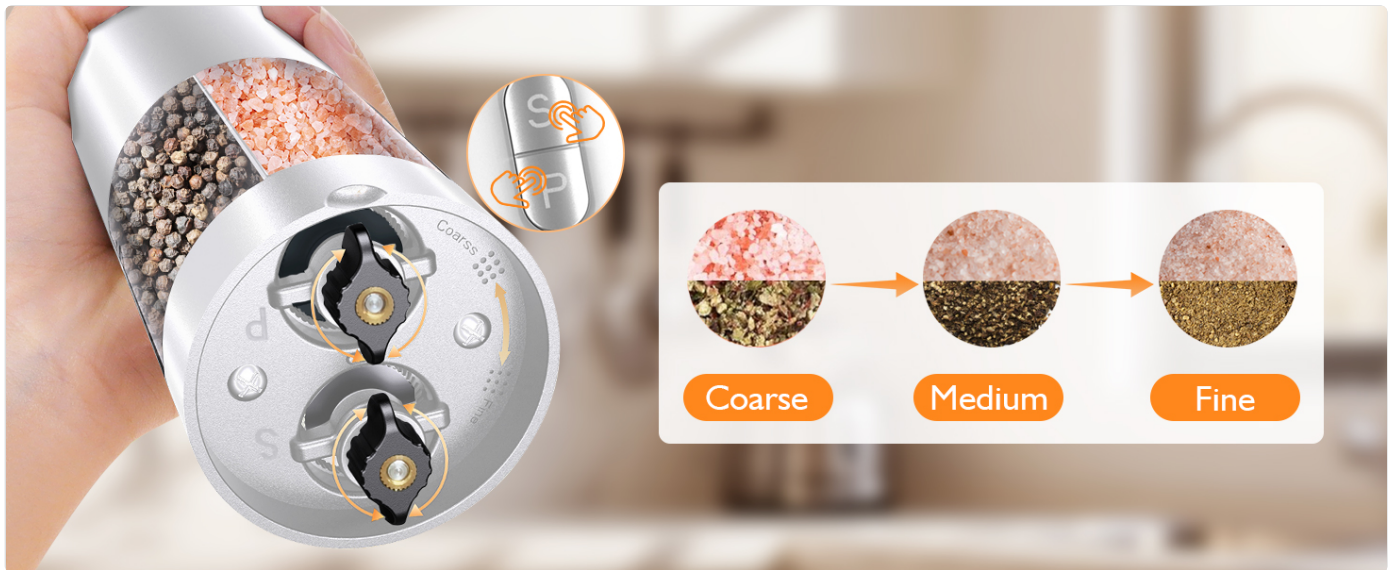


Image: Refilling the grinder using the thoughtful spice baffle to prevent mixing of spices.

4. Adjusting Grind Coarseness

The grinder is equipped with two independent ceramic grinding cores, allowing for separate coarseness adjustments for salt and pepper. To adjust:

1. Locate the two adjustment knobs at the bottom of the grinder.
2. Turn the knob clockwise for a finer grind and counter-clockwise for a coarser grind.
3. Adjust each knob independently to achieve your desired fineness for salt and pepper.

2 in 1 Dual Bins

One-handed Operation

AMOSA



Others



Image: Detail of the double adjustable coarseness mechanism at the base of the grinder.

OPERATING INSTRUCTIONS

The AMOSA Electric Grinder is designed for easy one-handed operation.

1. Ensure the grinder is charged and filled with spices.
2. Hold the grinder over your food.

3. Press the 'S' button for salt or the 'P' button for pepper to activate the grinding mechanism.
4. An integrated LED light will illuminate automatically during operation, providing clear visibility of the spice distribution.
5. Release the button to stop grinding.

Double Adjustable Coarseness

Easily adjust the coarseness to meet the grinding needs of various spices



Coarse



Medium



Fine

Image: Demonstrating the 2-in-1 dual bin design and one-handed operation using the 'S' and 'P' buttons.

How to Use



Image: Step-by-step visual instructions on how to use the grinder.

MAINTENANCE

Cleaning

To ensure optimal performance and hygiene, clean your grinder regularly:

- **Do not immerse the grinder in water.** It is not dishwasher safe.
- Use the provided cleaning brush to remove any spice residue from the grinding cores and the exterior.
- Wipe the exterior with a damp cloth. Dry thoroughly.
- Ensure no moisture enters the battery compartment or charging port.

Storage

Store the grinder in a dry place away from direct sunlight and high humidity when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not operate.	Low battery. Spice compartments empty. Buttons not pressed correctly.	Charge the grinder fully. Refill spice compartments. Ensure 'S' or 'P' button is pressed firmly.
Grinding is inconsistent or slow.	Spice residue build-up in grinding core. Battery low. Spices are too large or hard for the grinder.	Clean the grinding core with the brush. Recharge the grinder. Ensure only recommended spices are used.
LED light not working.	Grinder not operating. Faulty LED.	Ensure grinder is operating. If problem persists, contact customer support.
Spices are mixing between compartments.	Spice baffle not used correctly during refilling.	Ensure the spice baffle is properly positioned when refilling each compartment.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	Y8
Dimensions (L x W x H)	5.79 x 5.79 x 21.01 cm
Weight	340.19 grams
Material	Acrylonitrile Butadiene Styrene (ABS), Acrylic
Color	Classic White
Battery	1 x 800 mAh Lithium-ion (included)
Charging Port	USB-C
Capacity	2 x 100 ml (total 200 ml)
Grinding Mechanism	Dual Ceramic Grinding Cores
Operation Mode	Automatic (one-handed)
Dishwasher Safe	No
Country of Origin	China
Recommended Spices	Sea salt, coarse salt, Himalayan pink salt, black pepper, white pepper, green pepper, red pepper, dried spices, peppercorns, pepper blends.

Small Size & Large Capacity & Double Grinding Core



Image: Detailed diagram of the grinder's components and dimensions.



Image: Breakdown of the food-safe materials used in the grinder's construction.

WARRANTY INFORMATION

The AMOSA Electric Salt and Pepper Grinder comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your AMOSA Electric Salt and Pepper Grinder, please contact AMOSA customer service. We offer 7-day a week, 24-hour customer support to ensure your satisfaction. If you encounter any issues, we are committed to providing a 100% satisfactory solution.

Please refer to the contact information provided with your product packaging or visit the official AMOSA website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question