

[Manuals.plus](#) /

› [Diveblues](#) /

› Diveblues Portable Handheld Fan D6036 Instruction Manual

## Diveblues D6036

# Diveblues Portable Handheld Fan D6036 Instruction Manual

Model: D6036 | Brand: Diveblues

## INTRODUCTION

Thank you for choosing the Diveblues Portable Handheld Fan D6036. This versatile 4-in-1 turbo fan is designed to provide powerful and customizable cooling wherever you go. With its 100-speed stepless control, 180° foldable design, and integrated carabiner clip, it offers convenience and comfort for various activities.



Image: The Diveblues Portable Handheld Fan D6036 in Vanilla Swirl, showcasing its compact design.

## WHAT'S IN THE BOX

Upon unboxing your Diveblues D6036 fan, you should find the following items:

- 1 x Diveblues Fanzzy Handheld Fan (D6036)
- 1 x USB-C Charging Cable
- 1 x Adjustable Neck Strap / Lanyard
- 1 x User Manual (this document)



Image: A visual representation of the Diveblues Fanzly package contents: the fan, USB-C cable, adjustable lanyard, and user manual.

Video: A demonstration of unboxing the Diveblues Fanzly and attaching the neck strap.

## PRODUCT OVERVIEW

### 4-in-1 Versatility

The D6036 fan offers multiple usage modes to suit your needs:

- **Handheld:** Use it as a traditional handheld fan for direct cooling.
- **Desktop:** Fold the fan 180° to create a stable base for desktop use.
- **Neck Fan:** Attach the included lanyard to wear the fan around your neck for hands-free cooling.
- **Carabiner Clip:** Utilize the integrated carabiner clip to attach the fan to your backpack, belt loop, or other items.



Image: The Diveblues Fanzly demonstrating its 4-in-1 versatility, including handheld, desktop, neck, and clip-on uses.

### Dual-Mode Turbo Control (1-100 Stepless)

Adjust your airflow with precision:

- **Preset Speed Jumps:** Short press the '+' or '-' buttons for 5 preset speed levels (20% increments).
- **Stepless Micro-Adjustment:** Long press and hold the '+' or '-' buttons to smoothly increase or decrease the speed

from 1% to 100%. Release the button when the desired speed is reached.

The real-time HD display shows the current speed setting and battery status.



Image: The fan's control panel, highlighting the dual-mode speed adjustment buttons and digital display.

Long-Lasting Battery & USB-C Charging

Equipped with a 3600mAh rechargeable battery, the fan provides:

- Up to 12 hours of cooling at lower speeds.
- Up to 3 hours in full Turbo mode.

The fan charges via a convenient USB-C port. The real-time HD display indicates battery status.

Compact & Lightweight Design

Weighing only 6.6 oz (188g) and measuring just 4 inches when collapsed, this fan is highly portable and fits easily into pockets, clutches, or bags.



Image: The fan in its compact, folded state, demonstrating its small size for easy storage.

Quiet Operation

Operating at a whisper-quiet 46dB, the fan is suitable for professional meetings, libraries, and daily commutes without causing disturbance.

## SETUP

---

### Attaching the Lanyard

1. Locate the small holes on either side of the fan's hinge.
2. Thread the thin loop of the lanyard through one of these holes.
3. Pass the buckle end of the lanyard through the loop you just created.
4. Pull gently to secure the lanyard. Repeat for the other side if desired for a neck-worn configuration.

### Initial Charge

Before first use, fully charge the fan using the provided USB-C cable. Connect the USB-C end to the fan's charging port (located at the back of the hinge) and the USB-A end to a compatible power source (e.g., wall adapter, computer USB port). The digital display will show charging progress.

## OPERATING INSTRUCTIONS

---

### Power On/Off

Locate the power switch on the side of the fan's handle. Slide the switch to the 'ON' position to power on the fan. Slide it to 'OFF' to power off.



Video: A demonstration of the fan's folding mechanism and power-on sequence, highlighting its portability and strong airflow.

### Adjusting Fan Speed

- **Preset Adjustment:** Short press the '+' or '-' buttons to cycle through 5 preset speed levels (20%, 40%, 60%, 80%, 100%).
- **Stepless Adjustment:** Long press and hold the '+' or '-' buttons to smoothly increase or decrease the speed from 1% to 100%. Release the button when the desired speed is reached.

The digital display will show the current fan speed percentage.

### Folding and Positioning

The fan head can be folded 180° to adjust the airflow direction or to convert it into a desktop fan. The integrated carabiner clip can be opened by pressing the small latch and then clipping it onto desired items.

## CHARGING

---

The fan is equipped with a USB-C charging port. Connect the provided USB-C cable to the fan and a suitable USB power adapter. The digital display will show the battery percentage, indicating charging status. A full charge typically takes approximately 2.5 hours.

## MAINTENANCE

---

- **Cleaning:** Ensure the fan is powered off before cleaning. Use a soft, dry cloth to wipe the exterior. For the fan blades, use a cotton swab or a soft brush to gently remove dust. Do not use liquid cleaners or immerse the fan in water.
- **Storage:** When not in use, fold the fan compactly and store it in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

| Problem                 | Solution                                                                                                                                           |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Fan does not turn on.   | Ensure the battery is charged. Connect to a power source using the USB-C cable. Check if the power switch is in the 'ON' position.                 |
| Low airflow.            | Increase the fan speed using the '+' button. Ensure the fan's air intake and outlet are not obstructed. Clean any dust accumulation on the blades. |
| Fan stops unexpectedly. | The battery might be low. Recharge the fan. If the issue persists, contact customer support.                                                       |

## SPECIFICATIONS

| Feature            | Detail                  |
|--------------------|-------------------------|
| Brand              | Diveblues               |
| Model Number       | D6036                   |
| Power Source       | Battery Powered         |
| Battery Capacity   | 3600mAh                 |
| Max Air Speed      | 7.4m/s                  |
| Speed Control      | 1-100 Stepless          |
| Foldable Angle     | 180°                    |
| Noise Level        | 46dB                    |
| Charging Port      | USB-C                   |
| Item Weight        | 190 Grams (6.6 oz)      |
| Product Dimensions | 1.4"D x 2.99"W x 7.28"H |
| Material           | Plastic                 |

## SAFETY INFORMATION

- Do not insert fingers or hard objects into the fan blades to avoid injury.
- Children under 10 years of age must be supervised when using this product.
- Keep the fan away from water and excessive moisture.
- Do not disassemble or attempt to repair the fan yourself. Contact customer support for assistance.
- Use only the provided charging cable or a certified USB-C cable for charging.

## WARRANTY AND SUPPORT

The Diveblues D6036 Portable Handheld Fan comes with a standard manufacturer's warranty. For warranty claims, technical support, or any inquiries, please refer to the contact information provided on the product packaging or visit the

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

**My Diveblues D6036 Portable Handheld Fan is not working, it suddenly stopped and the LED says "Er". What should I do?**

The provided manual for the Diveblues D6036 Portable Handheld Fan does not specifically list an "Er" error code or provide troubleshooting steps for it. However, based on general troubleshooting for fans, here are some...

[Read full answer](#)

**How do I fold the Diveblues D6036 Portable Handheld Fan if I cannot find a button to push?**

The Diveblues D6036 Portable Handheld Fan does not have a specific button or latch that needs to be pushed to fold it. The 180° folding mechanism is designed to be adjusted by applying gentle...

[Read full answer](#)