

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Manastin](#) /

> [Manastin Bottom Loading Water Cooler Dispenser \(Model MSWCIB0476\) User Manual](#)

## Manastin MSWCIB0476

# Manastin Bottom Loading Water Cooler Dispenser User Manual

Model: MSWCIB0476 | Brand: Manastin

## INTRODUCTION

Thank you for choosing the Manastin Bottom Loading Water Cooler Dispenser. This appliance provides convenient access to hot, cold, and room temperature water. Designed for ease of use and safety, it features a bottom-loading mechanism, an empty bottle indicator, and a child safety lock for hot water. Please read this manual thoroughly before operation to ensure proper use, maintenance, and longevity of your water cooler.

## IMPORTANT SAFETY INFORMATION

To reduce the risk of injury or property damage, always follow basic safety precautions when using electrical appliances. Read all instructions before using this dispenser.

- **Electrical Safety:** Ensure the power source matches the appliance's requirements. Do not operate with a damaged cord or plug. Keep the power cord away from heated surfaces.
- **Child Safety Lock:** The hot water dispenser is equipped with a child safety lock. Always engage this lock when not in use, especially in households with children.
- **Dry Burn Prevention:** This water cooler includes a dry burn prevention function that automatically cuts off the main circuit board if a dry burn condition is detected, enhancing safety.
- **Water Leakage Prevention:** Ensure the drain plug is tightly secured to prevent water leakage.
- **Placement:** Place the dispenser on a firm, level surface. Do not place it in direct sunlight or near heat sources. Ensure adequate ventilation around the unit.
- **Cleaning:** Unplug the dispenser before cleaning. Do not immerse the appliance, cord, or plug in water or other liquids.

## PRODUCT OVERVIEW

### Key Features

- **Bottom Loading Design:** Eliminates heavy lifting of water bottles, making replacement easy and reducing

spills. Accommodates 3- and 5-gallon water bottles.

- **Three Temperature Settings:** Provides hot water (185-203°F), cold water ( $\leq 48.2^{\circ}\text{F}$ ), and room temperature water.
- **Empty Bottle Indicator:** A "lack" light illuminates and three beeps sound to remind you when to replace the water bottle.
- **Child Safety Lock:** Integrated with the hot water button for enhanced safety.
- **Durable Construction:** Equipped with two 304 food-grade stainless steel inner tanks for high temperature and corrosion resistance.
- **Quiet Operation:** Designed for low noise, suitable for various environments like offices, homes, and living rooms.

## Components

Familiarize yourself with the main components of your water cooler:

- **Dispensing Spouts:** Separate spouts for hot, cold, and room temperature water.
- **Control Panel:** Features indicator lights for Power, Heating, Cooling, and Lack (empty bottle).
- **Hot Water Safety Lock:** A button or lever located near the hot water spout.
- **Bottom Compartment:** Houses the water bottle.
- **Drip Tray:** Removable for easy cleaning.
- **Power Switches:** Located at the back of the unit for heating and cooling functions.
- **Drain Plug:** Located at the back or bottom for draining water.

## SETUP GUIDE

---

1. **Unpacking:** Carefully remove the water cooler from its packaging. Inspect for any damage. Retain packaging for future transport if needed.



Image: The Manastin Bottom Loading Water Cooler Dispenser, Ink Black model.

## 2. Placement:

- Place the dispenser on a hard, level surface capable of supporting its weight when full.
- Ensure there is at least 4 inches (10 cm) of clearance from the back and sides of the unit to a wall for proper ventilation.
- Avoid direct sunlight or proximity to heat sources (e.g., oven, dishwasher) to maintain cooling efficiency.

## 3. Water Bottle Installation (Bottom Loading):

- Open the lower cabinet door of the dispenser.
- Remove the cap from a new 3- or 5-gallon water bottle.
- Insert the probe (built-in rubber hose) into the opening of the water bottle. Ensure it is securely seated.
- Slide the water bottle into the cabinet.
- Close the cabinet door.

# EASY LOADING

Avoid water spills and lumbar back pain



No Heavy Lifting



No Laborious Flipping



Hidden Bottle Stylish

LACK



! Empty Bottle Indicator



Image: A user demonstrating the easy bottom-loading process for a water bottle.

#### 4. Initial Priming:

- Before plugging in the unit, place a cup under each dispensing spout (hot, cold, room temperature) and press the levers until water flows steadily from each. This ensures all tanks are filled and prevents dry burning.

#### 5. Power Connection:

- Plug the power cord into a grounded electrical outlet.
- Turn on the heating and cooling switches located on the back of the unit. The Power, Heating, and Cooling indicator lights on the front panel will illuminate.

## OPERATING INSTRUCTIONS

### Dispensing Water

Allow approximately 15-30 minutes for the water to reach optimal hot and cold temperatures after initial setup or after replacing a bottle.

# TRI-TEMP DISPENSING

Caring for the water needs of all people, redefining the drinking experience at your fingertips

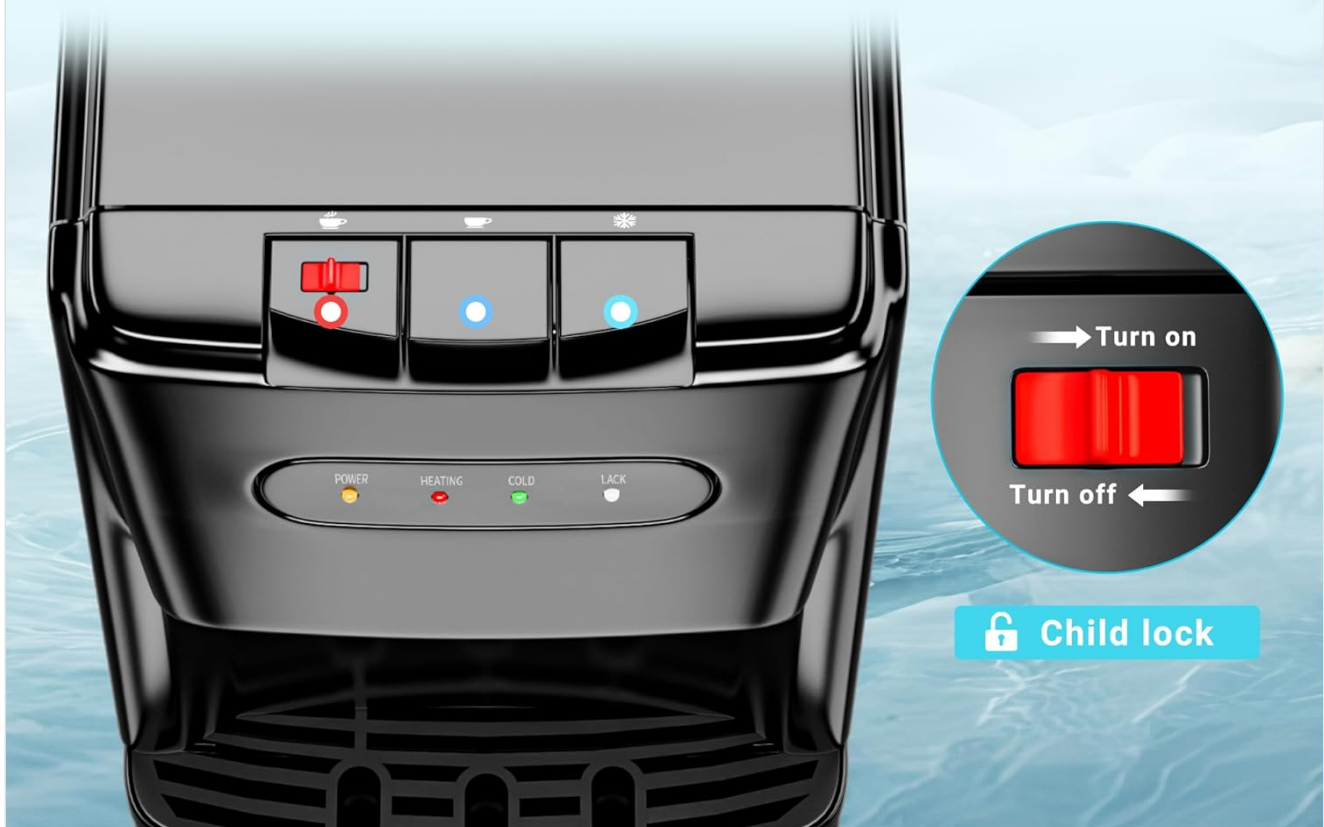


Image: Control panel showing hot, fresh, and cold water options, along with the child safety lock.

- **Hot Water:** Push the child safety lock button (usually red) and then press the hot water dispensing lever. Release the lever to stop the flow.
- **Cold Water:** Press the cold water dispensing lever. Release the lever to stop the flow.
- **Room Temperature Water:** Press the room temperature water dispensing lever. Release the lever to stop the flow.

## Empty Bottle Indicator

When the water bottle in the bottom compartment is empty, the "Lack" indicator light will illuminate, and the unit will emit three beeps. This signals that it's time to replace the water bottle. Refer to the "Water Bottle Installation" section under Setup Guide for replacement instructions.

## MAINTENANCE

Regular maintenance ensures optimal performance and hygiene of your water cooler.

### 1. Exterior Cleaning:

- Unplug the dispenser from the power outlet before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 2. Drip Tray Cleaning:

- The drip tray is removable. Slide it out, empty any collected water, and wash it with mild soap and water. Rinse thoroughly and dry before reinserting.

## 3. Internal Cleaning (Rubber Hose):

- The built-in rubber hose (probe) that goes into the water bottle can be detached for cleaning. Wash it with mild soap and water, rinse well, and ensure it is completely dry before reattaching.

## 4. Draining the Unit:

- Periodically, or before moving the unit, drain all water. Unplug the dispenser. Place a bucket under the drain plug (usually at the back or bottom) and remove the plug to allow water to drain completely. Re-secure the drain plug tightly afterward.

## TROUBLESHOOTING

---

Before contacting customer service, please review the following common issues and solutions:

Problem	Possible Cause	Solution
No water dispensing.	Water bottle empty or not properly installed. Unit not primed.	Replace water bottle. Ensure probe is fully inserted. Perform initial priming steps.
Water not hot/cold enough.	Heating/Cooling switch off. Unit recently plugged in. Poor ventilation.	Ensure heating/cooling switches are ON. Allow 15-30 minutes for temperature stabilization. Check for adequate clearance around the unit.
"Lack" indicator light is on.	Water bottle is empty.	Replace the water bottle.
Unit is noisy.	Normal compressor operation. Unit not level.	Some noise during compressor cycles is normal. Ensure the unit is on a level surface.
Water leakage.	Drain plug loose. Water bottle cap not sealed properly.	Tighten the drain plug. Ensure the water bottle is correctly seated with the probe.

## SPECIFICATIONS

---

- **Model Number:** MSWCIB0476
- **Color:** Ink Black
- **Material:** Plastic
- **Capacity:** Compatible with 3 and 5 Gallon water bottles
- **Product Dimensions:** 11.61"D x 12.21"W x 38.21"H
- **Installation Type:** Freestanding
- **Access Location:** Bottom

- **Hot Water Temperature:** 185-203°F (Upper Temperature Rating: 203 Degrees Fahrenheit)
- **Cold Water Temperature:** ≤48.2°F (Lower Temperature Rating: 43.7 Degrees Fahrenheit)
- **Heating Capacity:** 6.5 liters/hour
- **Cooling Capacity:** 1.5 liters/hour
- **Hot Tank Capacity:** 0.6L
- **Cold Water Tank Capacity:** 2L
- **Power Source:** Corded Electric
- **Item Weight:** 37.5 pounds
- **Manufacturer:** Manastin
- **Manufacture Year:** 2025



Image: Product dimensions and ETL certification details.

## WARRANTY AND SUPPORT

Manastin is committed to providing quality products and customer satisfaction. For any questions, concerns, or technical support regarding your water cooler, please contact Manastin customer service. Please refer to your purchase documentation for specific warranty terms and contact information. Keep your proof of purchase for warranty claims.

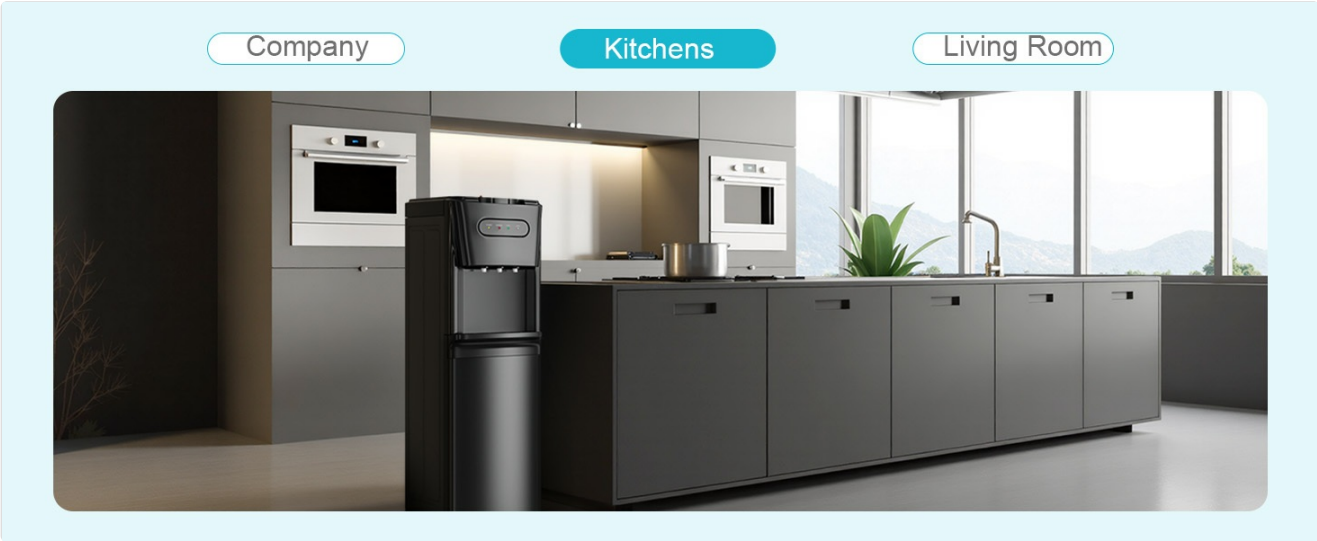


Image: Manastin's commitment to quality and customer support, highlighting ETL certification.