

[Manuals.plus](#) /

› [Whirlpool](#) /

› Whirlpool 8 kg Semi-Automatic Top Loading Washing Machine MAGIC CLEAN 8 Instruction Manual

Whirlpool MAGIC CLEAN 8.0

Whirlpool 8 kg Semi-Automatic Top Loading Washing Machine MAGIC CLEAN 8 Instruction Manual

Model: MAGIC CLEAN 8.0 GREY DAZZLE (10YR)-S

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Whirlpool 8 kg Semi-Automatic Top Loading Washing Machine, Model MAGIC CLEAN 8.0. Please read these instructions carefully before using the appliance and retain them for future reference. This washing machine is designed for residential use and features an 8 kg capacity, suitable for small to medium-sized families.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable liquids.
- Always unplug the machine before cleaning or performing any maintenance.
- Do not reach into the machine while it is operating.

SETUP

Proper installation is crucial for the performance and longevity of your washing machine.

1. Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Keep packaging materials away from children.

2. Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and operation. The product dimensions are 50.7D x 84W x 95.6H Centimeters.



Image: Front view of the Whirlpool 8 kg Semi-Automatic Washing Machine with its dimensions (50.7 cm depth, 84 cm width, 95.6 cm height) and a 5-star BEE energy rating label indicating 0.0094 kWh/kg/cycle energy consumption.

3. Water Connection

Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.

4. Drain Hose Connection

Attach the provided drain hose securely to the machine and direct it into a suitable drain or sink. Ensure the hose is not kinked or blocked.

5. Power Connection

Plug the power cord into a dedicated, grounded electrical outlet. Do not use extension cords.

Whirlpool®



© 2026 All Rights Reserved. Whirlpool is a trademark of Whirlpool Properties Inc. and is used under license.

Image: Front view of the Whirlpool 8 kg Semi-Automatic Washing Machine, showing the wash tub on the left and the spin tub on the right, with the control panel at the top center.

OPERATING INSTRUCTIONS

Follow these steps for effective washing and spinning.

1. Control Panel Overview

The machine features knob controls for fabric type, wash timer, drain selector, and dry timer.

Powerful Impeller

Strong motions that scrub off dirt & stains in 1 wash

Whirlpool®



Image: Close-up of the control panel with four rotary knobs for Fabric Type, Wash Timer, Drain Selector, and Dry Timer.

2. Loading Clothes

Open the wash tub lid and load clothes loosely, ensuring not to exceed the 8 kg capacity. Overloading can reduce washing efficiency.

3. Adding Detergent

Add the recommended amount of detergent directly into the wash tub with the clothes.

4. Selecting Wash Programs

Turn the 'Fabric Type' knob to select one of the three wash programs:

- **Delicate:** For silk, lace, and wool.
- **Normal:** A versatile option for everyday washing.
- **Heavy:** For heavily soiled items like bedding and towels.

The machine also features a **15 Minute Quick Wash** for light loads or quick refreshes.



Image: Diagram illustrating the three wash programs: 15 min Heavy, 10 min Normal, 5 min Delicate, and 4 min Eco, controlled by a rotary knob.



Image: A graphic highlighting the 'Quick 15 min wash' feature, showing a timer icon set to 15 minutes and a shirt being washed in the tub.

5. Washing Cycle

Set the 'Wash Timer' to the desired duration. The **3D Turbo Impeller** creates strong motions to scrub off dirt and stains. The **In-Built Collar Scrubber** assists in cleaning stubborn dirt on collars and cuffs.

Lint Filter

Triple layer filtration traps lint delivering cleaner, fresher clothes in every wash

Whirlpool®



© 2025 All Rights Reserved. Whirlpool is a trademark of Whirlpool Properties Inc. and is used under license.

Image: An illustration showing a white shirt in a washing machine tub with water bubbles and dirt particles being removed by powerful water motions, representing the 3D Turbo Impeller.



Image: A close-up of the washing machine tub showing an integrated scrubbing surface designed to help clean collars and cuffs.

6. Draining and Spinning

After the wash cycle, select 'Drain' using the 'Drain Selector' knob. Transfer clothes to the spin tub and set the 'Dry Timer' for spinning. The **Spin Shower** feature helps remove residual detergent during the spin cycle.

DESIGNED FOR DURABLE LIVING



Rust Proof
Body



Rat
Protection



Wheels For
Easy Mobility



Image: An illustration of the spin tub with water jets spraying down, demonstrating the Spin Shower feature that removes residual detergent.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your washing machine.

1. Cleaning the Lint Filter

The triple-layer filtration system traps lint. Regularly remove and clean the lint filter to maintain washing efficiency and prevent lint transfer to clothes.

Built like a tank

Whirlpool®

4 YEARS
COMPREHENSIVE
WARRANTY

5 YEARS
WARRANTY ON WASH
MOTOR & PRIME MOVER

4 YEARS
WARRANTY ON
SPIN MOTOR



© 2025 All Rights Reserved. Whirlpool is a trademark of Whirlpool Properties Inc. and is used under license.

Image: A visual representation of the lint filter, showing trapped lint and how it filters particles from the water.

2. Cleaning the Machine Exterior

Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents. The machine features a rust-proof body for durability.

3. Rat Protection and Mobility

The machine is designed with rat protection. Wheels are included for easy mobility, allowing you to move the appliance conveniently for cleaning or relocation.

3 WASH PROGRAMS FOR EVERY FABRIC



Image: An image highlighting key durability features: a rust-proof body icon, a rat protection icon, and wheels for easy mobility.

TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power supply; Lid not closed properly	Check power connection; Ensure lids are securely closed
Water does not fill	Water tap closed; Water inlet hose kinked	Open water tap; Straighten water inlet hose
Water does not drain	Drain hose kinked or blocked; Drain selector not set to 'Drain'	Check and clear drain hose; Set drain selector correctly
Excessive vibration/noise	Machine not level; Uneven load	Adjust leveling feet; Redistribute clothes evenly
Poor washing results	Overloading; Insufficient detergent; Dirty lint filter	Reduce load; Use correct detergent amount; Clean lint filter

SPECIFICATIONS

Detailed technical specifications for your Whirlpool washing machine.

Feature	Detail
Brand	Whirlpool
Model Number	MAGIC CLEAN 8.0 GREY DAZZLE (10YR)-S

Feature	Detail
Capacity	8 kg
Energy Rating	5 Star (BEE Rating)
Energy Consumption	0.0094 KWh/kg/cycle
Product Dimensions (D x W x H)	50.7D x 84W x 95.6H Centimeters
Item Weight	24000 Grams
Operation Mode	Semi Automatic
Max Rotational Speed	1400 RPM
Material Type	Plastic
Colour	Grey
Included Components	Drain Hose
Special Features	Supersoak Technology, Special Scrubber, 3D Turbo Impeller, In-Built Collar Scrubber
Wash Programs	Delicate, Heavy Duty, Normal

WARRANTY AND SUPPORT

Your Whirlpool washing machine comes with comprehensive warranty coverage and dedicated customer support.

Warranty Details

- 4 Years Comprehensive Warranty
- 10 Years Warranty on Wash Motor
- 4 Years Warranty on Spin Motor

Please retain your purchase invoice for warranty claims.



Image: A graphic displaying the warranty information: 4 Years Comprehensive Warranty, 5 Years Warranty on Wash Motor & Prime Mover, and 4 Years Warranty on Spin Motor.

Customer Support

For any assistance, service requests, or queries, please contact Whirlpool customer care:

- **Toll-free Customer Care No.:** 18002081800
- **Email:** HELPDESKINDIA@WHIRLPOOL.COM

Manufacturer Address: WHIRLPOOL OF INDIA LTD, PLOT NO. 40, SECTOR-44, GURUGRAM, HARYANA-122002, India.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question