

[Manuals.plus](#) /

> [Mtxxmy](#) /

> Mtxxmy 70" Fluted TV Stand (Model RXZER291) Instruction Manual

Mtxxmy RXZER291

Mtxxmy 70" Fluted TV Stand (Model RXZER291) Instruction Manual

Model: RXZER291

1. PRODUCT OVERVIEW

The Mtxxmy 70" Fluted TV Stand is a mid-century modern entertainment center designed to accommodate televisions up to 80 inches. It features curved sliding doors, arched fluted doors, and a central drawer, providing both aesthetic appeal and functional storage. This unit is suitable for living rooms, bedrooms, and home offices.

Key features include:

- **Elegant Design:** Curved sliding doors and arched fluted doors with metal gold handles.
- **Ample Storage:** Includes a central drawer and two side compartments with doors, along with an open shelf for media devices.
- **Cable Management:** Equipped with a large cable management hole to organize wires.
- **Durable Construction:** Made from high-quality MDF with solid wood legs and adjustable feet for stability.
- **Easy Maintenance:** Features a scratch-resistant and waterproof desktop.

2. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the TV stand. Refer to the specifications for weight limits.
- Place the TV stand on a level surface to prevent tipping.
- Use caution when moving the assembled unit to avoid damage or injury.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components and hardware are present and undamaged. If any parts are missing

or damaged, please contact customer support.

- All necessary hardware (screws, dowels, cam locks, etc.)
- Wooden panels for the top, bottom, sides, back, shelves, doors, and drawer.
- Legs and adjustable feet.
- Metal handles.
- Detailed installation instructions.
- Installation tools (typically an Allen wrench; a screwdriver may be required but is often not included).

4. SETUP INSTRUCTIONS

Assembly is required for this TV stand. Detailed instructions and tools are included in the package. Precise hole positions are designed to facilitate quick assembly.

1. **Prepare the Area:** Clear a spacious area for assembly. Lay down a blanket or cardboard to protect both the furniture pieces and your floor.
2. **Identify Parts:** Unpack all components and lay them out. Refer to the parts list in your instruction manual to identify each piece.
3. **Assemble the Frame:** Follow the step-by-step diagrams in the provided manual to connect the main frame components using the designated hardware.
4. **Install Shelves and Drawer Glides:** Secure internal shelves and attach drawer glides according to the instructions.
5. **Assemble Drawer:** Construct the drawer box and attach the front panel and handle. Insert the assembled drawer into its glides.
6. **Attach Doors:** Mount the curved sliding doors and arched fluted doors using the provided hinges and hardware. Ensure they open and close smoothly.
7. **Install Legs:** Attach the solid wood legs to the base of the unit. Adjust the feet as needed to ensure stability on uneven surfaces.
8. **Final Checks:** Double-check all connections to ensure they are tight and secure.

Product size

 <50 mins
Assembly



Figure 1: Product dimensions. The stand measures 70.28" (L) x 15.74" (D) x 22.64" (H).



Figure 2: TV size compatibility. This stand can accommodate TVs up to 80 inches.

5. OPERATING INSTRUCTIONS

The Mtxmy TV Stand is designed for intuitive use, offering various storage options and features.

- **Sliding Doors:** The curved doors on the sides can slide smoothly along their tracks to reveal or conceal the storage compartments. Gently push or pull the doors by their handles.
- **Central Drawer:** Pull the metal handle to open the central drawer for storing smaller items like remote controls, game accessories, or personal belongings.
- **Open Shelf:** Use the open central shelf to place media devices such as a cable box, gaming console, or soundbar for easy access and ventilation.
- **Cable Management:** Utilize the large cable management hole located on the back panel of the open shelf to route and organize power cords and audio/video cables, keeping them out of sight and preventing clutter.
- **Adjustable Feet:** The adjustable feet allow for minor height adjustments to ensure the stand remains level and stable on various floor types. Rotate the feet clockwise or counter-clockwise to raise or lower each corner.



Figure 3: TV Stand in use, showcasing its design and capacity for a TV and decorative items.



Figure 4: Detailed view of features including removable shelves for flexible storage, a cable hole for wire organization, and sturdy support legs.

6. MAINTENANCE

Proper care and maintenance will ensure the longevity and appearance of your Mtxmy TV Stand.

- **Cleaning:** The desktop is scratch-resistant and waterproof. For daily cleaning, wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage, especially on non-waterproof surfaces.
- **Dusting:** Regularly dust the unit with a dry, soft cloth to prevent buildup.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Hardware Check:** Periodically inspect all screws and fasteners to ensure they remain tight. Re-tighten if necessary to maintain structural integrity.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

Problem	Possible Cause	Solution
Unit is wobbly or unstable.	Uneven floor; loose connections.	Adjust the leveling feet at the bottom of the legs. Ensure all assembly screws are tightened.
Drawer or doors do not open/close smoothly.	Misalignment during assembly; obstruction in tracks/glides.	Check the alignment of drawer glides or door hinges. Ensure no debris is obstructing the tracks. Re-adjust if necessary.
Missing or damaged parts.	Shipping damage; packaging error.	Do not proceed with assembly. Contact Mxtxmy customer support immediately for replacement parts.
Difficulty with assembly.	Unclear instructions; incorrect part orientation.	Review the instruction manual carefully. Ensure parts are oriented correctly. If issues persist, contact customer support.

8. SPECIFICATIONS

Detailed specifications for the Mxtxmy 70" Fluted TV Stand:

- **Brand:** Mxtxmy
- **Model Name:** TV Stand
- **Model Number:** RXZER291
- **Product Dimensions:** 15.74"D x 70.28"W x 22.64"H
- **Item Weight:** 74.7 pounds
- **Material:** Engineered Wood (MDF)
- **Color:** Black (Walnut finish)
- **Handle Material:** Metal (Gold hardware color)
- **Mounting Type:** Floor Mount
- **Installation Type:** Freestanding
- **Door Style:** Sliding Doors
- **Special Feature:** Adjustable Feet, Cable Management, Hidden Storage
- **Assembly Required:** Yes
- **Recommended Uses:** Bedroom, Home Office, Living Room
- **Ground To Item Distance:** 6.3 Inches

9. WARRANTY AND SUPPORT

Mxtxmy is committed to providing high-quality products. While specific warranty details are not provided in this manual, if you encounter any problems during the assembly process or with the product itself, please contact Mxtxmy customer support.

Customer Support: For assistance, please refer to the contact information provided at the point of purchase or on the official Mxtxmy website. Our team aims to reply within 24 hours to help resolve any issues you may have.