

[Manuals.plus](#) /

› [Diveblues](#) /

› Diveblues Portable Turbo Fan D6036 User Manual

Diveblues D6036

Diveblues Portable Turbo Fan D6036 User Manual

Model: D6036

INTRODUCTION

Thank you for choosing the Diveblues Portable Turbo Fan D6036. This compact and versatile fan is designed to provide powerful and customizable airflow for various situations, whether you're at home, traveling, or enjoying outdoor activities. Please read this manual thoroughly before use to ensure proper operation and maintenance.

PRODUCT FEATURES

- **Powerful Turbo Airflow:** Features a stepless 1-100 speed control for precise adjustment from a gentle breeze to strong turbo airflow.
- **4-in-1 Ultra-Portable Design:** Can be used handheld, worn around the neck, placed on a desk, or clipped onto a bag.
- **Long-Lasting Battery:** Equipped with a built-in 3600mAh rechargeable battery, offering up to 12 hours of cooling on low speed. Battery life varies by speed level.
- **Fold-Flat & Lightweight:** Fully foldable design for easy storage and portability. Weighs only 6.7 oz (190 g) with a compact folded size of 4.21 × 2.20 × 2.95 inches.
- **Thoughtful Details:** Includes an HD display for speed and battery status, USB-C charging, and a built-in carabiner-style hook.

PACKAGE CONTENTS

- Diveblues Portable Turbo Fan D6036
- USB-C Charging Cable
- Lanyard
- User Manual

SETUP

1. **Initial Charge:** Before first use, fully charge the fan using the provided USB-C cable. Connect the cable to the fan's USB-C port and a compatible USB power adapter (not included). The HD display will show battery

status.

2. **Attach Lanyard (Optional):** If desired, attach the lanyard to the designated loop on the fan handle for hands-free carrying around your neck.

NOTICE THE DETAILS



HD Display



Built-In Clip



USB-C

Image: The fan's HD display, built-in clip, and USB-C charging port are highlighted for easy identification.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button (usually located on the handle) for a few seconds to turn the fan on or off.
2. **Adjust Fan Speed:** Once powered on, use the speed control buttons (often marked '+' and '-') or a dial to adjust the airflow from 1 to 100. The current speed level will be shown on the HD display.



24 ft/s
Strong Airflow



46 dB
Whisper Noise



POWERFUL AIRFLOW

**1-100 Speed Control From
Gentle Breeze To Turbo Power**

Image: The fan in handheld mode, illustrating its strong airflow capability.

CHARGING

The Diveblues Portable Turbo Fan uses a USB-C port for charging. Connect the provided USB-C cable to the fan and a standard USB power source. The HD display will indicate the charging status and battery percentage. A full charge can provide up to 12 hours of operation on the lowest speed setting.

12H MAX

RUNTIME



Travel All Day. Stay Cool

Battery Life Varies By Speed.

Image: The fan's long-lasting battery, suitable for extended use.

USAGE MODES

The fan's versatile design allows for four different usage modes:

- **Handheld:** Hold the fan by its ergonomic handle for direct cooling.
- **Neck Fan:** Attach the lanyard and wear the fan around your neck for hands-free cooling. The fan head can be adjusted for optimal airflow.
- **Desk Fan:** Fold the handle to create a stable base, allowing the fan to stand upright on any flat surface.
- **Clip-on Fan:** Utilize the built-in carabiner-style hook to clip the fan onto bags, tents, or other objects for convenient placement.

ULTRA-PORTABLE



Hook To Bag



Handheld



Neck Fan



Desk

Image: Demonstrates the fan's versatility as a hook-to-bag, handheld, neck, and desk fan.

MAINTENANCE

- **Cleaning:** Ensure the fan is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use harsh chemicals or immerse the fan in water.
- **Storage:** When not in use, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on	Low battery; Power button not pressed correctly	Charge the fan; Press and hold the power button firmly.
Weak airflow	Low battery; Fan speed set too low	Charge the fan; Increase the fan speed using the control buttons.
Fan not charging	Loose cable connection; Faulty cable or adapter	Ensure USB-C cable is securely connected; Try a different USB-C cable or power adapter.
Unusual noise during operation	Obstruction in fan blades; Fan placed on an unstable surface	Turn off and unplug the fan, then carefully check for and remove any obstructions; Place the fan on a flat, stable surface.

SPECIFICATIONS

- **Model:** D6036
- **Brand:** Diveblues
- **Electric Fan Design:** Wearable Fan
- **Power Source:** Battery Powered (3600mAh)
- **Product Dimensions:** 1.4"D x 2.99"W x 7.28"H
- **Item Weight:** 190 g (6.7 oz)
- **Number of Speeds:** 100 (Stepless)
- **Noise Level:** 50 dB (max)
- **Wattage:** 5 watts
- **Voltage:** 5 volts
- **Material:** Plastic
- **Special Features:** Foldable, Portable, HD Display, Built-in Clip, USB-C Charging

SAFETY INFORMATION

Please observe the following safety precautions:

- Do not insert fingers or any objects into the fan grille while operating.
- Keep the fan away from water and other liquids.
- Do not disassemble or attempt to repair the fan yourself. Contact customer support if issues arise.
- Keep out of reach of small children.
- Use only the provided USB-C cable or a certified equivalent for charging.
- Avoid exposing the fan to extreme temperatures or direct sunlight for prolonged periods.

WARRANTY AND SUPPORT

Diveblues products are manufactured to high-quality standards. For warranty information, technical support, or any questions regarding your Diveblues Portable Turbo Fan D6036, please refer to the contact information provided on the product packaging or visit the official Diveblues website. Please retain your proof of purchase for warranty claims.

