



Manuals.plus /

- › Genérico /
- › Genérico Black Fabric Recliner Massage Chair - Model 4015628 User Manual

Genérico 4015628

Genérico Black Fabric Recliner Massage Chair

Model: 4015628 - User Manual

1. INTRODUCTION

Thank you for choosing the Genérico Black Fabric Recliner Massage Chair, Model 4015628. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read all instructions carefully before use and retain this manual for future reference.



Image 1.1: Front view of the Genérico Black Fabric Recliner Massage Chair. This image shows the chair in its upright position, highlighting the plush seating, backrest, and armrests.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Only use a certified 5V DC input. Higher voltage may cause overheating, device damage, and a potential risk of fire.
- Do not expose the chair to excessive moisture or direct sunlight.
- Ensure the chair is placed on a stable, level surface.
- Keep hands and feet clear of the reclining mechanism during operation.

- Do not stand on the chair or use it as a step stool.

3. PACKAGE CONTENTS

Please check the package carefully to ensure all components are present:

- Recliner Base
- Backrest
- Armrests (Left and Right)
- Power Adapter (5V DC)
- Massage Remote Control
- Assembly Hardware (screws, washers, Allen key)
- User Manual (this document)

4. ASSEMBLY AND SETUP

Follow these steps to assemble your recliner. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Armrests:** Secure the left and right armrests to the recliner base using the provided hardware. Ensure they are firmly attached.
3. **Install Backrest:** Slide the backrest onto the metal brackets located on the recliner base. Push down firmly until it clicks into place. Ensure it is securely locked.
4. **Connect Power:** Locate the power cable from the chair and connect it to the 5V DC power adapter. Plug the adapter into a suitable wall outlet.
5. **Remote Control:** The massage remote control connects to a cable extending from the side of the chair. Plug it in securely.



Image 4.1: Front view of the assembled recliner. This image provides a clear view of the chair's overall design and fabric texture after assembly.

5. OPERATING INSTRUCTIONS

5.1. Reclining Function

The recliner features a manual reclining mechanism for comfortable positioning.

1. **To Recline:** Locate the handle on the right side of the chair. Pull the handle upwards. While holding the handle, lean back gently to extend the footrest and recline the backrest to your desired position, up to a maximum of 135 degrees.

2. **To Return to Upright Position:** Push your body forward and the backrest will return to its original position. The footrest will retract automatically.



Image 5.1: Diagram illustrating the three main reclining positions of the chair: upright, partially reclined, and fully reclined with the footrest extended. Arrows indicate the movement.

5.2. Massage Function

Your recliner is equipped with a 6-point vibration massage system controlled by a remote.

1. **Power On/Off:** Ensure the chair is plugged into a power source. Use the power button on the remote control to turn the massage function on or off.
2. **Select Massage Program:** The remote control allows you to choose from different massage programs. Refer to the remote's labels for specific program options.
3. **Adjust Intensity:** If available, use the intensity buttons on the remote to adjust the strength of the vibration massage.
4. **Targeted Massage:** The 6 massage points are strategically placed to provide a targeted massage experience.



Image 5.2: Detailed view of the recliner highlighting key features such as the massage remote control, the convenient side pocket for storage, and the texture of the fabric on the armrest and seat.

6. MAINTENANCE

Regular maintenance will prolong the life and appearance of your recliner.

- **Cleaning Fabric:** For general cleaning, use a soft brush or vacuum cleaner to remove dust and loose debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner following the product instructions, testing on an inconspicuous area first.
- **Frame and Mechanism:** Periodically check all bolts and screws to ensure they are tight. Do not overtighten. Lubricate moving parts of the reclining mechanism annually with a silicone-based lubricant if squeaking occurs.
- **Electrical Components:** Keep the power adapter and remote control dry. Do not attempt to repair electrical components yourself.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the fabric and finish.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not recline	Reclining handle not pulled fully; obstruction in mechanism.	Ensure the handle is pulled completely. Check for any objects blocking the mechanism.
Massage function not working	Power adapter unplugged; remote control not connected; remote batteries low (if applicable).	Check power connection to wall outlet and chair. Ensure remote is securely plugged in.
Chair is unstable or wobbly	Loose assembly hardware; uneven floor.	Tighten all assembly bolts and screws. Move chair to a level surface or use shims.
Squeaking noise during recline	Mechanism requires lubrication.	Apply a silicone-based lubricant to the moving parts of the reclining mechanism.

8. SPECIFICATIONS

Feature	Detail
Brand	Genérico
Model	4015628
Color	Black
Material	Fabric (100% polyester), metal, plywood
Filling Material	Foam, PP fiber
Dimensions (Upright)	77 x 91.5 x 96 cm (Width x Depth x Height)
Dimensions (Reclined)	77 x 147.5 x 76 cm (Width x Depth x Height)
Seat Dimensions	50 x 56.5 cm (Width x Depth)
Seat Height from Floor	43 cm
Armrest Height from Floor	54 cm
Recline Angle	Up to 135 degrees (manual)
Massage Type	6-point vibration massage
Input Voltage	5 V DC
Input Current	2 A
Max. Weight Capacity	110 kg

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where you purchased this product. Keep your proof of purchase for any warranty claims. If you have questions regarding assembly or operation that are not covered in this manual, please contact customer service.