

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fastrack](#) /

› [Fastrack StreetStyle 5.0 Quartz Analog Watch User Manual - Model 68054PP02W](#)

## Fastrack 68054PP02W

# Fastrack StreetStyle 5.0 Quartz Analog Watch User Manual

MODEL: 68054PP02W

## Introduction

---

Thank you for choosing the Fastrack StreetStyle 5.0 Quartz Analog Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch to ensure optimal performance and longevity. This watch combines a classic analog display with a modern digital interface, offering precise timekeeping and a range of useful functions for your daily activities.



Front view of the Fastrack StreetStyle 5.0 watch, showcasing the blue dial, analog hands, and digital display. The four control buttons (LIGHT, MODE, START, RESET) are visible on the sides of the case.

## Setup

Your Fastrack StreetStyle 5.0 watch comes with a pre-installed battery. Before first use, ensure any protective films are removed from the watch face and back case.

### Initial Time Setting

- Identify Buttons:** Your watch features four buttons: **LIGHT** (top left), **MODE** (bottom left), **START** (top right), and **RESET** (bottom right).
- Enter Time Setting Mode:** Press the **MODE** button repeatedly until the digital time display starts flashing, indicating you are in setting mode.
- Adjust Time:** Use the **START** button to increase the flashing value (hours, minutes, seconds). Use the **RESET** button to cycle through the different values (hours, minutes, 12/24-hour format).
- Set Date and Day:** Continue pressing the **RESET** button to move to date, month, and day settings. Adjust these values using the **START** button.
- Exit Setting Mode:** Once all settings are correct, press the **MODE** button to exit the setting mode. The digital display will stop flashing, and the analog hands will automatically synchronize with the set digital

time.

## Operating Instructions

---

### Using the EL Backlight

To illuminate the digital display in low-light conditions, press the **LIGHT** button (top left). The backlight will remain active for a few seconds.

### Alarm Function

1. **Access Alarm Mode:** Press the **MODE** button repeatedly until 'ALM' or the alarm time is displayed.
2. **Set Alarm Time:** While in Alarm Mode, press the **RESET** button to select the hour or minute digit you wish to adjust. Use the **START** button to change the value.
3. **Activate/Deactivate Alarm:** Press the **START** button while in Alarm Mode to toggle the alarm ON/OFF. An alarm icon will appear when activated.
4. **Hourly Chime:** Some models allow setting an hourly chime. Refer to the display for an 'SIG' or chime icon and use the **START** button to toggle it.
5. **Exit Alarm Mode:** Press the **MODE** button to return to the regular time display.

### Stopwatch Function

1. **Access Stopwatch Mode:** Press the **MODE** button repeatedly until 'STW' or '00:00:00' is displayed.
2. **Start/Stop:** Press the **START** button to begin timing. Press **START** again to pause.
3. **Lap/Split Time:** While the stopwatch is running, press the **RESET** button to record a lap or split time. The stopwatch will continue running in the background.
4. **Reset:** While the stopwatch is paused, press the **RESET** button to clear the stopwatch to '00:00:00'.
5. **Exit Stopwatch Mode:** Press the **MODE** button to return to the regular time display.

### World Time Function

Your watch includes a World Time function for tracking time in different global cities.

1. **Access World Time Mode:** Press the **MODE** button repeatedly until 'WT' or a different city code is displayed.
2. **Select City:** Use the **START** button to cycle through available city codes/time zones.
3. **Exit World Time Mode:** Press the **MODE** button to return to the regular time display.

## Maintenance

---

### Cleaning Your Watch

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

### Water Resistance

This watch is rated for **WR 30M (3 ATM)** water resistance. This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is *not* suitable for swimming, showering, or diving. Avoid operating buttons when the watch is wet to prevent water ingress.



Rear view of the Fastrack StreetStyle 5.0 watch, showing the stainless steel back case with engraved brand logo, model number (68054PP02), and water resistance rating (WR 30M).

## Battery Replacement

The watch is powered by a button-cell battery. When the display dims or the watch stops functioning, it's time for a battery replacement. It is recommended to have the battery replaced by an authorized service center to ensure proper sealing and maintain water resistance.

## Storage

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. Keeping it in its original packaging or a watch box can help protect it from dust and scratches.

## Troubleshooting

- **Watch Not Functioning:** Check if the battery needs replacement. Ensure no buttons are stuck.
- **Incorrect Time Display:** Re-enter the time setting mode and adjust the time as per the 'Initial Time Setting' instructions.
- **Analog Hands Not Synchronized:** If analog hands do not match the digital time after setting, try

resetting the watch (if a reset function is available, otherwise consult service).

- **Digital Display Dim or Blank:** This usually indicates a low battery. Replace the battery.
- **Water Inside Watch:** If you notice condensation or water droplets inside the watch, stop using it immediately and take it to an authorized service center.

For issues not covered here, please contact Fastrack customer support.

## Specifications



Diagram illustrating the case size of the Fastrack StreetStyle 5.0 watch, indicating a 41 mm case diameter for reference.

Feature	Detail
Brand	Fastrack
Model Name	StreetStyle 5.0
Model Number	68054PP02W
Display Type	Analog-Digital

Movement	Quartz
Water Resistance	30 Meters (3 ATM)
Case Dimensions (LxWxH)	50 x 41 x 17 Millimeters
Item Weight	200 g
Batteries Included	Yes
Country of Origin	India

## Warranty and Support

---

Your Fastrack StreetStyle 5.0 watch is covered by a manufacturer's warranty against manufacturing defects. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for warranty claims.

For technical assistance, service, or warranty claims, please contact Fastrack customer support or visit an authorized Fastrack service center. You can find contact information and service center locations on the official Fastrack website: [www.fastrack.in](http://www.fastrack.in)