

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Fastrack](#) /

> [Fastrack StreetStyle 5.0 Quartz Analog Watch Instruction Manual - Model 68054PP03W](#)

Fastrack 68054PP03W

Fastrack StreetStyle 5.0 Quartz Analog Watch

Model: 68054PP03W - Instruction Manual

INTRODUCTION

Welcome to the instruction manual for your Fastrack StreetStyle 5.0 Quartz Analog Watch. This guide provides detailed information on how to set up, operate, and maintain your watch to ensure optimal performance and longevity. Please read this manual thoroughly before using your watch.

Your Fastrack StreetStyle 5.0 watch combines a classic analog display with modern digital features, offering precise timekeeping, multiple alarms, a stopwatch, countdown timer, and world time functions. It is designed for daily wear and active lifestyles.

PRODUCT OVERVIEW

The Fastrack StreetStyle 5.0 watch features a durable green PU strap, a green dial, and a combination of analog hands with a digital display. It is equipped with four control buttons for various functions.



Figure 1: Front View of the Watch. This image displays the watch face, highlighting the analog hands, the digital display, and the four function buttons: LIGHT (top left), MODE (bottom left), START (top right), and RESET (bottom right).

Watch Components:

- **Analog Display:** Traditional hour, minute, and second hands.
- **Digital Display:** Shows time, date, day, and other digital functions.
- **LIGHT Button:** Activates the EL backlight for improved visibility in low light conditions.
- **MODE Button:** Cycles through different modes such as Time, Alarm, Stopwatch, Countdown Timer, and World Time.
- **START Button:** Used to start/stop functions like the stopwatch or countdown timer, and to adjust settings.
- **RESET Button:** Used to reset functions, confirm settings, or switch between display options.
- **Water Resistance:** Marked as WR 30M, indicating resistance to splashes and brief immersion.



Figure 2: Side View of the Watch. This image shows the watch from the side, illustrating the placement and design of the control buttons.



Figure 3: Back View of the Watch. The stainless steel case back is visible, featuring the Fastrack logo, model number, and water resistance rating.

SETUP

Initial Power-On and Battery

Your Fastrack watch comes with a pre-installed battery. The watch should be running upon arrival. If the digital display is blank or the analog hands are not moving, the battery may need replacement. This watch uses a standard watch battery (type not specified, but typically a button cell). Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance integrity.

Setting the Digital Time and Date

1. From the normal time display mode, press the **MODE** button repeatedly until the digital time display starts flashing, indicating it's in setting mode.
2. Press the **RESET** button to cycle through the settings (seconds, hour, minute, year, month, day).
3. Use the **START** button to increase the flashing value. Hold the **START** button to rapidly advance the value.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode.

Synchronizing Analog and Digital Time

For watches with both analog and digital displays, the analog hands are often synchronized with the digital time. If your analog hands do not match the digital time after setting, follow these steps:

1. From the normal time display mode, press and hold the **MODE** button for a few seconds until the digital display shows "H-SET" or similar, and the analog hands start to move or become adjustable.
2. Use the **START** and/or **RESET** buttons to adjust the analog hands to match the digital time.
3. Once synchronized, press the **MODE** button to exit the analog setting mode.

Note: Specific steps may vary slightly. Refer to the digital display prompts for guidance.



Figure 4: Digital Display and Case Size. This image shows the digital display in a setting mode (H-SET) and illustrates the watch's case size of 41mm for reference.

OPERATING INSTRUCTIONS

Your Fastrack StreetStyle 5.0 watch offers several functions accessible via the **MODE** button.

Cycling Through Modes

Press the **MODE** button to cycle through the following functions:

- Time Display (Hour, Minute, Second, Day, Date)
- Alarm 1 (AL1)
- Alarm 2 (AL2)
- Alarm 3 (AL3)
- Alarm 4 (AL4)
- Stopwatch (STW)
- Countdown Timer (TMR)
- World Time (W.T)

Using the EL Backlight

Press the **LIGHT** button (top left) to illuminate the digital display. The backlight will remain active for a few seconds.

Setting and Using Alarms

Your watch supports up to 4 independent alarms and an hourly chime.

1. Press the **MODE** button until you reach an Alarm mode (AL1, AL2, AL3, or AL4).
2. Press and hold the **START** button until the alarm time starts flashing.
3. Use the **RESET** button to select the hour or minute to adjust.
4. Use the **START** button to change the flashing value.
5. Press the **MODE** button to save the alarm time and exit setting mode.
6. To turn an alarm ON/OFF, in the alarm mode, press the **RESET** button. An alarm icon will appear/disappear.
7. To activate/deactivate the hourly chime, in the normal time display, press the **MODE** button until the hourly chime indicator (e.g., "SIG") appears/disappears. *(Note: This is a common method, specific button combination might vary.)*
8. When an alarm sounds, press any button to stop it. If snooze is active, it will sound again after a few minutes.

Using the Stopwatch

1. Press the **MODE** button until you reach the Stopwatch mode (STW).
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the stopwatch.
4. Press the **RESET** button to clear the stopwatch to zero.
5. To record lap times, press the **RESET** button while the stopwatch is running. The lap time will display briefly, and the stopwatch will continue timing in the background.

Using the Countdown Timer

1. Press the **MODE** button until you reach the Countdown Timer mode (TMR).
2. Press and hold the **START** button until the timer setting starts flashing.
3. Use the **RESET** button to select the hour, minute, or second to adjust.
4. Use the **START** button to change the flashing value.
5. Press the **MODE** button to save the timer setting.
6. Press the **START** button to begin the countdown.
7. Press the **START** button again to pause/resume the countdown.
8. When the timer reaches zero, an alarm will sound. Press any button to stop it.

Using World Time

1. Press the **MODE** button until you reach the World Time mode (W.T).
2. Use the **START** button to cycle through different city codes/time zones.
3. The digital display will show the current time in the selected city.
4. To return to your home time, cycle through the cities until your home city is displayed, or press the **MODE** button to exit.

MAINTENANCE

Cleaning Your Watch

To keep your watch looking its best, wipe the case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and strap material.

Water Resistance (WR 30M)

Your watch is water resistant up to 30 meters (WR 30M). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. However, it is **not** suitable for swimming, showering, or diving. Do not operate the buttons while the watch is wet or submerged, as this can compromise the water resistance.

Battery Replacement

The watch is powered by a quartz movement and requires a battery. When the digital display becomes dim or the watch stops functioning, the battery may need replacement. It is highly recommended to have the battery replaced by an authorized Fastrack service center or a professional watch repairer to ensure the correct battery type is used and the water resistance seal is properly re-secured.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. These conditions can affect the watch's accuracy and lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running / Digital display blank	Depleted battery.	Replace the battery. Contact an authorized service center.
Incorrect time displayed (digital)	Time not set correctly.	Refer to "Setting the Digital Time and Date" section to reset the time.
Analog hands do not match digital time	Analog hands out of sync.	Refer to "Synchronizing Analog and Digital Time" section.
Alarm not sounding	Alarm not activated or set incorrectly.	Ensure the alarm is set and activated (alarm icon visible). Check alarm volume settings if applicable.
Buttons are unresponsive	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons to see if it unlocks. If problem persists, contact customer support.

Problem	Possible Cause	Solution
Condensation inside the watch	Temperature change or water resistance compromised.	Stop using the watch immediately and take it to an authorized service center for inspection.

SPECIFICATIONS

Brand	Fastrack
Model Name	StreetStyle 5.0
Model Number	68054PP03W
Display Type	Analog-Digital (Quartz)
Case Material	Not specified, typically resin/plastic with stainless steel back
Strap Material	PU (Polyether)
Case Size	41 mm (Diameter)
Product Dimensions	5 x 4.1 x 1.7 cm (LxWxH)
Item Weight	200 g
Water Resistance	30 Meters (WR 30M)
Batteries Included	Yes
Batteries Required	Yes
Manufacturer	Titan Company Limited
Country of Origin	India

WARRANTY AND SUPPORT

Warranty Information

Your Fastrack watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of the warranty. Keep your proof of purchase for warranty claims.

An optional 1-Year Extended Warranty Plan by Onsitego may be available for purchase. Please check with your retailer for details.

Customer Support

For any questions, service, or repair needs, please contact Fastrack customer support or visit an authorized Fastrack service center. Contact details can typically be found on the Fastrack official website or on your warranty documentation.

Manufacturer: Titan Company Limited

Address: #3, Sipcot Industrial Complex, Hosur, Tamil Nadu - 635126, India

© 2025 Fastrack. All rights reserved. Information in this manual is subject to change without notice.