

[Manuals.plus](#) /

› [Honesorn](#) /

› Honesorn Portable Rechargeable Fan (Model F26) Instruction Manual

Honesorn F26

Honesorn Portable Rechargeable Fan (Model F26) Instruction Manual

Your guide to operating and maintaining your Honesorn F26 fan.

INTRODUCTION

Thank you for choosing the Honesorn Portable Rechargeable Fan. This versatile device combines a powerful fan with an LED light and a power bank function, making it ideal for various indoor and outdoor activities. Designed for convenience and durability, it features a large capacity battery, multiple speed and light settings, and remote control operation.



The Honesorn Portable Rechargeable Fan, showcasing its integrated LED light and remote control functionality.

SETUP

Charging the Fan

Before first use, fully charge the fan. The integrated 20000mAh battery requires approximately 7-8 hours for a full recharge. Use the provided USB-C cable to connect the fan to a compatible power adapter (not included).

- Connect the USB-C cable to the fan's USB-C input port.
- Connect the other end of the cable to a USB power source (e.g., wall adapter, power bank, computer USB port).
- The battery indicator lights will show the charging progress. All lights will be solid when fully charged.



The fan's control panel showing battery indicators and USB ports for charging.

Initial Placement

The fan can be placed on a flat surface or hung using its integrated hook. Ensure stable placement to prevent tipping.



The fan can be hung from a tent ceiling or other suitable structures using its built-in hook.

Remote Control Battery

The remote control typically comes with a pre-installed battery. If the remote is unresponsive, check or replace the battery (CR2025 coin cell).

OPERATING INSTRUCTIONS

Powering On/Off and Fan Speed Adjustment

Press the power button on the fan's base or the remote control to turn the fan on. Repeatedly press the fan speed button to cycle through 4 different speed settings. The fan operates quietly, with noise levels below 30 dB.

- **Speed 1:** Gentle breeze, up to 60 hours of operation.

- **Speed 2:** Moderate breeze, up to 35 hours of operation.
- **Speed 3:** Strong breeze, up to 20 hours of operation.
- **Speed 4:** Maximum airflow (3.9 m/s), up to 16 hours of operation.

Your browser does not support the video tag. Please update your browser to view this content.

Official Honesorn video demonstrating the portable rechargeable fan's features and operation.

LED Light Operation

The fan includes an integrated LED camping lantern with 3 brightness levels. Press the light button on the fan's base or remote to adjust the brightness.

- **Level 1:** Soft ambient light (up to 140 hours).
- **Level 2:** Medium illumination (up to 80 hours).
- **Level 3:** Full tent illumination (up to 40 hours).
- **Sleep Mode:** Activates by holding the light button. This turns off all indicator lights for undisturbed sleep.

Camping Fan with Light

3 Levels Brightness



The image shows a man playing an acoustic guitar and another person sitting next to him at night. They are illuminated by the fan's light. The fan is orange and black, with a glowing LED light. The background shows a tent and a desert landscape.

Low	Medium	High
140 Hours	80 Hours	40 Hours
		

Visual representation of the three LED brightness levels available on the fan.

Oscillation and Tilt

The fan head offers 90° automatic oscillation and 270° manual tilt, allowing you to direct airflow precisely where needed.

- Press the oscillation button on the fan or remote to activate/deactivate 90° automatic oscillation.
- Manually adjust the fan head up or down for 270° vertical tilt.



The fan's adjustable head and oscillation feature for customized airflow.

Timer Function

Set the fan to automatically turn off after a specified period using the timer function.

- Press the timer button on the fan or remote to select 1, 2, 4, or 8-hour shutdown options.

4 Timer Modes

Ultra Quiet, Gentle Breeze



 <30 dB



1H



2H



4H



8H

The fan's control panel showing the timer settings and quiet operation.

Power Bank Function

The fan's 20000mAh battery can be used to charge external devices via its USB-C and USB-A output ports.

- Connect your device's charging cable to the appropriate USB-A or USB-C output port on the fan.
- The fan will automatically begin charging your device.

Sleek & Durable Design

Emergency Backup Power
Charge your device while enjoy the breeze



The fan's capability to charge external devices like smartphones.

Remote Control Usage

The remote control allows convenient operation from up to 18 feet away. It controls power, fan speed, LED light brightness, oscillation, and timer settings.

Your browser does not support the video tag. Please update your browser to view this content.

Official Honesorn video showcasing the remote control functionality of the camping fan.

MAINTENANCE

Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- For the fan blades, use a dry cloth or a soft brush to gently remove dust. Do not immerse the fan in water.

Storage

- Store the fan in a cool, dry place away from direct sunlight when not in use.
- If storing for an extended period, charge the battery to approximately 50% every 3 months to prolong battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on	Battery is depleted	Charge the fan using the USB-C cable.
Fan runs weakly	Low battery level	Recharge the fan.
LED light does not work	Light function not activated or battery low	Press the light button. If still not working, charge the fan.
Remote control not working	Remote battery depleted or obstruction	Replace the remote control battery (CR2025). Ensure no obstructions between remote and fan.
Device not charging from fan	Fan battery low or incorrect cable	Ensure the fan is sufficiently charged. Use a compatible USB charging cable for your device.

SPECIFICATIONS

Feature	Detail
Model Number	F26
Brand	Honesorn
Battery Capacity	20000mAh
Power Source	Battery Powered (USB-C Rechargeable)
Fan Speeds	4
Noise Level	<30 Decibels
Air Flow Capacity	5000 Cubic Inches Per Minute
LED Light Brightness	3 Levels

Feature	Detail
Timer Settings	1H, 2H, 4H, 8H
Oscillation	90° Automatic
Manual Tilt	270°
USB Output Ports	USB-A, USB-C (for charging external devices)
Dimensions (D x W x H)	4" x 8" x 11"
Weight	2.6 Pounds
Material	Acrylonitrile Butadiene Styrene, Plastic
Certifications	CE, FCC, RoHS

WARRANTY AND SUPPORT

Warranty Information

The Honesorn Portable Rechargeable Fan (Model F26) comes with a **2-year service warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable operation under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Honesorn customer support. You can find more information and contact details on the official Honesorn store page:

[Visit the Honesorn Store](#)

Our dedicated support team is available to assist you with any issues you may encounter.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question