



Manuals.plus /

› Yosoo /

› Yosoo Digital Alarm Clock User Manual, Model Yosoortil5pfa01

Yosoo Yosoortil5pfa01

Yosoo Digital Alarm Clock User Manual

Model: Yosoortil5pfa01

INTRODUCTION

Thank you for choosing the Yosoo Digital Alarm Clock. This device is designed to provide reliable timekeeping, dual alarm functions, a customizable timer, and versatile reminder options including vibration and music. Its compact design and backlight feature make it suitable for various uses, including as a travel alarm or for individuals with hearing impairments. Please read this manual carefully to ensure proper use and maintenance of your alarm clock.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Yosoo Digital Alarm Clock.

Front Panel Controls and Display

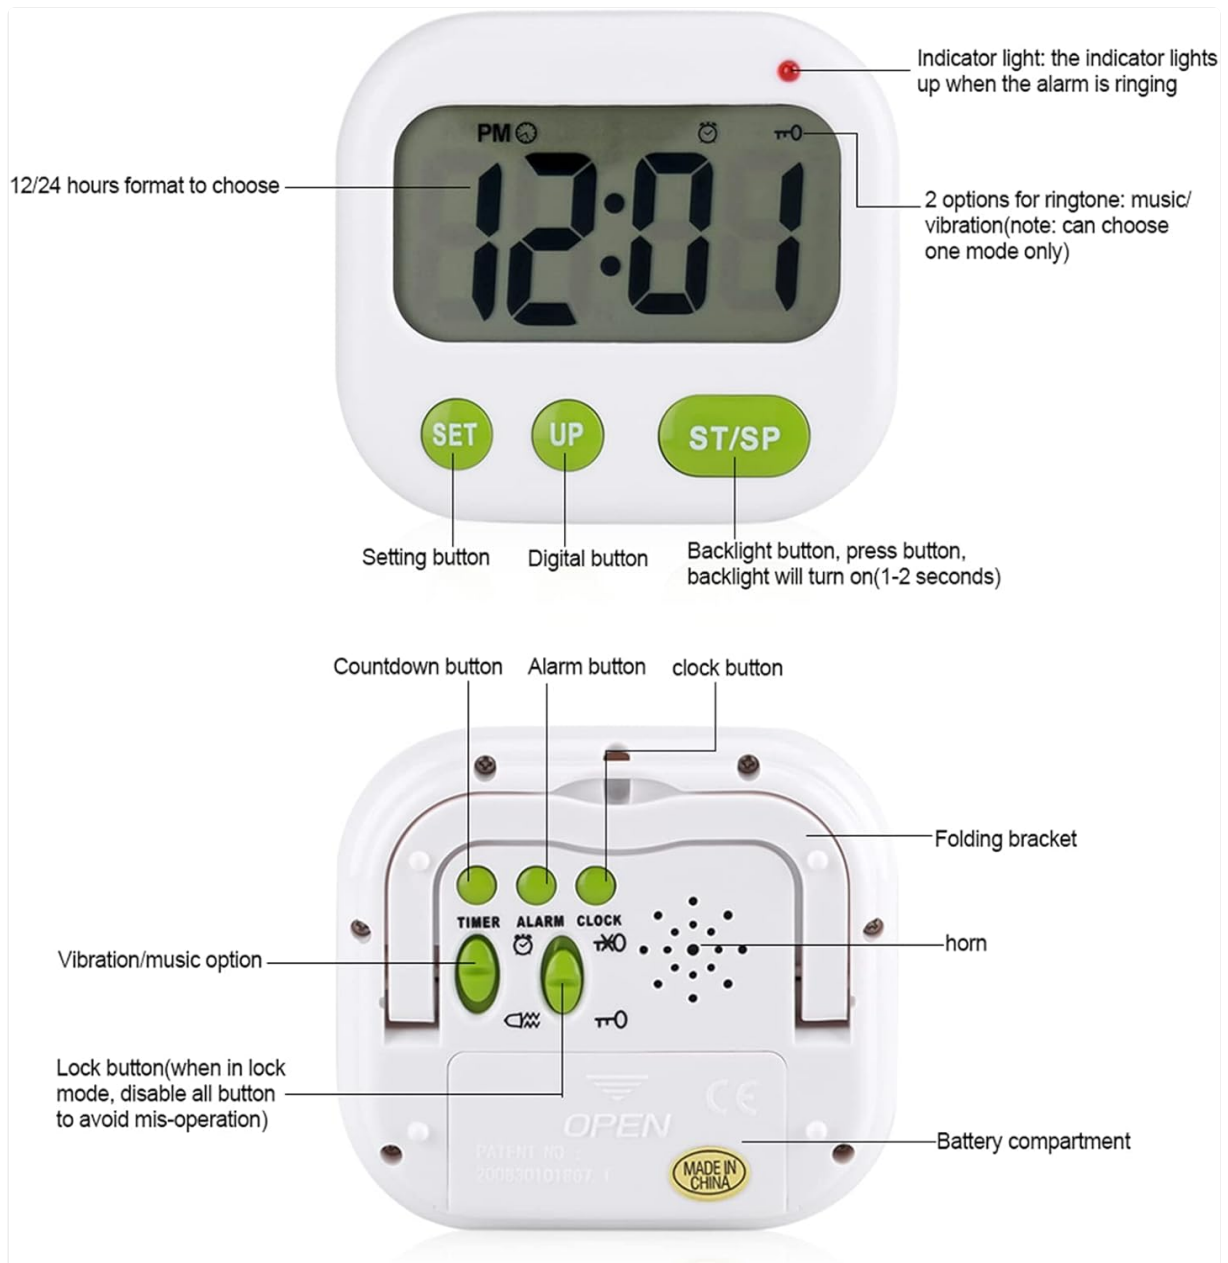


Image: Front and back view of the Yosoo Digital Alarm Clock with labeled buttons and features. The front shows the digital display, SET, UP, and ST/SP buttons. The back shows TIMER, ALARM, CLOCK mode buttons, vibration/music option switch, lock button, horn, and battery compartment.

- **Digital Display:** Shows time, alarm status, and timer information.
- **Indicator Light:** A red light illuminates when an alarm is ringing.
- **SET Button:** Used to enter setting modes for time, alarm, and timer.
- **UP Button:** Used to adjust values (increase numbers) during setting.
- **ST/SP Button:** Used to start/stop the timer or confirm settings. Also activates backlight.

Rear Panel Controls and Features



Image: Rear view of the Yosoo Digital Alarm Clock showing the control switches and battery compartment. The switches are labeled **TIMER**, **ALARM**, and **CLOCK**, along with a vibration/music option switch and a lock button.

- **Mode Switches (TIMER, ALARM, CLOCK):** Slide switches to select the desired operating mode.
- **Vibration/Music Option Switch:** Selects between vibration or music for alarm/timer alerts.
- **Lock Button:** Disables all buttons to prevent accidental operation.
- **Horn:** Speaker for music alerts.
- **Folding Bracket:** Allows the clock to stand upright.
- **Battery Compartment:** Holds 2 x AAA batteries.

SETUP

Battery Installation

1. Locate the battery compartment on the rear of the alarm clock.
2. Slide the battery compartment cover downwards to open it.



Image: Open battery compartment of the Yosoo Digital Alarm Clock, showing the two AAA battery slots with spring contacts.

3. Insert 2 new AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover by sliding it upwards until it clicks into place.

The clock will power on automatically once batteries are installed. If the display is blank, check battery orientation or replace with fresh batteries.

OPERATING INSTRUCTIONS

Setting the Time

1. Slide the rear mode switch to the **CLOCK** position.
2. Press and hold the **SET** button on the front panel until the hour digits begin to flash.
3. Press the **UP** button to adjust the hour.
4. Press the **SET** button again to move to the minute setting.
5. Press the **UP** button to adjust the minutes.
6. Press the **SET** button a third time to select 12-hour or 24-hour format. Use the **UP** button to toggle between formats.
7. Press the **SET** button one last time or wait a few seconds for the setting to be saved automatically.



Image: Close-up of the Yosoo Digital Alarm Clock's front buttons: SET, UP, and ST/SP. These buttons are used for setting time, alarms, and timer functions.

Setting Alarms (AL1 and AL2)

The clock features two independent alarms, AL1 and AL2.

1. Slide the rear mode switch to the **ALARM** position.
2. Press the **SET** button once to set AL1. The AL1 icon and hour digits will flash.
3. Use the **UP** button to adjust the AL1 hour.
4. Press **SET** again to adjust AL1 minutes using the **UP** button.
5. Press **SET** a third time to enable/disable AL1. Use **UP** to toggle.
6. Press **SET** a fourth time to set AL2. The AL2 icon and hour digits will flash.
7. Repeat steps 3-5 for AL2.
8. Press **SET** one last time or wait for the settings to be saved.

To choose between vibration or music for the alarm, use the **Vibration/Music Option Switch** on the rear panel. The alarm will sound/vibrate for 60 seconds.

Using the Timer Function

The timer can be set for up to 99 hours, 59 minutes, and 59 seconds.

1. Slide the rear mode switch to the **TIMER** position.
2. Press and hold the **SET** button until the hour digits flash.
3. Use the **UP** button to set the desired hours.
4. Press **SET** to move to minutes, then use **UP** to set minutes.
5. Press **SET** to move to seconds, then use **UP** to set seconds.
6. Press **SET** again to confirm the timer setting.
7. Press the **ST/SP** button to start the countdown.
8. Press **ST/SP** again to pause/resume the countdown.
9. When the timer reaches zero, the alarm (vibration or music, depending on the rear switch) will activate for 60 seconds.
10. To stop the alarm, press any button. To reset the timer, press **SET** while the timer is paused or after it has finished.

Backlight Function

The clock features a built-in orange backlight for easy viewing in low light conditions.



Image: Yosoo Digital Alarm Clock with its orange backlight activated, showing the time 12:02 PM. The backlight illuminates the display for 1-2 seconds.

To activate the backlight, simply press any button on the front panel (SET, UP, or ST/SP). The backlight

will illuminate for approximately 1-2 seconds and then turn off automatically to conserve battery life.

Lock Function

To prevent accidental button presses, especially when carrying the clock or placing it under a pillow, slide the **Lock Button** on the rear panel to the locked position. This will disable all front panel buttons. Slide it back to the unlocked position to resume normal operation.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the display becomes dim or functions become erratic. Always use 2 new AAA batteries.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.
- **Water Resistance:** This device is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are dead or incorrectly installed.	Replace with new AAA batteries, ensuring correct polarity.
Buttons are unresponsive.	Lock function is enabled.	Slide the Lock Button on the rear panel to the unlocked position.
Alarm does not sound/vibrate.	Alarm is not set or enabled; volume/vibration switch is off.	Ensure alarm is set and enabled (AL1/AL2 icon visible). Check the Vibration/Music Option Switch on the rear.
Time is incorrect.	Time was not set correctly or batteries were removed.	Re-set the time following the "Setting the Time" instructions.

SPECIFICATIONS

- **Model:** Yosoortil5pfa01
- **Material:** ABS
- **Color:** White
- **Backlight Color:** Orange
- **Alarm Clock:** Dual (AL1/AL2)
- **Time Display:** 12/24H format
- **Timer Function:** Up to 99 hours, 59 minutes, 59 seconds
- **Reminder Type:** Vibration or Music (selectable)
- **Alert Duration:** 60 seconds
- **Power Source:** 2 x AAA Battery (Not Included)
- **Product Dimensions:** Approx. 85 x 78 x 22mm (3.3 x 3.1 x 0.9 inches)



Image: Dimensions of the Yosoo Digital Alarm Clock: 8.5cm (3.3in) wide, 7.8cm (3.1in) high, and 2.2cm (0.9in) deep. This image provides a visual reference for the product's size.

- **Weight:** Approx. 101g (excluding batteries)
- **Display Type:** LED

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.