



Manuals.plus /

› Edillas /

› Edillas 461D Square Digital Sport Watch User Manual

Edillas 461D

Edillas 461D Square Digital Sport Watch User Manual

Model: 461D | Brand: Edillas

PRODUCT OVERVIEW

The Edillas 461D Square Digital Sport Watch is designed for durability and functionality, featuring a large 1.5-inch display for easy readability. It includes essential functions such as time, date, day of the week, alarm, and stopwatch, making it suitable for daily activities and sports. The watch is 50M water-resistant and built with a robust silicone strap and scratch-resistant resin crystal.



Front view of the Edillas 461D Square Digital Sport Watch, showcasing its large digital display and black silicone strap.

WATCH COMPONENTS AND CONTROLS

Familiarize yourself with the watch's buttons and display elements for optimal use.

164FT / 50M WATERPROOF

Note: **DO NOT** press any buttons underwater!



This diagram illustrates the various components and controls of the Edillas 461D watch, including the Mode, Light, Start, and Reset buttons, and display indicators for week, hour, minute, second, month, date, alarm, and hourly chime.

- **MODE Button:** Used to cycle through different modes (Time, Stopwatch, Alarm).
- **LIGHT Button:** Activates the EL backlight for visibility in low-light conditions.
- **START Button:** Used to start/pause functions (e.g., stopwatch) or adjust settings.
- **RESET Button:** Used to reset functions (e.g., stopwatch) or switch between setting parameters.

SETUP AND TIME SETTING

Setting the Time and Date

1. From the normal time display mode, press the **MODE** button three times to enter time setting mode. The seconds digits will flash.
2. Press the **RESET** button to advance to the next setting: hours, minutes, month, date, day of the week.
3. While a digit is flashing, press the **START** button to adjust its value.
4. To switch between 12-hour and 24-hour format, adjust the hour setting past 12 or 24.
5. Once all settings are adjusted, press the **MODE** button to exit the time setting mode.

12/24-Hour Format

The watch supports both 12-hour (AM/PM) and 24-hour (military time) formats. This can be toggled during the time

setting process by adjusting the hour past 12 or 24.



The watch display showing both 12-hour and 24-hour time formats, illustrating the flexibility in time representation.

OPERATING INSTRUCTIONS

Alarm Function

The watch features an alarm and an hourly chime. Follow these steps to set and manage the alarm:

1. Press the **MODE** button twice to enter the alarm mode.
2. Press the **START** button to toggle the alarm and hourly chime on or off. A bell icon indicates the alarm is on, and "SIG" indicates the hourly chime is active. If neither is visible, both are off.
3. To set the alarm time, press the **RESET** button. The hour digits will flash.
4. Press the **START** button to adjust the hour.
5. Press the **RESET** button to switch to minute setting, then press the **START** button to adjust the minutes.
6. After setting the minutes, press **RESET** to confirm.
7. Press the **MODE** button to exit the alarm setting mode.

Your browser does not support the video tag.

Video demonstrating how to use the alarm function on the Edillas 461D watch, including setting the alarm time and activating/deactivating the alarm and hourly chime.

Stopwatch Function

The stopwatch function allows for precise timing of activities.

1. Press the **MODE** button once to enter stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the stopwatch.
4. While paused, press the **START** button again to resume timing.
5. To use the SPL (Split) mode while the stopwatch is running, press the **RESET** button. The current timing data will be frozen and displayed, while the stopwatch continues running in the background. This is useful for recording lap times.
6. Pressing the **RESET** button again will exit SPL mode and display the current running time.
7. To reset the stopwatch, first pause it by pressing the **START** button, then press the **RESET** button to return it to its initial state (00:00:00).
8. Press the **MODE** button once to exit the stopwatch mode.

Your browser does not support the video tag.

Video demonstrating how to use the stopwatch function on the Edillas 461D watch, including starting, pausing, resuming, and resetting the timer, as well as utilizing the split (SPL) mode.

Backlight Function

The watch is equipped with an EL backlight for easy reading in dark environments.

- Press the **LIGHT** button (typically located on the top-left side) to activate the backlight.
- The backlight will illuminate the display for a few seconds, then automatically turn off.

PRODUCT DETAILS



The Edillas 461D watch display illuminated by its backlight, showing clear visibility in low-light conditions.

WATER RESISTANCE GUIDELINES

The Edillas 461D watch is rated 5ATM (50 meters) water-resistant. Please adhere to the following guidelines to maintain its water resistance:

- Suitable for daily water resistance such as splashes, rain, and shallow-water swimming.
- Suitable for cold showers.
- **DO NOT** press any buttons while the watch is submerged in water.
- Avoid exposure to hot water, steam, or high temperatures (e.g., hot showers, saunas, hot tubs) as this can compromise the seals.
- Not suitable for diving, snorkeling, or high-speed water sports.

LIGHT BUTTON

Press the "LIGHT" button to activate the watch backlight.



Normal Mode



Backlight Mode



The Edillas 461D watch partially submerged in water, illustrating its 50M water resistance for activities like swimming.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery:** The watch uses a CR2025 battery. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.
- **Strap Care:** The silicone strap can be cleaned with mild soap and water. Ensure it is completely dry before wearing.
- **Protective Film:** The watch comes with a high-definition, scratch-resistant protective film that does not need to be removed.

High-Definition Scratch-Resistant

The product comes with a protective film that does not need to be removed.



A close-up view of the Edillas 461D watch face, highlighting its high-definition, scratch-resistant protective film.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the CR2025 battery.
Time is incorrect.	Time not set correctly or accidental button press.	Re-set the time and date following the "Setup and Time Setting" instructions.
Alarm does not sound.	Alarm is turned off or set incorrectly.	Ensure the alarm is activated (bell icon visible) and the time is set correctly in alarm mode.
Water inside the watch.	Buttons pressed underwater or exposure to hot water/steam.	Immediately take the watch to a professional for inspection and repair. Avoid further water exposure.

SPECIFICATIONS

Feature	Detail
Model Number	461D
Display Type	Digital
Case Material	ABS (with Stainless Steel Case Back)
Band Material	Silicone
Water Resistance Depth	50 Meters (5ATM)
Case Diameter	1.5 Inches (approx. 3.81 cm)
Case Thickness	0.47 Inches (approx. 1.2 cm)
Band Length	9.45 Inches (approx. 24 cm)
Band Width	0.86 Inches (approx. 2.2 cm)
Item Weight	0.07 Kilograms (approx. 40g)
Battery Type	1 C battery (CR2025 included)
Additional Features	Alarm, Stopwatch, EL Backlight, Date, Day, 12/24-hour format



A detailed diagram illustrating the dimensions (case diameter, thickness, band length, band width) and weight of the Edillas 461D watch.

WARRANTY AND SUPPORT

The Edillas 461D watch comes with a Lifetime Warranty. For any inquiries, missing parts, or issues, please contact customer support.

- **Warranty:** Lifetime Warranty.
- **After-Sales Service:** 2-year after-sales support.
- **Returns:** 30-day no-reason return policy.
- **Customer Service:** 12-hour online customer service.
- **Contact Email:** yadelaiaftersale@163.com

BUYER-SUPPORT



Thank you for your purchase

If for any reason there is something missing,
incorrect or different from what you expected,
Please reach out to us.

✓ **2-YEAR**
after-sales

✓ **30-Days**
no reason return

✓ **12-HOUR**
online customer services

Contact Us: yadelaiaftersale@163.com

Image detailing buyer support information, including warranty, return policy, and contact email for Edillas products.