

[Manuals.plus](#) /

> [INFANS](#) /

> INFANS 6-in-1 Kids Tricycle Instruction Manual (Model B0CS5R4B7Y)

INFANS B0CS5R4B7Y

INFANS 6-in-1 Kids Tricycle Instruction Manual

Model: B0CS5R4B7Y

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your INFANS 6-in-1 Kids Tricycle. Please read these instructions thoroughly before initial use and retain for future reference. Proper assembly and use are crucial for your child's safety and the product's longevity.

Important Safety Information

- Always supervise children when using the tricycle.
- Ensure all parts are securely fastened and locked before each use.
- Do not exceed the recommended age range of 9 months to 5 years or the maximum weight capacity.
- Keep children away from moving parts during adjustments.
- Avoid using the tricycle on uneven terrain, near stairs, or in traffic.

WHAT'S IN THE BOX

Verify that all components listed below are present before beginning assembly:

- Tricycle Main Frame
- Front Wheel Assembly with Pedals
- Rear Wheel Assemblies (2)
- Handlebar
- Seat with 5-Point Harness
- Detachable Guardrail
- Removable Canopy
- Adjustable Push Handle
- Storage Basket
- Cup Holder
- Instruction Manual

- Assembly Tools (if included)



Figure 1: Exploded view of tricycle components, including frame, wheels, seat, canopy, and accessories.

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your INFANS 6-in-1 Kids Tricycle. For a visual guide, please refer to the assembly video below.

Video 1: Detailed assembly guide for the INFANS 6-in-1 Kids Tricycle, demonstrating each step from unboxing to final setup.

Step 1: Attach Rear Wheels

Insert the rear wheel axles into the designated slots on the main frame until they click into place. Ensure both wheels are firmly secured and rotate freely.



Figure 2: Illustration of attaching the rear wheels to the tricycle's main frame.

Step 2: Install Front Wheel and Pedals

Slide the front wheel assembly into the front fork of the tricycle. Secure it with the provided fasteners. Attach the pedals to the front wheel crank arms, ensuring they are tightly screwed in. The front wheel features a foot switch to engage or disengage the pedals for different modes.



Figure 3: Close-up of the front wheel assembly, showing the lockable pedal and front wheel clutch mechanism.

Step 3: Attach Handlebars

Insert the handlebar stem into the front fork tube. Align the holes and secure with the provided bolt and nut. Ensure the handlebars are straight and firmly attached.



Figure 4: Image showing the attachment of the handlebars to the tricycle frame.

Step 4: Install Seat and Safety Bar

Place the cushioned seat onto the tricycle frame. Secure it using the adjustment knob underneath the seat. Attach the detachable sponge guardrail to the sides of the seat. Ensure the 5-point harness is properly threaded and accessible.

Convertible Seat

Face Outside



Face Inside



Figure 5: Demonstrates the installation of the convertible seat and the safety guardrail.

Step 5: Attach Canopy and Accessories

Mount the removable canopy to the seat back. Attach the storage basket to the rear of the tricycle and the cup holder to the push handle. Ensure all accessories are securely fitted.

Intimate Details



Figure 6: Shows the final assembly with the canopy, storage basket, and cup holder in place.

MODES AND ADJUSTMENTS

6-in-1 Convertible Design

The INFANS Kids Tricycle is designed to adapt to your child's growth, offering multiple configurations:

- **Push Stroller:** For infants, with parent control and safety features engaged.
- **Rear-Facing Stroller:** Allows the child to face the parent for interaction.
- **Steering Tricycle:** Child can steer while parent pushes.
- **Learn-to-Ride Trike:** Pedals engaged, child learns to pedal independently.
- Additional modes may include variations with or without canopy, guardrail, or push handle.



Figure 7: Visual representation of the various convertible modes, including baby stroller, rear-facing stroller, push trike, independent trike, and training bike.

Adjustable Heights & Angles

- **Detachable Push Handle:** Can be adjusted to 2 different heights (41" and 43") to suit the parent's comfort.
- **Reversible Seat:** The seat can be adjusted forwards, backwards, and rotated to a rear-facing position for direct interaction with the child.
- **Retractable Footrest:** Provides a comfortable resting place for the child's feet when in stroller mode, preventing feet from dragging.

Adjustable Canopy & Push Handle



Figure 8: Demonstrates the adjustable height feature of the push handle.

Convertible Seat

Face Outside



Face Inside



Figure 9: Illustrates the convertible seat's ability to face outside or inside, and its 360-degree rotation.

SAFETY FEATURES

The INFANS Kids Tricycle prioritizes your child's safety with the following features:

- **Detachable Sponge Guardrail:** A padded guardrail surrounds the child, providing a protective barrier.
- **Adjustable Widen 5-Point Harness:** A secure harness system with 3 adjustable positions to prevent accidental slips and ensure the child is safely restrained.
- **One-Step Double Brake:** Located on the rear wheels, this brake system allows for quick and secure stopping, preventing unintended movement.

Safety Design



✓ Ours

Widen 5-point Harness

3 Adjustable Positions



✗ Others

3-point Harness

Can Not Adjust

Figure 10: Detailed view of the safety design, highlighting the widen 5-point harness and detachable guardrail.

STORAGE AND CONVENIENCE

Designed with parents in mind, the tricycle includes several convenient features:

- **Removable Canopy:** Provides shade and protection from the elements. Features a peek-a-boo window for parents to easily monitor their child.
- **Cushioned Seat and High Back:** Ensures optimal comfort for the child during rides.
- **Large Bottom Storage Basket:** Ideal for carrying toys, snacks, or other baby essentials.
- **Bottle Holder and Pouch:** Conveniently located for drinks and small items.

Intimate Details



Figure 11: Overview of intimate details including storage options and canopy features.

OPERATING INSTRUCTIONS

Parent Control Function

The tricycle is equipped with a flexible push handle that allows parents to control the direction of the tricycle. This feature ensures that the child stays on the intended path and provides full control over the tricycle's movements.



Figure 12: Parent actively steering the tricycle using the push handle.

Engaging/Disengaging Pedals and Footrest

For younger children who cannot yet pedal, ensure the foot switch on the front wheel is disengaged, allowing the pedals to spin freely without affecting the wheel, or utilize the retractable footrest. As the child grows and is ready to pedal independently, engage the foot switch to activate the pedals.



Figure 13: Details of the pedal and footrest mechanisms.

MAINTENANCE

- **Regular Checks:** Periodically inspect all screws, bolts, and fasteners to ensure they are tight. Tighten any loose connections immediately.
- **Cleaning:** Clean fabric components (seat, canopy) with a mild soap and water solution. Wipe down metal and plastic parts with a damp cloth. Avoid harsh chemicals.
- **Wheel Inspection:** Check wheels and moving parts for any signs of wear, damage, or debris. Ensure smooth rotation.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

TROUBLESHOOTING

Steering Issues

If the parent push handle is not effectively steering the front wheel, check the connection mechanism between the handle and the front fork. Ensure it is fully engaged and all locking pins or screws are secure. Excessive play may indicate a loose connection.

Pedals Not Engaging/Disengaging

If the pedals are not responding correctly, verify the position of the front wheel's foot switch. Ensure it is fully pushed in or pulled out to engage or disengage the pedal function as desired. Check for any obstructions around the pedal mechanism.

SPECIFICATIONS

Product Dimensions	37 x 19.5 x 43 inches
Item Weight	20 pounds
Recommended Age	9 months - 5 years
Materials	Iron, EVA, TPR



Figure 14: Product dimensions and weight capacity details.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical support, please refer to the

documentation included with your purchase or visit the official INFANS website. Keep your proof of purchase for any warranty claims.