

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VINGLI](#) /

› [VINGLI 58-inch Fluted TV Stand \(Model VL-G52009406\) Instruction Manual](#)

### VINGLI VL-G52009406

# VINGLI 58-inch Fluted TV Stand Instruction Manual

Model: VL-G52009406

## INTRODUCTION

---

Thank you for choosing the VINGLI 58-inch Fluted TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new media console. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: Front view of the VINGLI 58-inch Fluted TV Stand, showcasing its walnut finish and fluted cabinet doors.

## SAFETY INFORMATION

To ensure safe use of this product, please observe the following precautions:

- Always assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of the stand or its shelves. Refer to the Specifications section for details.
- To prevent tipping, especially with children or pets present, consider securing the TV stand to a wall using an anti-tip kit (not included, but recommended).
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Do not stand or climb on the unit.

## PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
A	Top Panel	1
B	Bottom Panel	1
C	Side Panels	2
D	Middle Vertical Panels	2
E	Fixed Shelf	1
F	Adjustable Shelves	2
G	Cabinet Doors (Fluted)	2
H	Back Panels	2
I	Hardware Pack (Screws, Dowels, Hinges, Handles, Shelf Pins, etc.)	1
J	Legs	4

*Note: The exact quantity and type of hardware may vary slightly. Refer to the detailed parts list included in your product packaging.*

## SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Please follow the step-by-step instructions provided in the separate assembly guide included in your package. The following is a general overview:

- 1. Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to the product.
- 2. Identify Parts:** Unpack all components and hardware. Match them with the parts list and diagrams in your assembly guide. Each part is typically labeled.
- 3. Assemble the Base:** Attach the legs (J) to the bottom panel (B) using the provided hardware. Ensure they are securely tightened.
- 4. Construct the Frame:** Connect the side panels (C) and middle vertical panels (D) to the bottom panel (B) using dowels and screws.
- 5. Install Shelves:** Insert the fixed shelf (E) into its designated slots. For adjustable shelves (F), insert shelf pins into the desired height holes before placing the shelves.
- 6. Attach Top Panel:** Secure the top panel (A) to the assembled frame.
- 7. Install Back Panels:** Fasten the back panels (H) to the rear of the unit.
- 8. Attach Doors:** Mount the hinges to the cabinet doors (G) and then attach the doors to the side panels. Adjust hinges for proper alignment.
- 9. Install Handles:** Attach the handles to the cabinet doors.
- 10. Final Check:** Ensure all connections are tight and the stand is stable.

# Product Dimensions



Image: Diagram illustrating the dimensions of the TV stand (58" L x 15" W x 27.2" H) and its compatibility with TVs up to 70 inches.



# Smart Function

3-position Adjustable Shelf  
for Flexible Storage

Image: Detail showing the 3-position adjustable shelf feature, allowing for flexible storage configurations.

## OPERATING INSTRUCTIONS

The VINGLI Fluted TV Stand is designed for versatile storage and display.

- **Adjustable Shelves:** The shelves within the cabinet sections can be adjusted to three different height positions. To adjust, remove the shelf, reposition the shelf pins to the desired holes, and then place the shelf back onto the pins.
- **Cabinet Doors:** The fluted cabinet doors open and close smoothly, providing concealed storage for media accessories, books, or other items.
- **Cable Management:** Utilize any pre-drilled holes in the back panels for organized cable routing to keep your entertainment area tidy.

# Ample Storage Space



Image: An interior view highlighting the ample storage space, including fixed and adjustable shelves, and the spacious desktop surface.

## MAINTENANCE

Proper care will extend the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as needed to maintain stability.

## TROUBLESHOOTING

If you encounter issues during or after assembly, refer to these common solutions:

- **Wobbly Stand:**

- Ensure all screws, especially those connecting the legs and main panels, are fully tightened.
- Check that the stand is on a level surface. Adjust floor glides if present, or place shims under the legs if necessary.

- **Parts Not Fitting:**

- Double-check the assembly diagrams in your specific instruction manual to ensure you are using the correct parts and orientation for each step.
- Do not force parts together. If a part does not fit, re-examine the previous steps.

- **Cabinet Doors Misaligned:**

- Adjust the hinges on the cabinet doors. Most hinges allow for minor adjustments (up/down, left/right, in/out) using a screwdriver.
- Ensure the hinges are securely attached to both the door and the main frame.

- **Sagging Shelf/Top:**

- Verify that the weight placed on the shelf or top does not exceed the specified weight capacity.
- Ensure all support screws and connections are fully tightened.

If problems persist, contact VINGLI customer support for assistance.

## SPECIFICATIONS

Feature	Detail
Model Number	VL-G52009406
Material	Engineered Wood with Walnut Finish
Product Dimensions (L x W x H)	58 x 15 x 27.2 inches
Item Weight	63.9 pounds
Color	Walnut
TV Size Compatibility	Up to 70 inches
Shelf Type	Adjustable and Fixed
Style	Modern

## WARRANTY INFORMATION

VINGLI products typically come with a limited manufacturer's warranty covering defects in materials and workmanship. Please refer to the warranty card included with your product or visit the official VINGLI website for specific terms and conditions, including warranty duration and claim procedures.

## CUSTOMER SUPPORT

For assistance with assembly, missing parts, or any other inquiries regarding your VINGLI Fluted TV Stand, please contact VINGLI customer support.

**Contact Information:**

- Refer to the contact details provided in your product packaging.
- Visit the official VINGLI website for support options and FAQs: [VINGLI Store on Amazon](#)

