

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Jumbao](#) /

> [Jumbao G6 Keychain Digital Camera User Manual](#)

Jumbao G6

Jumbao G6 Keychain Digital Camera User Manual

Model: G6 | Brand: Jumbao

1. INTRODUCTION AND OVERVIEW

The Jumbao G6 Keychain Digital Camera is a compact and portable device designed for capturing photos and videos with ease. Its mini size and retro film simulation style make it a unique accessory for beginners, teens, and adults. This manual provides detailed instructions to help you get the most out of your camera.



Image: The Jumbao G6 Keychain Digital Camera, a compact device with a small screen, held in a user's hand.

Video: An unboxing of the G6 Thumb Camera in white, showcasing its compact size and included accessories.

2. PACKAGE CONTENTS

Upon opening your Jumbao G6 package, you should find the following items:

- 1 x Jumbao G6 Keychain Digital Camera
- 1 x USB-C Charging Cable
- 1 x Keychain attachment
- 1 x Neck Strap
- 1 x User Manual (this document)

Wearable Keychain Recorder

Stylish keychain that discreetly records anywhere.



G6 THUMB CAMERA
Record Anytime Anywhere



Image: The Jumbao G6 camera shown with its keychain and neck strap, highlighting its wearable design.

3. PRODUCT FEATURES

- **Photo and Video Capture:** Supports both still image capture and 1080P video recording.
- **High-Resolution Output:** 1440 x 1080 image output with 1.6M megapixels.
- **Creative Filters:** Features 4 frames and 7 filters for unique photo effects.
- **Expandable Storage:** Compatible with 1GB to 128GB TF memory cards (not included).
- **Rechargeable Battery:** Built-in rechargeable Lithium Polymer battery (7 grams).

- **Compact Design:** Lightweight (30g) and small form factor, ideal for portability.
- **Wide Angle Lens:** 130-degree real angle of view for expansive shots.
- **0.96-inch LCD Screen:** Small color display for preview and navigation.
- **USB-C Connectivity:** For charging and data transfer.



Image: A collection of Jumbao G6 cameras in different colors, emphasizing their small size and key technical features.

4. SETUP

4.1. Charging the Camera

Before first use, fully charge your Jumbao G6 camera. Connect the provided USB-C cable to the camera's USB-C port and the other end to a power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show the charging status.

More Product Details



Image: A detailed view of the camera's side, showing the USB-C port for charging and data transfer, and the microSD card slot.

4.2. Inserting a Memory Card

The Jumbao G6 requires a TF (microSD) memory card (1GB-128GB) to store photos and videos. The memory card is not included in the package.

1. Locate the microSD card slot on the side of the camera.
2. Gently insert the TF card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, gently push the card inward until it springs out.

4.3. Setting Date and Time

To ensure your photos and videos have the correct timestamp, set the date and time:

1. Connect the camera to your computer using the USB-C cable.
2. The camera display should show a menu with "Storage mode" and "Camera". Select "Storage mode".
3. On your computer, navigate to the camera's storage. Look for a folder or file related to time setting (e.g., "update_time" or "timeset.txt").
4. Follow the instructions within the file (if any) or use a provided utility to synchronize the camera's time with your computer's.
5. Once updated, safely eject the camera from your computer and disconnect the cable.
6. Turn the camera off and then on again to apply the new settings.


Video: Demonstration of how to set the date and time on a mini digital camera, which may be applicable to the Jumbao G6 model.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

To turn on the camera, long press the power button located on the top. To turn off, long press the power button again.

5.2. Switching Between Photo and Video Modes

The camera defaults to photo mode upon startup. To switch to video mode, press the UP button located on the side. Long press the UP button to return to camera mode.


Video: A demonstration of the mini camera's basic operations, including power on/off and mode switching.

5.3. Applying Filters and Frames

In photo mode, press the DOWN button to cycle through the available 4 frames and 7 filters. The effect will be displayed on the 0.96-inch LCD screen.

5.4. Viewing and Deleting Photos/Videos

To view your captured media, ensure you are in camera mode. Press the UP button twice to enter the viewing mode. Use the UP/DOWN buttons to navigate through your photos and videos. To delete a file, long press the DOWN button while viewing the desired item, then select "Delete" and "Confirm" using the power button.

5.5. Using as a Webcam

The Jumbao G6 can function as a webcam. To activate this mode, connect the camera to your computer via the USB-C cable **without a TF memory card inserted**. The camera should automatically enter PC Camera mode, allowing it to be recognized as a webcam by your computer's software.



Video: A short clip demonstrating the Jumbao G6 camera being used as a webcam when connected to a laptop.

6. SPECIFICATIONS

Feature	Detail
Model Name	G6
Photo Sensor Resolution	1.6 MP
Video Resolution	1080p
Frame Rate	30 FPS
Screen Size	0.96 Inches
Real Angle Of View	130 Degrees
Lens Type	Wide Angle
Aperture Modes	F2.8
Supported File Format	JPEG (Image), MP4 (Video)
Memory Card Compatibility	1GB - 128GB TF (microSD) card
Battery Type	Lithium Polymer (Rechargeable)
Connectivity Technology	USB-C
Water Resistance Level	Not Water Resistant
Form Factor	Compact

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or solvents.
- **Lens Care:** Keep the lens clean and free from dust or fingerprints. Use a lens cleaning cloth if necessary.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** This camera is **not water resistant**. Avoid exposure to water or high humidity.

8. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **"No Card" message:** Insert a compatible TF (microSD) card. Ensure it is properly inserted and not damaged.
- **Date/Time is incorrect:** Follow the "Setting Date and Time" instructions in Section 4.3.
- **Cannot transfer files to computer:** Ensure the USB-C cable is functioning and properly connected. Select "Storage mode" on the camera when prompted.
- **Poor image/video quality:** Ensure the lens is clean. Check lighting conditions. The camera performs best in well-lit environments.
- **Camera unresponsive:** Use a thin object (like a paperclip) to gently press the reset button (usually a small pinhole) on the camera.

9. WARRANTY AND SUPPORT

The Jumbao G6 Keychain Digital Camera comes with a one-year warranty. If you encounter any issues or have questions not covered in this manual, please feel free to contact us through the "Contact Seller" option in your order history on Amazon. Our support team will be happy to assist you.